

BLACK+DECKER 63091

BLACK+DECKER Heated 3-Tier Clothes Dryer with Cover and Wheels

Model: 63091

Brand: BLACK+DECKER

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the BLACK+DECKER Heated 3-Tier Clothes Dryer. This manual provides essential instructions for safe assembly, operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before use and retain it for future reference.

Important Safety Instructions:

- Always ensure the product is placed on a stable, level surface.
- Do not overload the dryer. The maximum weight capacity is 15 kg.
- Keep the appliance away from water and other liquids. Do not use in bathrooms or wet environments.
- Do not cover the heating elements with non-breathable materials.
- Unplug the dryer from the power outlet when not in use or before cleaning.
- Do not allow children to operate or play with the dryer.
- Regularly inspect the power cord and plug for damage. Do not use if damaged.
- This appliance is for indoor household use only.

2. PRODUCT COMPONENTS

Before assembly, ensure all components are present and undamaged. Refer to the diagram below for identification.







Figure 2.1: Fully assembled dryer without the cover, showing the three tiers of drying racks and the frame structure.

1. Main Frame (Aluminum poles and connectors)
2. Drying Racks (3 tiers, foldable)
3. Protective Cover (Grey fabric with zipper)
4. Wheels (4 castor wheels for mobility)
5. Power Cord and Plug
6. On/Off Power Switch

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your heated clothes dryer:

1. **Assemble the Main Frame:** Connect the aluminum poles using the provided connectors to form the vertical and horizontal supports. Ensure all connections are secure.
2. **Attach the Wheels:** Screw the four castor wheels into the designated holes at the bottom of the dryer's feet. Ensure they are firmly attached for stability and mobility.



Figure 3.1: Detail of the dryer's base with wheels installed.

3. **Install Drying Racks:** Attach the three tiers of drying racks to the main frame. These racks are designed to fold, so ensure they are correctly oriented for proper function.
4. **Fit the Protective Cover:** Carefully place the grey protective cover over the assembled frame. Zip up the cover to enclose the drying racks. The cover helps to retain heat and accelerate the drying process.



Figure 3.2: The dryer fully assembled with its protective cover in place.

4. OPERATING INSTRUCTIONS

1. **Prepare Laundry:** Wring out excess water from your laundry before placing it on the dryer.
2. **Load Laundry:** Distribute laundry evenly across the three drying tiers. Avoid overcrowding to allow for proper air circulation and efficient drying. The dryer can hold up to 15 kg of laundry.



Figure 4.1: A user loading clothes onto the drying racks.

3. **Close the Cover:** For optimal drying efficiency, ensure the protective cover is fully zipped up once laundry is loaded. This traps the warm air, speeding up the drying process.
4. **Power On:** Plug the dryer into a suitable electrical outlet. Locate the On/Off power switch, typically found on one of the vertical poles, and switch it to the 'On' position. An indicator light may illuminate.



Figure 4.2: Detail of the power switch on the dryer's frame.

5. **Drying Time:** Drying times will vary depending on the type of fabric, load size, and moisture content. Periodically check the laundry for dryness.
6. **Power Off:** Once laundry is dry, switch the power button to the 'Off' position and unplug the dryer from the wall outlet.

5. CARE AND MAINTENANCE

- **Cleaning the Frame and Racks:** Ensure the dryer is unplugged and cool before cleaning. Wipe the aluminum frame and drying racks with a damp cloth and mild detergent. Dry thoroughly.

- **Cleaning the Cover:** The fabric cover can be wiped clean with a damp cloth. Do not machine wash or tumble dry the cover.
- **Avoid Abrasives:** Do not use abrasive cleaners, scourers, or chemical solvents, as these can damage the surfaces.
- **Regular Inspection:** Periodically check all connections and components for wear or damage.

6. STORAGE

The BLACK+DECKER Heated 3-Tier Clothes Dryer is designed for compact storage.

1. Ensure the dryer is unplugged and completely cool.
2. Remove any laundry and the protective cover.
3. Fold down the drying racks.
4. Collapse the main frame as designed. The unit folds flat for easy storage in a closet or against a wall.





Figure 6.1: The dryer in its folded, compact storage position without the cover.

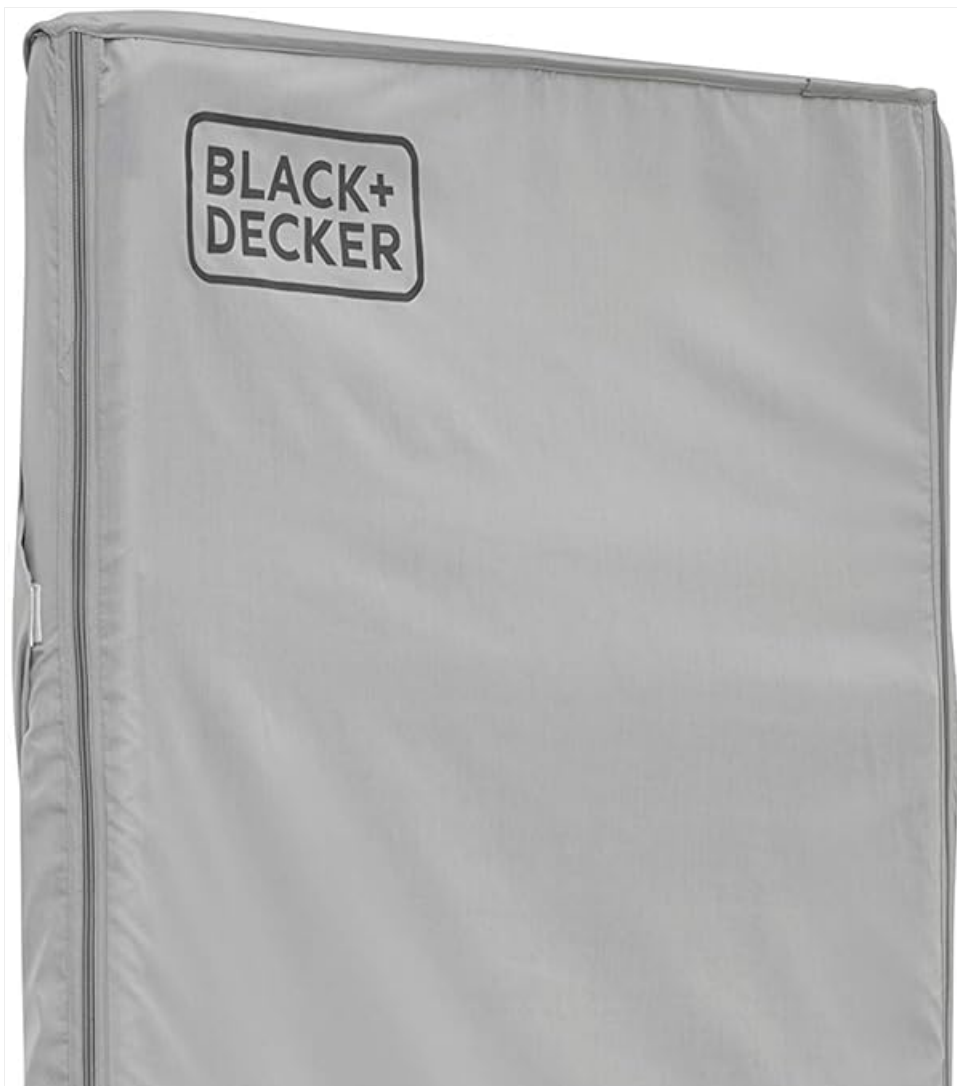




Figure 6.2: The dryer in its folded, compact storage position with the cover on.

5. Store in a dry, cool place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not heat.	Not plugged in; power switch off; power outage; faulty outlet.	Ensure plug is fully inserted. Turn power switch on. Check household circuit breaker. Try a different outlet.
Laundry dries too slowly.	Overloaded; cover not fully closed; laundry too wet; poor air circulation.	Reduce load size. Ensure cover is zipped. Wring out laundry thoroughly. Redistribute clothes for better airflow.
Dryer is unstable.	Uneven surface; wheels not securely attached; frame not fully assembled.	Place on a flat, level surface. Tighten all wheel screws. Verify all frame connections are secure.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Number	63091
Dimensions (L x W x H)	68 x 73 x 140 cm
Weight Capacity	15 Kilograms
Material	Aluminum
Drying Space	21 meters (across 3 tiers)
Color	Grey
Special Feature	Heated
Item Weight	6 Kilograms

9. WARRANTY AND CUSTOMER SUPPORT

Warranty information for your BLACK+DECKER Heated 3-Tier Clothes Dryer is typically included with your purchase documentation. Please refer to these documents for details regarding warranty coverage and terms.

For technical assistance, spare parts, or any product-related inquiries, please contact BLACK+DECKER customer support. Contact details can usually be found on the official BLACK+DECKER website or on your product packaging.

When contacting support, please have your model number (63091) and purchase date available.