



Manuals.plus /

› KEMEI /

› Kemei KM-1015 Professional Grooming Kit User Manual

KEMEI KM-1015

Kemei KM-1015 Professional Grooming Kit

User Manual

Model: KM-1015 | Brand: KEMEI

1. IMPORTANT SAFETY INFORMATION

Always unplug the trimmer before cleaning or replacing parts. Keep it away from water sources. Do not use on infants or children. Always keep the blade guard on while in use. Be cautious when trimming near the ears and neck. Always follow the manufacturer's instructions for proper use and maintenance.

Warning: To reduce the risk of electric shock, do not reach for an appliance that has fallen into water. Unplug immediately. Do not use while bathing or in a shower. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

2. PRODUCT OVERVIEW

The Kemei KM-1015 Professional Grooming Kit is a versatile 10-in-1 wet and dry grooming solution designed for men. It features a sharp carbon steel blade for precise trimming and styling, an R-shaped design for safety, and a low-noise motor for comfortable use. This kit includes multiple attachments to cater to various grooming needs.

Kit Components



Image 1: The Kemei KM-1015 main trimmer unit shown with its various detachable heads and guide combs, including a precision trimmer, nose trimmer, shaver, and different length combs.

- Main Trimmer Unit
- Precision Trimmer Head
- Nose/Ear Trimmer Head
- Shaver Head
- Hair Clipper Head
- Various Guide Combs (e.g., 3mm, 6mm, 9mm, 12mm)
- Cleaning Brush
- Charging Cable/Adapter
- Lubricating Oil

3. SETUP AND CHARGING

Initial Charging

Before first use, fully charge the grooming kit for approximately 8-12 hours.

1. Ensure the trimmer is switched off.
2. Connect the charging cable to the trimmer's charging port.
3. Plug the adapter into a suitable power outlet.
4. The charging indicator light will illuminate (if present) to show it is charging.
5. Once fully charged, disconnect the charger.



Image 2: The Kemei KM-1015 grooming kit, possibly in a rose gold color, displayed on a charging and storage stand with various attachments organized.

Attaching/Detaching Heads and Combs

- To attach a head: Align the desired head with the main unit and push gently until it clicks into place.
- To detach a head: Hold the main unit firmly and gently pull the head upwards or press the release button (if available).
- To attach a guide comb: Slide the comb onto the trimmer head until it locks securely.
- To detach a guide comb: Gently pull the comb off the trimmer head.

4. OPERATING INSTRUCTIONS

Ensure the trimmer is fully charged before use. Select the appropriate head and guide comb for your desired grooming task.

General Trimming Tips

- Always start with a longer guide comb setting if you are unsure of the desired length.
- Move the trimmer against the direction of hair growth for best results.
- Use slow, controlled movements.
- For wet use, ensure the trimmer is designed for it and follow all safety precautions.

Using Specific Attachments

- **Hair Clipper Head:** Attach the desired guide comb. Start trimming from the bottom of the head upwards, or from the top downwards, depending on the desired style.
- **Precision Trimmer Head:** Ideal for detailing, creating sharp lines, and trimming edges around the beard, mustache, and sideburns.
- **Nose/Ear Trimmer Head:** Gently insert the trimmer tip into the nostril or ear canal. Move in a circular motion to trim unwanted hair. Do not insert too deeply.
- **Shaver Head:** Use for a close shave on smaller areas or for finishing touches after trimming. Hold the shaver flat against the skin and move in short, gentle strokes.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your grooming kit.

1. **Turn Off and Unplug:** Always ensure the trimmer is switched off and unplugged from the power source before cleaning.
2. **Remove Hair:** Detach the trimmer head and use the provided cleaning brush to brush away any loose hairs from the blades and inside the trimmer unit.
3. **Rinse Blades (if applicable):** If the trimmer head is washable, rinse it under running water. *Do not rinse the main unit unless explicitly stated as fully waterproof.*
4. **Dry Thoroughly:** Allow all parts to air dry completely before reassembling or storing.
5. **Oil Blades:** Apply a small drop of lubricating oil (provided) to the blades after every few uses, or if the trimmer feels sluggish. Turn the trimmer on for a few seconds to distribute the oil. Wipe off any excess oil.
6. **Storage:** Store the grooming kit and its accessories in a dry, safe place, away from children.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer runs slowly or pulls hair.	Blades are dirty or not oiled.	Clean the blades and apply lubricating oil.
Attachments do not fit securely.	Incorrect attachment or improper alignment.	Ensure the correct head is selected and aligned properly before pushing to click into place.
Excessive noise during operation.	Blades may need oiling or cleaning.	Clean and oil the blades. If noise persists, contact customer support.

7. SPECIFICATIONS

- **Model Number:** KM-1015
- **Brand:** KEMEI
- **Targeted Group:** Men
- **Number of Heads:** 4 (implied by 10-in-1 kit, typically main trimmer + 3 specialized heads)
- **Number of Speed Settings:** 1
- **Power Source:** Plug-in Electric (Rechargeable)
- **Blade Material:** Mixed Materials (Carbon Steel)

- **Item Weight:** 0.6 Kilograms
- **Country of Origin:** China
- **Recommended Uses:** Head (and other body parts for grooming)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact KEMEI customer service directly. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms and conditions may vary by region and retailer.

