

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tefal](#) /

› [Tefal ProStyle Garment Steamer IT3420E0 Instruction Manual](#)

Tefal IT3420E0

Tefal ProStyle Garment Steamer IT3420E0 Instruction Manual

Model: IT3420E0

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tefal ProStyle Garment Steamer, model IT3420E0. Please read these instructions carefully before first use and keep them for future reference. This appliance is designed to remove wrinkles and refresh various fabrics using steam.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not leave the appliance unattended while it is connected to the mains supply.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Exercise caution when handling the steam head, as hot steam is emitted. Avoid directing steam towards people or pets.
- Only use the appliance with clean tap water. Do not add perfumes, vinegar, starch, descaling agents, or other chemicals to the water tank.
- Unplug the appliance from the power outlet before filling or emptying the water tank, and before cleaning or maintenance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PRODUCT OVERVIEW

The Tefal ProStyle Garment Steamer IT3420E0 is designed for efficient garment care. Key components include the main unit (base), adjustable pole, integrated hanger, steam hose, and steam head.





Figure 3.1: Fully assembled Tefal ProStyle Garment Steamer IT3420E0.

Pro Style



لجميع أنواع الملابس

IT3420



1700
WATTS

١٧٠٠ واط



رأس معدن أكبر
لإزالة التجاعيد



تبخير سريع الأستخدام
خلال ٤٥ ثانية



٣ مستويات للبخار
لجميع أنواع القماش




بخار بقوة ٣٠ ج / دقيقة
لتعقيم الملابس



إزالة الترسبات



خزان مياه ١.٥ لتر

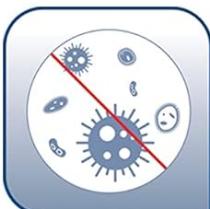

قتل ٩٩.٩
من الجراثيم

الملحقات



خطاف شماعات



فرشاة قماش



Figure 3.2: Overview of steamer features and included accessories (fabric brush, hanger hooks).

4. SETUP

- Unpacking:** Carefully remove all components from the packaging.
- Assemble the Pole:** Insert the adjustable pole into the designated slot on the main unit base. Secure it firmly.
- Attach the Hanger:** Place the integrated hanger onto the top of the adjustable pole.
- Fill the Water Tank:** Remove the water tank from the base. Fill it with clean tap water up to the maximum level indicator. Do not overfill. Reinsert the water tank securely into the base.

Tefal



 


Figure 4.1: Removing the water tank for filling.

5. OPERATING INSTRUCTIONS

1. **Power On:** Plug the power cord into a suitable electrical outlet. Turn on the appliance using the power switch located on the base.
2. **Heat-up:** The steamer will begin to heat up. It typically takes approximately 45 seconds to reach operating temperature.
3. **Prepare Garment:** Hang the garment on the integrated hanger. Ensure the fabric is spread out to allow steam to penetrate evenly.
4. **Steaming:** Hold the steam head close to the fabric, moving it in a vertical motion from top to bottom. For stubborn wrinkles, hold the steam head in place for a few seconds.

Tefal®

A NEW WAY TO TAKE CARE OF YOUR GARMENTS



Figure 5.1: Examples of steaming different types of garments.



Figure 5.2: Steaming a shirt.



Figure 5.3: Steaming trousers.



Figure 5.4: Steaming a dress.





Figure 5.5: Close-up of the steam head in operation.

- **Sanitization:** The steamer offers a sanitization feature. Direct the steam head over the fabric for a few seconds to refresh and sanitize.
- **Finishing:** Once steaming is complete, turn off the appliance and unplug it. Allow the garment to cool and dry before wearing or storing.

6. MAINTENANCE AND CLEANING

- **Emptying the Water Tank:** After each use, or when storing the appliance, empty any remaining water from the tank.
- **Cleaning the Steam Head:** Wipe the metal steam head with a damp cloth to remove any residue. Do not use abrasive cleaners.
- **Descaling (Anti-Calc System):** The appliance features an anti-calc solution. Regularly follow the descaling instructions in the full product manual to maintain performance. Typically, this involves flushing the system with clean water or a mild descaling solution as recommended by the manufacturer.
- **Storage:** Store the steamer in a dry, safe place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; appliance not heated; mineral buildup.	Fill water tank; allow 45 seconds for heat-up; perform descaling.
Water leaking from steam head	Appliance not fully heated; condensation.	Allow more time to heat up; ensure steam head is held vertically.
Appliance not turning on	Not plugged in; power outlet faulty.	Check power connection; try a different outlet.

8. SPECIFICATIONS

- **Brand:** Tefal
- **Model:** IT3420E0
- **Type:** Vertical Garment Steamer
- **Power:** 1700 Watts
- **Steam Output:** 30 g/minute
- **Heat-up Time:** 45 seconds
- **Water Tank Capacity:** 1.5 Liters

- **Steam Head Material:** Metal
- **Sanitization Feature:** Yes
- **Dimensions (L x W x H):** 45.7 x 29.6 x 161.1 cm
- **Weight:** 4.93 kg
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

Your Tefal ProStyle Garment Steamer IT3420E0 is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service inquiries, please contact Tefal customer service in your region. Contact information can typically be found on the manufacturer's website or in the product packaging.

© 2024 Tefal. All rights reserved.