

[Manuals.plus](#) /

› [Russell Hobbs](#) /

› Russell Hobbs Electric Salt and Pepper Grinder 28010-56 User Manual

Russell Hobbs 28010-56

Russell Hobbs Electric Salt and Pepper Grinder 28010-56 User Manual

Model: 28010-56

1. INTRODUCTION

Thank you for choosing the Russell Hobbs Electric Salt and Pepper Grinder. This manual provides essential information for the safe and efficient operation of your appliance. Please read these instructions carefully before use and retain them for future reference.

This electric grinder features a stylish black metal design, high-quality ceramic grinding wheels, and a base illumination light for precise dosing. It is designed for grinding coarse salt, peppercorns, herbs, and various spices.



Image 1.1: The Russell Hobbs Electric Salt and Pepper Grinder set.

2. SAFETY INSTRUCTIONS

- Always ensure the grinder is switched off and disconnected from any power source (batteries removed) before cleaning or maintenance.
- This appliance is intended for household use only. Do not use it for commercial purposes.
- Keep the appliance out of reach of children.
- Do not immerse the grinder in water or any other liquid. It is not dishwasher safe.
- Use only the specified battery type (4 x AA batteries). Ensure correct polarity when inserting batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the appliance is not used for an extended period.
- Avoid contact with moving parts.

- Do not attempt to grind substances other than dry spices, salt, or peppercorns.

3. PACKAGE CONTENTS

Your Russell Hobbs Electric Salt and Pepper Grinder package includes:

- 2 x Electric Grinders
- 2 x Brackets (stands)
- Instruction Manual

Note: 4 x AA batteries per grinder (total 8 x AA batteries for the set) are required and are not included.

4. SETUP

4.1 Battery Installation

1. Twist the top section of the grinder counter-clockwise to separate it from the main body.
2. Insert 4 x AA batteries into the battery compartment, ensuring correct polarity (+/-).
3. Align the top section with the main body and twist clockwise to secure it.

4.2 Filling the Grinder

1. Hold the grinder firmly and twist the clear bottom section counter-clockwise to detach it from the main body.
2. Fill the clear chamber with your desired coarse salt, peppercorns, or spices. Do not overfill.
3. Align the clear bottom section with the main body and twist clockwise to secure it firmly.



Image 4.1: Examples of suitable ingredients for grinding.

5. OPERATING INSTRUCTIONS

5.1 Grinding

To operate the grinder, simply press and hold the button located on the top of the unit. The grinder will activate, and the base light will illuminate, providing visibility for precise dosing. Release the button to stop grinding.



Image 5.1: Grinder in operation with base light illuminated.

5.2 Adjusting Grind Fineness

The grind fineness can be adjusted from fine to coarse. Locate the adjustment knob at the bottom of the grinder, near the ceramic grinding mechanism. Turn the knob clockwise for a finer grind and counter-clockwise for a coarser grind.



Image 5.2: Top section of the grinder, indicating the activation button.

6. MAINTENANCE AND CLEANING

6.1 Cleaning

- Before cleaning, ensure batteries are removed.
- Wipe the exterior of the grinder with a damp cloth. Do not use abrasive cleaners or scourers.
- The clear chamber can be hand-washed with warm, soapy water. Ensure it is completely dry before reattaching.
- Do not immerse the main body of the grinder in water.
- The ceramic grinding mechanism can be cleaned with a small brush to remove any residue.

6.2 Storage

Store the grinder in a dry place. If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not operate.	Batteries are depleted or incorrectly inserted.	Replace batteries with new AA batteries, ensuring correct polarity.
Grinder operates but no spice is dispensed.	Chamber is empty or grinding mechanism is blocked.	Refill the chamber. Check the grinding mechanism for blockages and clean if necessary.
Grind is inconsistent.	Grind fineness setting needs adjustment.	Adjust the grind fineness knob at the bottom of the grinder.
Base light does not illuminate.	Batteries are depleted or light malfunction.	Replace batteries. If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Model:** 28010-56
- **Brand:** Russell Hobbs
- **Material:** Metal, Ceramic
- **Color:** Black
- **Product Dimensions:** 2.36"W x 9.17"H (approximately 6cm W x 23.3cm H)
- **Item Weight:** 0.3 Kilograms (10.6 ounces)
- **Operation Mode:** Automatic
- **Power Source:** 4 x AA batteries (not included)
- **Recommended Uses:** Grinding salt, pepper, and spices
- **Dishwasher Safe:** No

9. WARRANTY AND SUPPORT

Russell Hobbs products are manufactured to high-quality standards. For information regarding warranty, repairs, or customer support, please visit the official Russell Hobbs website or contact their customer service department.

Please have your model number (28010-56) available when contacting support.

For more information, you may visit the [Russell Hobbs Store on Amazon](#).