

Pulsar PM3175X1

Pulsar PM3175X1 Analogue Quartz Watch User Manual

Model: PM3175X1

INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Pulsar PM3175X1 Analogue Quartz Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.



Figure 1: Front view of the Pulsar PM3175X1 Analogue Quartz Watch. The watch features a silver stainless-steel case, a black dial with luminous hands and markers, three chronograph sub-dials, a date window, and a black nylon strap.

WATCH COMPONENTS

Familiarize yourself with the main components of your Pulsar PM3175X1 watch:

- **Crown:** Located at 3 o'clock, used for setting time and date.
- **Pusher A (Top):** Located at 2 o'clock, used for starting and stopping the chronograph.

- **Pusher B (Bottom):** Located at 4 o'clock, used for resetting the chronograph and split time functions.
- **Hour Hand:** Indicates the hour.
- **Minute Hand:** Indicates the minute.
- **Small Second Hand:** Continuous seconds for regular timekeeping, located in the sub-dial at 6 o'clock.
- **Chronograph Second Hand:** The large central second hand, used specifically for the stopwatch function.
- **Chronograph Minute Sub-dial:** Measures elapsed minutes (up to 60 minutes) during chronograph operation, located at 9 o'clock.
- **Chronograph 1/10 Second Sub-dial:** Measures elapsed 1/10 seconds during chronograph operation, located at 12 o'clock.
- **Date Window:** Displays the current date, located at 3 o'clock.
- **Nylon Strap:** Durable and comfortable strap with a buckle closure.
- **Stainless-Steel Case:** Provides protection for the watch movement.

SETUP

1. Setting the Time

1. Pull the crown out to the second click position (position 3). The small second hand will stop.
2. Turn the crown to advance the hour and minute hands to the desired time. Ensure the AM/PM is correctly set, especially when setting the date.
3. Push the crown back in to the normal position (position 1). The small second hand will resume movement.

2. Setting the Date

1. Pull the crown out to the first click position (position 2).
2. Turn the crown clockwise or counter-clockwise (depending on the movement) until the correct date appears in the date window.
3. Push the crown back in to the normal position (position 1).

Important: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the date change mechanism. If you need to set the date during this period, first set the time outside this range, adjust the date, then reset the time.

OPERATING INSTRUCTIONS

Using the Chronograph

Your Pulsar PM3175X1 watch features a chronograph function for measuring elapsed time. The chronograph uses the large central second hand and the sub-dials at 9 o'clock (minutes) and 12 o'clock (1/10 seconds).

Standard Measurement:

1. Press Pusher A to start the chronograph. The central chronograph second hand, minute sub-dial, and 1/10 second sub-dial will begin to move.
2. Press Pusher A again to stop the chronograph. Read the elapsed time from the central second hand, the minute sub-dial, and the 1/10 second sub-dial.
3. Press Pusher B to reset the chronograph. All chronograph hands will return to their zero positions.

Note: The 1/10 second sub-dial typically operates for the first 60 seconds of measurement and then stops to conserve battery, displaying the final 1/10 second reading only when the chronograph is stopped.

Accumulated Elapsed Time Measurement:

1. Press Pusher A to start.
2. Press Pusher A to stop (reading of elapsed time).
3. Press Pusher A to restart (measurement resumes from where it stopped).
4. Press Pusher A to stop (reading of total accumulated elapsed time).
5. Press Pusher B to reset.

Split Time Measurement:

1. Press Pusher A to start.
2. Press Pusher B to measure split time (chronograph hands stop, allowing you to read the split time, but timing continues internally).
3. Press Pusher B again to release split time (chronograph hands jump forward to catch up with the ongoing elapsed time).
4. Press Pusher A to stop.
5. Press Pusher B to reset.

Chronograph Hand Position Adjustment (Zero Reset)

If the chronograph hands do not return precisely to their zero positions after resetting, they can be adjusted:

1. Pull the crown out to the second click position (position 3).
2. Press Pusher A repeatedly to adjust the central chronograph second hand and the 1/10 second sub-dial hand until they align to the zero position.
3. Press Pusher B repeatedly to adjust the chronograph minute sub-dial hand until it aligns to the zero position.
4. Once all chronograph hands are aligned to the zero position, push the crown back in to the normal position (position 1).

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and crystal regularly with a soft, dry cloth. For the nylon strap, a mild soap solution and soft brush can be used for cleaning, followed by thorough rinsing and air drying.
- **Water Resistance:** Your watch is water resistant to 100 meters (10 BAR). This means it is suitable for swimming and snorkeling. Do NOT operate the crown or pushers while the watch is wet or submerged, as this can compromise the water resistance. Avoid hot water, as rapid temperature changes can affect the seals.
- **Temperature:** Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or sudden, drastic temperature changes.
- **Chemicals:** Avoid direct contact with chemicals such as gasoline, cleaning solvents, aerosol sprays, adhesives, paints, and cosmetics, as they can damage the watch's seals, case finish, and strap material.
- **Shocks:** While designed for durability, avoid strong impacts or dropping the watch, which can damage the internal movement or exterior components.
- **Magnetism:** Keep the watch away from strong magnetic fields (e.g., from speakers, refrigerators, or certain electronic devices), as they can affect the accuracy of the quartz movement.
- **Battery Replacement:** The watch is powered by a quartz movement and requires a battery. When the battery is low, the small second hand may start moving in two-second intervals (End-of-Life indicator). Replace the battery promptly by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch stops or runs erratically.	Low battery.	Replace the battery by a professional watch technician.
Date changes at noon instead of midnight.	AM/PM setting incorrect during time adjustment.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Misalignment of chronograph hands.	Perform chronograph hand position adjustment as described in the "Operating Instructions" section.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Have the watch inspected by a qualified technician immediately to prevent damage.

SPECIFICATIONS

- Model Number:** PM3175X1
- Movement:** Quartz
- Case Material:** Stainless Steel
- Case Diameter:** 42mm
- Strap Material:** Nylon
- Water Resistance:** 100 meters (10 BAR)
- Functions:** Time (Hour, Minute, Small Second), Date, Chronograph (1/10 second, seconds, minutes)
- Battery:** 1 Product Specific battery (included)
- Weight:** Approximately 230 g (as per parcel dimensions)

WARRANTY INFORMATION

Pulsar watches are manufactured to the highest quality standards and are covered by a limited warranty against defects in materials and workmanship. The specific terms and duration of your warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Pulsar website for detailed information.

The warranty typically does not cover:

- Battery life.
- Normal wear and tear (e.g., scratches on case, crystal, or strap).
- Damage caused by improper use, lack of care, accidents, or unauthorized repairs.
- Water damage if the watch was not used according to its water resistance guidelines.

SUPPORT AND CONTACT

For further assistance, service, or warranty claims, please contact Pulsar customer support or an authorized service center.

- Online Support:** Visit the official [Pulsar website](#) for FAQs, service center locators, and contact information.
- Service Centers:** A list of authorized service centers can usually be found on the Pulsar website or in your warranty booklet.

When contacting support, please have your watch model number (PM3175X1) and purchase details readily available.

© 2025 Pulsar. All rights reserved.