

[manuals.plus](#) /› [Nintendo](#) /› [Nintendo GameCube: The Legend of Zelda Collector's Edition \(Renewed\) Instruction Manual](#)

Nintendo The Legend of Zelda: Collector's Edition

The Legend of Zelda: Collector's Edition (Renewed)

Instruction Manual for Nintendo GameCube

1. INTRODUCTION

Welcome to The Legend of Zelda: Collector's Edition for Nintendo GameCube. This compilation brings together four classic titles from the acclaimed Legend of Zelda series: *The Legend of Zelda*, *Zelda II: The Adventure of Link*, *The Legend of Zelda: Ocarina of Time*, and *The Legend of Zelda: Majora's Mask*. This product is a renewed game disc. As a renewed item, it has been professionally inspected, cleaned, and tested to ensure full functionality. Please note that this edition typically includes the game disc only and may be provided in a generic protective case, without the original packaging or printed manual.

2. SETUP

2.1 Console Compatibility

This game disc is designed for use with the Nintendo GameCube console. It is also compatible with certain models of the Nintendo Wii, Nintendo Wii Mini, and Nintendo Wii U that feature GameCube disc drive and controller ports.

2.2 Inserting the Game Disc

1. Ensure your GameCube console is powered off.
2. Open the disc tray cover on the top of the console.
3. Carefully place the game disc onto the spindle in the disc tray, with the label side facing up. Press gently on the center of the disc until it clicks into place.
4. Close the disc tray cover securely.
5. Connect a Nintendo GameCube controller to one of the controller ports on the front of the console.
6. For saving game progress, especially for *Ocarina of Time* and *Majora's Mask*, ensure a Nintendo GameCube Memory Card is inserted into one of the memory card slots.



PROMOTIONAL DISC
INCLUDES 4 CLASSIC GAMES!



NOT FOR RESALE



Nintendo®

This image displays the game disc for The Legend of Zelda: Collector's Edition, typically provided in a generic protective case as a renewed product. The disc features artwork related to the Zelda series.

3. OPERATING INSTRUCTIONS

3.1 Starting the Game

1. With the game disc inserted and controller connected, power on your GameCube console.
2. The console will automatically load the game disc.

3. Follow the on-screen prompts to navigate the main menu.

3.2 Game Selection

Upon loading, you will be presented with a main menu allowing you to select which of the four included games you wish to play:

- **The Legend of Zelda** (Original NES version)
- **Zelda II: The Adventure of Link** (Original NES version)
- **The Legend of Zelda: Ocarina of Time** (Nintendo 64 version)
- **The Legend of Zelda: Majora's Mask** (Nintendo 64 version)

Use the GameCube controller's directional pad or analog stick to highlight your desired game and press the **A** button to confirm your selection.

3.3 Saving Game Progress

Saving mechanisms vary by game:

- For *The Legend of Zelda* and *Zelda II: The Adventure of Link*, saving is typically done through specific in-game actions or menu options.
- For *Ocarina of Time* and *Majora's Mask*, saving is performed via the in-game menu, which requires a GameCube Memory Card. Ensure a memory card with sufficient free space is inserted before attempting to save.

3.4 Exiting a Game

To return to the Collector's Edition main menu from an active game, you may need to reset the console by pressing the **RESET** button on the GameCube, or power off and then power on the console again. Always ensure your game progress is saved before exiting.

4. MAINTENANCE AND CARE

4.1 Handling the Disc

- Always hold the disc by its edges or by placing a finger through the center hole.
- Avoid touching the reflective surface of the disc to prevent fingerprints and smudges.

4.2 Cleaning the Disc

- If the disc becomes dirty, gently wipe it with a soft, lint-free cloth.
- Wipe from the center of the disc outwards in a straight line, rather than in a circular motion.
- For stubborn smudges, use a disc cleaning solution specifically designed for optical media, applied to the cloth, not directly to the disc.
- Do not use abrasive cleaners, solvents, or rough materials, as these can scratch the disc.

4.3 Storage

- Store the disc in its protective case when not in use to prevent dust accumulation and scratches.
- Keep the disc away from direct sunlight, extreme temperatures, and high humidity.

5. TROUBLESHOOTING

5.1 Disc Not Reading

- **Check Disc Condition:** Inspect the disc for visible scratches, smudges, or dirt. Clean the disc as described in Section 4.2.
- **Reinsert Disc:** Remove the disc and reinsert it, ensuring it is properly seated on the spindle.
- **Console Lens:** If other games also fail to read, the console's laser lens may be dirty or faulty. Consult your console's manual for cleaning instructions or professional service.

5.2 Game Freezing or Crashing

- **Clean Disc:** A dirty or scratched disc can cause freezing. Clean the disc thoroughly.
- **Console Ventilation:** Ensure your GameCube console has adequate ventilation and is not overheating.
- **Power Cycle:** Turn off the console, wait a few seconds, and then turn it back on.

5.3 Save Data Issues

- **Memory Card:** Verify that a GameCube Memory Card is correctly inserted into a memory card slot.
- **Memory Card Space:** Check if the memory card has sufficient free space to save game data.
- **Memory Card Condition:** Ensure the memory card is functioning correctly. Try using a different memory card if available.

6. SPECIFICATIONS

- **Product Type:** Video Game (Compilation)
- **Media Type:** CD-ROM (GameCube Disc)
- **Compatible Console Models:** Nintendo GameCube, Nintendo Wii, Nintendo Wii Mini, Nintendo Wii U
- **Rating:** Everyone (E)
- **Product Dimensions:** Approximately 7.52 x 5.51 x 0.51 inches (packaged)
- **Item Weight:** Approximately 4.5 ounces
- **Manufacturer:** Nintendo
- **Date First Available:** January 28, 2020 (for this renewed product listing)

7. WARRANTY AND SUPPORT

As a renewed product, this item is typically backed by a specific return or replacement policy from the seller or platform where it was purchased. For this product, a **90-day refund or replacement policy** is generally offered.

If you encounter any issues with your renewed game disc that cannot be resolved using the troubleshooting steps provided, please contact the seller directly for assistance. They can provide specific support related to your purchase and the renewed product's condition.

Please retain your purchase receipt or order confirmation for any warranty or support claims.