

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Faber-Castell](#) /

› [Faber-Castell 183500 Double Sharpener with Triangular Grip Eraser Instruction Manual](#)

Faber-Castell 183500

Faber-Castell 183500 Double Sharpener with Triangular Grip Eraser Instruction Manual

PRODUCT OVERVIEW

The Faber-Castell 183500 is a high-quality double pencil sharpener integrated with a triangular grip eraser. This versatile tool is designed for efficient and clean sharpening of both standard and jumbo-sized pencils, suitable for graphite and colored pencils. Its compact design makes it ideal for school, office, or home use.



Image: The Faber-Castell 183500 double sharpener, featuring a black top with two sharpening holes and a transparent grey collection container, with the Faber-Castell logo visible.

SETUP

The Faber-Castell 183500 double sharpener with eraser comes ready for immediate use. No assembly is required.

- 1. Unpack:** Carefully remove the sharpener from its packaging.
- 2. Inspect:** Check for any visible damage. If damaged, do not use and contact customer support.

OPERATING INSTRUCTIONS

This device features two sharpening holes for different pencil sizes and an integrated eraser.

Sharpening Pencils

1. Identify the correct hole:

- Use the *smaller hole* for standard-sized pencils.
- Use the *larger hole* for jumbo-sized pencils.

2. Insert the pencil:

Gently insert the pencil into the appropriate sharpening hole.

3. Rotate the pencil:

While holding the sharpener steady, rotate the pencil clockwise until the desired point is achieved. Avoid excessive force to prevent lead breakage.

4. Remove and check:

Carefully remove the pencil and check the sharpness. Repeat if necessary.

Using the Eraser

The integrated triangular grip eraser is located on the side of the sharpener.

1. Locate the eraser:

The grey triangular eraser is part of the sharpener's body.

2. Erase markings:

Gently rub the eraser over pencil markings on paper to remove them. The triangular shape allows for precise erasing.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your sharpener.

Emptying Shavings

1. Separate the container:

Gently pull apart the black top section from the transparent grey collection container.

2. Dispose of shavings:

Empty the pencil shavings into a waste bin.

3. Reassemble:

Carefully reattach the top section to the collection container, ensuring it clicks securely into place.

Cleaning

- Wipe the exterior of the sharpener with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Avoid getting water into the sharpening mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pencil not sharpening properly or lead breaks frequently.	<ul style="list-style-type: none">• Shavings container is full.• Dull blade.• Excessive force applied during sharpening.• Pencil quality.	<ul style="list-style-type: none">• Empty the shavings container.• While blades are not user-replaceable, ensure the sharpener is clean. If issues persist, consider replacing the sharpener.• Apply gentle, consistent pressure.• Use high-quality pencils.

Problem	Possible Cause	Solution
Eraser leaves smudges.	<ul style="list-style-type: none">• Eraser is dirty.• Paper quality.	<ul style="list-style-type: none">• Clean the eraser surface by rubbing it on a clean piece of scrap paper.• Ensure paper is suitable for erasing.

SPECIFICATIONS

Model Number	183500
Brand	Faber-Castell
Product Type	Double Pencil Sharpener with Eraser
Color	Black (top), Transparent Grey (container/eraser)
Material	Plastic (sharpener body), Rubber (eraser)
Dimensions (Package)	9.4 x 7.3 x 2.4 cm
Item Weight	40 grams
Power Source	Manual
Special Feature	Double Sharpener, Integrated Eraser
Target Audience	Students
Country of Origin	Germany

WARRANTY AND SUPPORT

Specific warranty information for the Faber-Castell 183500 sharpener is typically provided at the point of purchase or on the product packaging. For detailed warranty terms or customer support, please refer to the official Faber-Castell website or contact their customer service directly.

You can often find support information, including FAQs and contact details, on the manufacturer's official website: www.faber-castell.com.

This manual provides instructions for the Faber-Castell 183500 Double Sharpener with Triangular Grip Eraser. All rights reserved. Faber-Castell.