

Manuals.plus /

> QFX /

> QFX PBX-8074 Portable Party Bluetooth Loudspeaker User Manual

QFX PBX-8074

QFX PBX-8074 Portable Party Bluetooth Loudspeaker User Manual

Model: PBX-8074 | Brand: QFX

INTRODUCTION

Thank you for choosing the QFX PBX-8074 Portable Party Bluetooth Loudspeaker. This versatile PA speaker is designed to provide high-quality audio for various occasions, from parties to announcements. It offers multiple connectivity options, including wireless Bluetooth, USB, microSD card, and auxiliary input. With its 8-inch woofer, amplifier, and rechargeable battery, the PBX-8074 ensures clear sound and portability for up to 4 hours of continuous playback.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all included accessories are present: the PBX-8074 loudspeaker, a microphone, and a remote control. Inspect the unit for any signs of damage during transit.

2. Charging the Battery

Before first use, it is recommended to fully charge the speaker's internal rechargeable battery. Connect the provided power adapter to the speaker's charging port and plug it into a standard electrical outlet. The charging indicator light will illuminate. A full charge typically takes several hours and provides approximately 4 hours of playback time. Disconnect the charger once the battery is fully charged.

3. Connecting Accessories

- Microphone:** Insert the microphone cable into the designated microphone input jack on the speaker.
- Remote Control:** Ensure the remote control has working batteries. The remote is ready for use once the speaker is powered on.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power switch on the speaker. Toggle the switch to the "ON" position to power on the unit. To power off, toggle the switch to the "OFF" position.

2. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the "Mode" button on the speaker or remote until "Bluetooth" is announced or indicated.
2. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "QFX PBX-8074" or similar.
4. Select the speaker from the list to pair. A confirmation tone or voice prompt will indicate successful pairing.
5. You can now play audio from your device through the speaker.

3. USB/MicroSD Card Playback

- Insert a USB flash drive or a microSD card (with pre-loaded MP3 audio files) into the respective port on the speaker.
- The speaker will automatically switch to USB or SD mode and begin playing audio files. If not, press the "Mode" button to select the correct input.
- Use the playback controls (Play/Pause, Next/Previous Track) on the speaker or remote to manage your music.

4. AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX input jack using a 3.5mm audio cable (not included). Press the "Mode" button until "AUX" is selected. Audio from the connected device will now play through the speaker.

5. Microphone Usage

Once the microphone is connected, you can use it for announcements or karaoke. Adjust the microphone volume knob on the speaker to control the microphone's output level. Some models may also feature an echo control for the microphone.

6. Remote Control Functions

The included remote control allows for convenient operation from a distance. Functions typically include: Power On/Off, Mode selection, Volume Up/Down, Play/Pause, Next/Previous Track, and EQ presets (if available).

7. Volume and Equalizer Adjustment

Use the main volume knob on the speaker or the volume buttons on the remote control to adjust the overall sound level. The speaker may also feature equalizer controls (bass/treble) or preset EQ modes to fine-tune the audio output to your preference.

MAINTENANCE

1. Cleaning

Wipe the exterior of the speaker with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure no liquids enter the speaker's openings.

2. Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is advisable to partially charge the battery every few months to maintain its health.

3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker when the low battery indicator appears. Do not leave the speaker uncharged for very long periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power switch is off.	Charge the speaker; Ensure power switch is in the "ON" position.
No sound	Volume is too low; Incorrect input mode; Device not connected properly.	Increase volume; Press "Mode" button to select correct input (Bluetooth, USB, AUX); Reconnect device.
Bluetooth not pairing	Speaker not in pairing mode; Device's Bluetooth is off; Speaker too far from device.	Ensure speaker is in Bluetooth mode; Turn on Bluetooth on your device; Move device closer to speaker (within 10 meters).
Microphone not working	Microphone not connected; Microphone volume is low.	Ensure microphone is securely plugged in; Adjust microphone volume knob.

SPECIFICATIONS

- Model:** PBX-8074
- Speaker Type:** Portable PA Loudspeaker
- Woofers Diameter:** 8 Inches
- Connectivity Technology:** Bluetooth, USB, MicroSD, Auxiliary (3.5mm)
- Wireless Communication:** Bluetooth
- Bluetooth Range:** Up to 10 meters (33 feet)
- Battery Life:** Approximately 4 hours
- Power Source:** Battery Powered
- Included Components:** Loudspeaker, Microphone, Remote Control
- Product Dimensions:** 11"D x 9"W x 16"H
- Item Weight:** 9.5 Pounds
- Material:** Plastic
- Controller Type:** Remote Control
- Audio Output Mode:** Stereo



Image 1: Front view of the QFX PBX-8074 Portable Party Bluetooth Loudspeaker. The speaker features a black grille covering an 8-inch woofer, which emits a blue light when active. The QFX logo is visible at the bottom.



Image 2: Dimensions of the QFX PBX-8074 Portable Party Bluetooth Loudspeaker. The image illustrates the speaker's approximate measurements: 11 inches in depth, 9 inches in width, and 16 inches in height.

WARRANTY AND SUPPORT

The QFX PBX-8074 Portable Party Bluetooth Loudspeaker comes with a**Limited Warranty**. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your product or contact QFX customer support directly.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the manufacturer, QFX, through their official website or customer service channels. Keep your purchase receipt as proof of purchase for warranty services.

© 2024 QFX. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question