

[Manuals.plus](#) /

> [Fujifilm](#) /

> Fujifilm X100V Digital Camera User Manual

Fujifilm X100V - Silver

Fujifilm X100V Digital Camera

USER MANUAL

PRODUCT OVERVIEW



The Fujifilm X100V Digital Camera, showcasing its classic design and integrated lens.

Key Features

- **Newly Designed 23mm F2 Lens:** Ensures high resolution and minimal distortion, with improved close focusing performance.
- **26.1MP X-Trans CMOS 4 Sensor & X-Processor 4:** Delivers exceptional image quality, wide dynamic range, and fast autofocus down to -5EV.
- **Advanced Hybrid Viewfinder:** Seamlessly switch between 0.52x optical viewfinder (OVF) and 3.69M-dot OLED

electronic viewfinder (EVF).

- **Two-Way Tilting LCD Touchscreen:** Provides intuitive controls and flexibility for framing shots from various angles.
- **4K Video Recording:** Capable of recording 4K video at 30 frames per second and Full HD/120p for super slow-motion.

Product Description

The Fujifilm X100V combines the quality and control of a professional camera with the size and simplicity of a compact one, for outstanding photography every day. A new 23mmF2 fixed lens perfectly complements the cutting-edge 26.1MP X-Trans CMOS 4 back-side illuminated sensor at its heart. The X100V also features the powerful X-Processor 4 quad-core imaging engine, which drives superfast, precision autofocus right down to -5EV, while an Advanced Hybrid Viewfinder ensures photographers are always ready for the perfect moment. With the addition of a tilting LCD touchscreen, optional weather sealing (with separately purchased lens) and a great design, you have the perfect recipe for beautiful still images and spectacular 4K video, whatever the situation.

SETUP GUIDE

Unpacking

Upon opening the package, ensure all components are present. The Fujifilm X100V typically includes the camera body and essential accessories.

Battery Installation

Locate the battery compartment on the bottom of the camera. Open the cover, insert the supplied Lithium-Ion battery (NP-W126S) with the correct orientation, and close the compartment securely. Ensure the battery is fully charged before first use.



The bottom of the X100V, revealing the battery and memory card slot.

Memory Card Insertion

The camera supports SD/SDHC/SDXC memory cards. Open the memory card slot cover, usually located next to the battery compartment. Insert the memory card with the label facing the correct direction until it clicks into place. Close the cover firmly.

OPERATING INSTRUCTIONS

Basic Operation

- **Powering On/Off:** Rotate the power switch located around the shutter button to the 'ON' or 'OFF' position.
- **Taking Photos:** Half-press the shutter button to achieve focus, then fully press to capture the image.
- **Viewing Photos:** Press the 'PLAY' button on the rear of the camera to enter playback mode. Use the directional pad or touchscreen to navigate through images.



Top controls of the X100V, including the power switch and exposure dials.

Advanced Features

- **Viewfinder Usage:** The X100V features an Advanced Hybrid Viewfinder. Use the lever on the front of the camera to switch between the optical viewfinder (OVF) for a clear, bright view of your subject, and the electronic viewfinder (EVF) for a real-time preview of exposure and settings.
- **Tilting LCD Touchscreen:** The rear LCD screen can be tilted for comfortable shooting from high or low angles. It also supports touch operations for focus, shooting, and menu navigation.



The X100V's tilting LCD screen, offering flexible viewing angles.

- **Film Simulation Modes:** Explore various film simulation modes such as PROVIA/Standard, Velvia/Vivid, ASTIA/Soft, Classic Chrome, ACROS, and ETERNA/Cinema to apply unique color and tonal characteristics to your images directly in-camera.
- **Video Recording:** To record video, set the camera to movie mode. The X100V supports 4K DCI 2160p video at 30fps and Full HD 1080p at 120fps for slow-motion effects.

CONNECTIVITY

Wireless Communication

The Fujifilm X100V features built-in Wi-Fi and Bluetooth for wireless connectivity. To transfer images to a smartphone or tablet, enable 'Wireless Communication' in the camera's shooting menu. Then, connect your smart device to the camera's Wi-Fi network and use the Fujifilm Camera Remote app to browse and import photos. For remote control, Bluetooth can be used to establish a low-power connection.

Wired Connections

The camera is equipped with a USB Type-C port (USB 3.0) for charging and data transfer, an HDMI D (Micro) port for video output to external displays, and a 2.5mm sub-mini jack for external microphone input.



Side of the X100V, highlighting the USB-C and HDMI ports.

Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a lens cleaning solution applied to a cloth, not directly to the lens.
- **Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the camera.
- **LCD Screen:** Use a microfiber cloth specifically designed for screens. Avoid harsh chemicals.

Storage

When not in use for extended periods, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery to prevent leakage. Use desiccant packets to absorb moisture if storing in humid environments.

Battery Care

To maximize battery life, avoid fully discharging the battery frequently. Charge the battery using the supplied USB cable connected to a power source. Store batteries in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the battery contacts are clean.
Wireless connection fails.	Verify 'Wireless Communication' is enabled in the camera's shooting menu. Ensure your smart device is connected to the camera's Wi-Fi network. Restart both devices.
Images appear blurry.	Check focus mode settings. Ensure sufficient lighting. Use a tripod in low light conditions. Clean the lens.
Battery drains quickly.	Reduce screen brightness. Limit continuous shooting. Turn off Wi-Fi/Bluetooth when not in use. Consider carrying a spare battery.
Memory card error.	Ensure the memory card is inserted correctly. Try formatting the card (this will erase all data). Use a different, compatible memory card.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	X100V - Silver
Photo Sensor Resolution	26.1 MP
Photo Sensor Size	APS-C

Feature	Detail
Lens Type	Fixed Fujinon Aspherical Lens (23mm, f/2)
Video Resolution	4K DCI 2160p, Full HD 1080p
Screen Size	3 Inches
Display Type	Tilting LCD Touchscreen
Viewfinder	Hybrid (Electronic OLED & Optical)
ISO Range	Expanded ISO Minimum: 100, Expanded ISO Maximum: 51200
Connectivity	USB Type-C, HDMI D (Micro), 2.5mm Sub-Mini, Bluetooth, Wi-Fi
Weight	478 Grams
Dimensions (approx.)	128 x 75 x 53 mm (from video comparison)

WARRANTY AND SUPPORT

Warranty Information

The Fujifilm X100V Digital Camera comes with a **1 Year Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official Fujifilm website.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Fujifilm support website or contact their customer service department. You can also refer to the comprehensive user manual PDF for more in-depth information:

[Download Full User Manual
\(PDF\)](#)