

## Freaks and Geeks Switchmanette

# Freaks and Geeks SWITCHMANETTE Wireless Controller User Manual

## INTRODUCTION

---

This manual provides detailed instructions for the Freaks and Geeks SWITCHMANETTE Wireless Controller. This controller is designed to enhance your gaming experience on both Nintendo Switch and Windows PC platforms, offering wireless connectivity and a comfortable design.

## SETUP

---

### 1. Unboxing and Initial Charge

Carefully remove the controller from its packaging. Ensure that the Freaks and Geeks SWITCHMANETTE Wireless Controller is present. Before first use, fully charge the controller using a compatible USB charging cable (not included). The LED indicators on the controller will typically show charging status and turn off or change color when fully charged.

### 2. Pairing with Nintendo Switch

1. From the Nintendo Switch HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. On the SWITCHMANETTE controller, press and hold the **Pairing Button** (often a small button on the top or back of the controller) for a few seconds until the LED indicators begin to flash rapidly.
3. Once the controller appears on the Switch screen and the LEDs stabilize, the pairing is complete.

### 3. Pairing with Windows PC

1. Ensure your Windows PC has Bluetooth enabled. Go to **Settings > Devices > Bluetooth & other devices**.
2. Select **Add Bluetooth or other device**, then choose **Bluetooth**.
3. On the SWITCHMANETTE controller, press and hold the **Pairing Button** until the LED indicators flash rapidly.
4. Select the controller from the list of available Bluetooth devices on your PC. Follow any on-screen prompts to complete the pairing.

## OPERATING INSTRUCTIONS

---

### 1. Controller Layout

The SWITCHMANETTE controller features a standard layout including two analog sticks, a D-pad, A/B/X/Y action buttons, L/R shoulder buttons, ZL/ZR trigger buttons, and additional function buttons such as HOME, +, -, and a TURBO button.



**Image 1:** Front view of the Freaks and Geeks SWITCHMANETTE Wireless Controller. This image displays the two analog sticks, D-pad, A/B/X/Y buttons, HOME button, + and - buttons, and the central TURBO button with LED indicators below it.



**Image 2:** Top view of the Freaks and Geeks SWITCHMANETTE Wireless Controller. This image highlights the L and R shoulder buttons and the ZL and ZR trigger buttons.

### 2. Power On/Off

- To power on, press the **HOME button**. The controller will attempt to connect to the last paired device.

- To power off, press and hold the **HOME button** for approximately 5 seconds until the LED indicators turn off. The controller will also power off automatically after a period of inactivity.

### 3. TURBO Function

The TURBO button allows for rapid-fire input for specific action buttons. To activate, press and hold the **TURBO button**, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR). To deactivate, repeat the process.

### 4. Battery Status

The LED indicators on the front of the controller display the battery charge level. A low battery will typically be indicated by flashing LEDs, while fully charged status will show solid LEDs or no LEDs when disconnected from power.

## MAINTENANCE

---

- **Cleaning:** Use a dry, soft cloth to clean the surface of the controller. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge the controller regularly, even if not in use for extended periods. Do not attempt to disassemble or replace the internal battery.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts, as this can damage internal components.

## TROUBLESHOOTING

---

Problem	Possible Solution
Controller does not power on.	Ensure the controller is fully charged. Connect it to a power source using a USB cable.
Controller does not connect or frequently disconnects.	<ul style="list-style-type: none"> <li>• Ensure the controller is within range of the console/PC.</li> <li>• Re-pair the controller with your device (Nintendo Switch or PC).</li> <li>• Check for potential wireless interference from other devices.</li> <li>• Ensure the controller's battery is sufficiently charged.</li> <li>• Restart your Nintendo Switch or PC.</li> </ul>
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none"> <li>• Restart the controller and attempt to re-pair.</li> <li>• Ensure no debris is obstructing the buttons.</li> <li>• Test the controller with another game or application to rule out software issues.</li> </ul>
TURBO function is not working.	Ensure you are pressing the TURBO button simultaneously with the desired action button. Some games may not support rapid-fire functions.

## SPECIFICATIONS

---

- **Brand:** Freaks and Geeks
- **Model:** SWITCHMANETTE
- **Model Number:** 299128
- **Connectivity:** Wireless (Bluetooth)
- **Compatible Platforms:** Nintendo Switch, Windows PC
- **Number of Buttons:** 16
- **Weight:** 250 Grams
- **Dimensions (L x W x H):** 10 x 5 x 1.3 cm
- **Color:** Black

## WARRANTY INFORMATION

---

The Freaks and Geeks SWITCHMANETTE Wireless Controller comes with a **2-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation provided with your product or contact customer support.

## CUSTOMER SUPPORT

---

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Freaks and Geeks customer support. Visit the official Freaks and Geeks website for contact information and additional resources.