

[manuals.plus](#) /› [Rowenta](#) /› [Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner User Manual](#)

Rowenta RO7260EA

Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner. Please read these instructions carefully before using the appliance and keep them for future reference.

The Rowenta RO7260EA combines exceptional cleaning performance with an ergonomic design. It delivers reliable results thanks to its high-efficiency 2-position suction head, ensuring optimal glide on hard floors. Its deep cleaning performance and energy efficiency are combined with advanced features for a superior cleaning experience.

Key Features:

- Delivers impeccable results and exceptional glide with a modern design.
- Excellent energy efficiency combined with unparalleled performance levels.
- Redesigned ergonomic design for greater comfort, fluidity, and freedom of movement.
- High-efficiency 2-position suction head for deep cleaning and perfect glide on hard floors.



Image 1.1: The Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner shown with its main body, hose, telescopic tube, and various cleaning attachments.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before

servicing.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust container and/or filters in place.

3. PACKAGE CONTENTS

Your Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner package includes the following components:

- Main vacuum cleaner unit
- Flexible hose
- Telescopic tube
- High-efficiency 2-position suction head
- Mini motorized brush
- Upholstery brush
- Crevice tool

4. ASSEMBLY AND SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle of the flexible hose. Adjust the length of the tube to a comfortable height by pressing the adjustment button and extending or retracting.
3. **Install the Suction Head:** Connect the desired suction head (e.g., the high-efficiency 2-position head) to the end of the telescopic tube until it locks.
4. **Attach Accessories:** For specific cleaning tasks, attach the mini motorized brush, upholstery brush, or crevice tool directly to the hose handle or the telescopic tube.

45,5 cm



Image 4.1: The vacuum cleaner's dimensions are approximately 45.4 cm (length) x 31.3 cm (height), providing a compact design for storage and maneuverability.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Off

- **To Power On:** Plug the power cord into a suitable electrical outlet. Press the On/Off button located on the main unit.
- **To Power Off:** Press the On/Off button again. Unplug the appliance from the outlet after use.

5.2 Suction Control

The vacuum cleaner features adjustable suction power to suit different cleaning needs. Refer to the controls on the handle or main unit to increase or decrease suction.

5.3 Cleaning Different Surfaces

The high-efficiency 2-position suction head is designed for optimal performance on both hard floors and carpets. Adjust the setting on the suction head as needed:

- **Hard Floors:** Use the hard floor setting for smooth surfaces like tile, wood, or laminate.
- **Carpets/Rugs:** Switch to the carpet setting for effective cleaning of textile surfaces.

HAUTE PERFORMANCE



Image 5.1: The vacuum cleaner effectively cleans hard floor surfaces, demonstrating its high performance.

TOUS TYPES DE SOLS



Image 5.2: The vacuum cleaner is suitable for all types of floors, including carpets, ensuring thorough cleaning.

6. MAINTENANCE

6.1 Emptying the Dust Container

For optimal performance, empty the dust container regularly, especially when the 'Max' fill line is reached.

- 1. Detach the Container:** Press the release button to detach the dust container from the main unit.
- 2. Open the Lid:** Position the container over a waste bin and open the bottom lid to release the collected dust and debris.
- 3. Close and Reattach:** Close the lid securely and reattach the dust container to the vacuum cleaner until it clicks into place.

FACILE À VIDÉR



Image 6.1: The dust container is designed for easy emptying, simplifying the cleaning process.

6.2 Filter Cleaning

Regular cleaning of the filters is crucial for maintaining suction power and extending the life of your vacuum cleaner. Refer to the specific instructions in your product's full manual for detailed filter removal and cleaning procedures. Generally, filters should be rinsed under cold water and allowed to air dry completely before reinstallation.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, consult the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Reduced suction power	Full dust container; Clogged filter; Blockage in hose/tube/head	Empty dust container; Clean or replace filters; Check and clear blockages.

Problem	Possible Cause	Solution
Vacuum cleaner does not start	Not plugged in; Power outlet fault; On/Off button not pressed	Ensure plug is fully inserted; Test outlet with another appliance; Press On/Off button firmly.
Unusual noise	Foreign object in brush head or hose; Motor issue	Turn off and unplug, then check for and remove foreign objects; If noise persists, contact customer support.
Dust escaping from vacuum	Dust container not properly closed; Filter not correctly installed or damaged	Ensure dust container is securely closed; Check and correctly install or replace filters.

8. TECHNICAL SPECIFICATIONS

Below are the technical specifications for the Rowenta RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner:

Specification	Detail
Brand	Rowenta
Model Number	RO7260EA
Color	Cigarillo
Product Dimensions (L x W x H)	45.4 x 28.5 x 31.3 cm
Item Weight	6.3 Kilograms
Dust Container Capacity	2.5 Liters
Power	550 Watts
Voltage	200 Volts
Material	Plastic
Sound Level	67 Decibels
Filter Type	Cartridge
Surface Recommendation	Hard Floor
Power Source	Corded Electric
Cordless?	No
Special Features	Well-accessorized, Low energy consumption, Compact, Modern design, Large bin capacity, High performance

9. WARRANTY AND SUPPORT

Rowenta is committed to providing durable products. For the RO7260EA Silence Force Cyclonic Bagless Vacuum Cleaner, Rowenta commits to keeping spare parts available for 15 years after purchase for the majority of its products. This commitment ensures long-term support and repairability for your appliance.

For further assistance, troubleshooting beyond this manual, or to inquire about spare parts and repairs, please visit the official Rowenta website or contact their customer support.

CALCUL DE L'INDICE DE RÉPARABILITÉ ET PRÉSENTATION DES PARAMÈTRES AYANT PERMIS DE L'ÉTABLIR				Aspirateur filaire		
FICHE D'INFORMATION À TRANSMETTRE AUX DEMANDEURS (cf. Article L. 541-9-2 du Code de l'environnement)						
Date du calcul			21/09/2022			
Nom ou marque commerciale du fournisseur			ROWENTA			
Adresse du fournisseur			GROUPE SEB : Chemin du virolet 27200 VERNON			
Référence du modèle donnée par le fournisseur			RO7260EA			
Critère	Sous-critère	Note du sous-critère sur 10	Coefficient du sous critère	Note du critère sur 20	Total des notes des critères sur 100	
CRITÈRE 1 : DOCUMENTATION	1.1 Durée de disponibilité de la documentation technique et relative aux conseils d'utilisation et d'entretien	9,2	2	18,5	94,1	
CRITÈRE 2 : DÉMONTABILITÉ, ACCÈS, OUTILS, FIXATIONS	2.1 Facilité de démontage des pièces de la liste 2*	7,8	1	17,8		
	2.2 Outils nécessaires (liste 2)	10,0	0,5			
	2.3 Caractéristiques des fixations entre les pièces de la liste 1** et de la liste 2	10,0	0,5			
CRITÈRE 3 : DISPONIBILITÉ DES PIÈCES DÉTACHÉES	3.1 Durée de disponibilité des pièces de la liste 2	8,5	1	17,9		
	3.2 Durée de disponibilité des pièces de la liste 1	9,8	0,5			
CRITÈRE 4 : PRIX DES PIÈCES DÉTACHÉES	3.3 Délais de livraison des pièces de la liste 2	8,5	0,3			
CRITÈRE 5 : CRITERE SPÉCIFIQUE	3.4 Délais de livraison des pièces de la liste 1	9,8	0,2			
Note de l'indice sur 10					9,4	

*liste 2 : liste des 3 à 5 pièces détachées au maximum (selon la catégorie d'équipements concernée) dont la casse ou les pannes sont les plus fréquentes ;

**liste 1 : liste de 10 autres pièces détachées au maximum (selon la catégorie d'équipements concernée) dont le bon état est nécessaire au fonctionnement de l'équipement.

Image 9.1: The repairability index for the Rowenta RO7260EA model, indicating a high score for ease of repair and spare parts availability.