

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Compact Power XXL RO4825EA Bagless Vacuum Cleaner User Manual](#)

Rowenta RO4825EA

Rowenta Compact Power XXL RO4825EA Bagless Vacuum Cleaner User Manual

Model: RO4825EA | Brand: Rowenta

1. INTRODUCTION AND OVERVIEW

The Rowenta Compact Power XXL RO4825EA is a high-performance bagless vacuum cleaner designed for efficient and convenient daily cleaning. It features an impressive 2.5-liter dust capacity in a compact design, ensuring extended cleaning sessions and easy storage. Equipped with an EffiTech motor and advanced cyclonic technology, this vacuum delivers deep cleaning results and long-lasting performance.

LONG CORD



Image: The Rowenta Compact Power XXL RO4825EA vacuum cleaner with its hose, telescopic tube, and floor nozzle.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance.

- Always ensure the vacuum cleaner is unplugged from the power outlet before performing any maintenance, cleaning, or assembly tasks.
- Do not use the appliance to vacuum water or any other liquids.
- Do not vacuum hot ashes, sharp objects, or flammable substances.
- Keep the appliance away from children and ensure they do not play with it.
- Do not strike or puncture the dust container, as it may contain air pressure.
- Keep the dust container away from direct natural light to prevent material degradation.
- Regularly check the power cord for any damage. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Use only genuine Rowenta accessories and spare parts.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Rowenta Compact Power XXL vacuum cleaner.

- Main Unit (Motor and Dust Container)
- Flexible Hose
- Telescopic Tube
- High-Efficiency Suction Head (Floor Nozzle)
- Integrated Multi-Purpose Brush (retractable on handle)
- Crevice Tool (convertible into a brush)
- Power Cord with Automatic Rewind



Image: Diagram showing various parts of the vacuum cleaner, including the main unit, hose, tube, and nozzles.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your vacuum cleaner before first use.

1. **Attach the Flexible Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle of the flexible hose. Adjust the length of the telescopic tube to a comfortable height by pressing the adjustment button and extending or retracting it.
3. **Attach the Floor Nozzle:** Connect the high-efficiency suction head (floor nozzle) to the end of the telescopic tube. Ensure it is firmly attached.
4. **Power Connection:** Extend the power cord to the desired length and plug it into a suitable power outlet.



Image: A person assembling the telescopic tube to the vacuum hose.

5. OPERATING INSTRUCTIONS

Operating your Rowenta Compact Power XXL vacuum cleaner is straightforward.

1. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
2. **Adjust Suction Power:** While there isn't a variable power control on the main unit, you can adjust suction by opening or closing the air flow regulator on the hose handle. Open for less suction (e.g., for delicate fabrics) and close for maximum suction.
3. **Using the Floor Nozzle:** The high-efficiency suction head is designed for optimal dust pickup on various floor types. For hard floors, ensure the brush is retracted. For carpets, extend the brush.
4. **Using Accessories:**
 - The integrated multi-purpose brush can be pulled out from the handle for cleaning furniture, curtains, or delicate surfaces.
 - The crevice tool is ideal for narrow spaces, corners, and upholstery. It can be converted into a brush for more versatile cleaning.
5. **Movement and Reach:** The vacuum features a long 6.2m power cord, providing an 8.8m operating radius for extensive cleaning without frequent unplugging.

TELESCOPIC TUBE



Image: A person vacuuming a floor, highlighting the long power cord for extended reach.

XXL CAPACITY



Image: The vacuum cleaner's floor nozzle effectively cleaning a wooden floor.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dust Container

The 2.5L XXL capacity dust container is designed for easy emptying.

1. **Disconnect Power:** Always unplug the vacuum cleaner before emptying.
2. **Remove Dust Container:** Press the release button and carefully remove the dust container from the main unit.
3. **Empty Contents:** Position the dust container over a waste bin and open the bottom flap to release the collected dust and debris.
4. **Reattach:** Close the flap securely and reinsert the dust container into the vacuum cleaner until it clicks into place.



Image: A hand holding the transparent dust container under a faucet, demonstrating how to empty or rinse it.

6.2. Cleaning the Filters

The vacuum cleaner features cyclonic filtration, a foam filter, and a high-efficiency filter. Regular cleaning is crucial.

1. **Disconnect Power:** Unplug the vacuum cleaner.
2. **Access Filters:** Remove the dust container. The filters are typically located within or around the dust container assembly. Refer to the diagrams for exact locations.
3. **Clean Filters:** Tap the filters gently to remove loose dust. For a more thorough clean, rinse the foam filter and the high-efficiency filter under cold running water. Do not use detergents or hot water.
4. **Dry Filters:** Allow all filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating devices.
5. **Reassemble:** Once completely dry, place the filters back into their positions and reattach the dust container.



Image: A hand rinsing the round high-efficiency filter under running water in a sink.



Image: A hand rinsing the cyclonic filter component under running water in a sink.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common solutions:

- **No Power:** Check if the power cord is securely plugged into the outlet and the vacuum cleaner. Ensure the outlet is functional.
- **Reduced Suction:**
 - Empty the dust container if it is full.
 - Clean or replace the filters as described in the Maintenance section.
 - Check the hose, telescopic tube, and floor nozzle for any blockages.
 - Ensure the air flow regulator on the handle is closed for maximum suction.
- **Unusual Noise:** This could indicate a blockage in the hose or nozzle, or a foreign object caught in the brush head. Disconnect power and inspect.
- **Overheating:** If the vacuum cleaner stops working and feels hot, it may have overheated. Unplug it and allow it to cool down for at least 30 minutes. Check for blockages and clean filters before restarting.

If the problem persists after following these steps, please contact Rowenta customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Rowenta
Model Number	RO4825EA
Color	Black
Product Dimensions (L x W x H)	40.9 x 27.6 x 29.1 cm
Weight	3.8 Kilograms
Dust Container Capacity	2.5 Liters
Power	550 Watts
Voltage	200V
Material	Plastic
Energy Class	A to E
Noise Level	75 Decibels
Special Features	Cyclonic Filtration + Foam Filter + High-Efficiency Filter
Filter Type	Foam
Surface Recommendation	All floor types
Power Source	Corded Electric
Cordless	No
Included Components	Crevice tool



Image: Diagram showing the dimensions (length and height) of the vacuum cleaner unit.

9. WARRANTY AND SUPPORT

Rowenta is committed to providing quality products and support.

- **Repairability:** Rowenta offers a 15-year repairability commitment at a fair price. This is supported by a global network of 6200 repair centers, contributing to environmental protection and waste reduction.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please refer to the contact information provided in your product packaging or visit the official Rowenta website.



Image: The Rowenta brand logo, representing the manufacturer's commitment to quality and service.