

Naxa NDS-1518D

Naxa NDS-1518D Portable Bluetooth Speaker System User Manual

Model: NDS-1518D

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Naxa NDS-1518D Portable Bluetooth Speaker System. Please read this manual thoroughly before using the product to ensure proper function and to maximize your listening experience. Retain this manual for future reference.

WHAT'S IN THE BOX

Carefully unpack all items and ensure the following components are present:

- 2x Wired Microphones
- 2x Speaker Stands
- 1x Remote Control
- 1x User Manual (this document)
- 2x UL Power Adapters

SETUP

1. Speaker Placement and Stand Assembly

Position the speakers in your desired location. If using the included stands, carefully assemble them according to the stand's instructions and securely mount each speaker onto its stand. Ensure the stands are stable on a flat surface to prevent tipping.



Image: Two Naxa NDS-1518D speakers with their included stands, ready for setup.

2. Power Connection

Connect each speaker to a power outlet using the provided UL Power Adapters. The speakers can operate on battery power or while connected to AC power.

3. Initial Power On

Press the Power button on each speaker to turn them on. The LED display will illuminate.



Image: Front view of the Naxa NDS-1518D speaker, showing the illuminated woofer and grille.

4. True Wireless Sync (TWS) Setup

To use both speakers wirelessly as a stereo pair:

1. Ensure both speakers are powered on and in Bluetooth mode.
2. On one speaker (this will be the primary speaker), press and hold the TWS button. The speaker will emit

a sound indicating it is searching for another TWS device.

3. The primary speaker will automatically connect to the second speaker. A confirmation sound will indicate successful pairing.
4. Once paired, the primary speaker will act as the main unit, and audio will play through both speakers in stereo.

OPERATING INSTRUCTIONS

1. Bluetooth Mode

After powering on, the speaker will typically default to Bluetooth mode. If not, press the 'Mode' button until 'BLUE' or 'BT' appears on the LED display.

- On your mobile device, enable Bluetooth and search for available devices.
- Select 'NAXA NDS-1518D' from the list.
- Once connected, you will hear a confirmation tone, and you can stream audio from your device.

2. USB/TF Card Playback

Insert a USB flash drive or TF (MicroSD) card into the respective slot. The speaker will automatically switch to USB/TF mode and begin playing compatible audio files. Use the 'Previous', 'Play/Pause', and 'Next' buttons to control playback.

3. AUX Input

Connect an external audio device (e.g., MP3 player, laptop) to the speaker's AUX input using a 3.5mm audio cable (not included). Press the 'Mode' button until 'AUX' appears on the display. Audio will be played from the connected device.

4. FM Radio

Press the 'Mode' button to select FM radio mode. The display will show the radio frequency.

- Press the 'Play/Pause' button to automatically scan and save available FM stations.
- Use the 'Previous' and 'Next' buttons to navigate through the saved stations.

5. Microphone Usage

Connect the wired microphone to the MIC input jack on the speaker. Adjust the microphone volume using the dedicated MIC VOL knob. The microphone can be used in any audio mode.

6. Disco Light

The speaker features an integrated disco light. This light can be toggled on or off using the dedicated 'Light' button on the control panel or remote control.

MAINTENANCE

To ensure the longevity and optimal performance of your speaker system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior surfaces of the speakers. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** If the speakers have internal rechargeable batteries, ensure they are fully charged before long-term storage to prevent battery degradation.

- **Ventilation:** Ensure the speaker's ventilation openings are not blocked to prevent overheating.

TROUBLESHOOTING

If you encounter issues with your Naxa NDS-1518D speaker system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power adapter not connected; Battery drained	Ensure power adapter is securely connected and plugged into a working outlet; Charge the battery.
No sound	Volume too low; Incorrect mode selected; Device not connected	Increase volume; Press 'Mode' button to select correct input; Re-pair Bluetooth device or check AUX/USB connection.
Bluetooth pairing failure	Speaker not in pairing mode; Device too far; Interference	Ensure speaker is in Bluetooth mode; Move device closer; Turn off other Bluetooth devices.
TWS connection issues	Speakers too far apart; TWS pairing not initiated correctly	Ensure speakers are within 33 feet; Repeat TWS pairing steps.
Microphone not working	Microphone not connected; MIC VOL too low	Ensure microphone is fully plugged in; Increase MIC VOL knob.

SPECIFICATIONS

Detailed technical specifications for the Naxa NDS-1518D Portable Bluetooth Speaker System:



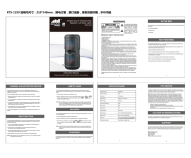


Feature	Detail
Model Number	NDS-1518D
Mounting Type	Freestanding, Plug Mount
Power Source	Battery Powered
Connector Type	USB
Item Weight	15.75 Pounds (per speaker)
Number of Channels	2 (stereo with TWS)
Audio Input	AUX, MIC
Product Dimensions (L x W x H)	15.2 x 11.9 x 23.2 inches (per speaker)
Connectivity Technology	AUX, Bluetooth, USB
Compatible Devices	Home Theater, Bluetooth-enabled devices, USB/TF media players

Feature	Detail
UPC	840005015957

WARRANTY AND SUPPORT

Naxa Electronics, Inc. provides a limited warranty for this product. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your purchase or visit the official Naxa website. For technical support or service inquiries, please contact Naxa customer service through their official channels.

Related Documents - NDS-1518D

 <p>15" Dual Portable Speakers with Bluetooth® & TWS NDS-1518D</p> <p>Instruction Manual Please read carefully before use and keep for future reference</p>	<p>Sound Pro NDS-1518D 15" Dual Portable Speakers with Bluetooth & TWS - Instruction Manual</p> <p>Comprehensive instruction manual for the Sound Pro NDS-1518D 15-inch dual portable speakers. Covers safety guidelines, control panel operation, remote control functions, Bluetooth pairing, TWS setup, display settings, battery information, technical specifications, FCC compliance, and support contact details.</p>
 <p>Wireless Portable Karaoke Speaker NDS-1512</p> <p>Instruction Manual Please read carefully before use and keep for future reference</p>	<p>Naxa NDS-1512 Wireless Portable Karaoke Speaker - User Manual</p> <p>Instruction manual for the Naxa NDS-1512 Wireless Portable Karaoke Speaker. Learn about safety instructions, front panel controls, Bluetooth pairing, specifications, and support information from Naxa.</p>
 <p>Portable Dual Wireless Party Speakers with Disco Lights KTS-1259</p> <p>User Manual Please read carefully before use and keep for future reference</p>	<p>Naxa KTS-1259 Portable Dual Wireless Party Speakers with Disco Lights User Manual</p> <p>User manual for the Naxa KTS-1259 portable dual wireless party speakers with disco lights. Includes pairing instructions, USB/TF card usage, FM radio, TWS function, charging, specifications, and FCC notice.</p>
 <p>Portable Bluetooth Speaker KTS-1259</p> <p>User Manual Please read carefully before use and keep for future reference</p>	<p>NAXA KTS-1259 Portable Bluetooth Speaker User Manual</p> <p>Comprehensive user manual for the NAXA KTS-1259 portable Bluetooth speaker, covering key features, important safety instructions, and basic operation for Bluetooth, USB, and memory card playback.</p>
 <p>8" Portable Speaker with Bluetooth® & TWS NDS-8500</p> <p>Instruction Manual Please read carefully before use and keep for future reference</p>	<p>Naxa NDS-8500 8" Portable Speaker with Bluetooth & TWS Instruction Manual</p> <p>Instruction manual for the Naxa NDS-8500 8-inch portable speaker with Bluetooth and TWS functionality. Includes safety instructions, back panel and remote control descriptions, pairing guide, TWS function explanation, display system settings, battery information, specifications, and FCC notice.</p>



[Sound Pro NDS-1231 12" Portable Speaker with Bluetooth & TWS - Instruction Manual](#)

Official instruction manual for the Sound Pro NDS-1231 12-inch portable speaker. Learn about setup, Bluetooth pairing, TWS function, remote control, specifications, and safety guidelines.