#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Naxa /
- > Naxa NAS-3010 Portable Bluetooth Speaker User Manual

#### Naxa NAS-3010

# Naxa NAS-3010 Portable Bluetooth Speaker User Manual

Model: NAS-3010

# 1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Naxa NAS-3010 Portable Bluetooth Speaker. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience.

# 2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- Naxa NAS-3010 Portable Bluetooth Speaker
- USB Charging Cable
- Carrying Strap
- · User Manual (this document)

# 3. Product Features

The Naxa NAS-3010 Portable Bluetooth Speaker offers a range of features designed for versatile audio playback:

- Bluetooth Connectivity: Wirelessly stream audio from Bluetooth-enabled devices.
- Multiple Playback Options: Supports TF memory cards, USB flash drives, and auxiliary input.
- FM Radio Tuner: Listen to local radio stations.
- High-Power Speaker: Delivers clear and dynamic sound.
- Portable Design: Modern, stylish design with an included carrying strap for easy transport.
- LED Indicator: Provides status updates.

# 4. Controls and Ports

Familiarize yourself with the speaker's controls and connection ports for optimal use.



**Image 1:** Front and top view of the Naxa NAS-3010 speaker, showing the main speaker grille, Naxa logo, and control buttons on the top panel. The carrying strap attachment points are also visible.



**Image 2:** A lifestyle image showing the Naxa NAS-3010 Portable Bluetooth Speaker being carried with its strap, demonstrating its portability. This image highlights the speaker's overall design and size.

While specific button labels are not fully visible in the provided images, common controls for portable

Bluetooth speakers typically include:

- Power Button: To turn the speaker on or off.
- Mode Button: To switch between Bluetooth, FM Radio, USB/TF, and AUX modes.
- Play/Pause Button: To control audio playback.
- Volume Up/Next Track Button: To increase volume or skip to the next track.
- Volume Down/Previous Track Button: To decrease volume or go to the previous track.
- Charging Port: For connecting the USB charging cable.
- USB Port: For playing audio from USB flash drives.
- TF Card Slot: For playing audio from TF memory cards.
- AUX Input: For connecting external audio devices via a 3.5mm audio cable.

# 5. SETUP

# 5.1 Charging the Speaker

- 1. Connect the small end of the included USB charging cable to the charging port on the speaker.
- 2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
- 3. The LED indicator light will illuminate to show that the speaker is charging.
- 4. Once fully charged, the LED indicator light will change or turn off (refer to the specific behavior of your unit's LED).

Note: Ensure the speaker is fully charged before first use for optimal battery life.

# 5.2 Attaching the Carrying Strap

The included carrying strap can be attached to the designated loops on either side of the speaker for convenient portability.

- 1. Locate the metal rings or loops on both ends of the speaker.
- 2. Attach each end of the carrying strap to these loops securely.

#### 6. OPERATING INSTRUCTIONS

# 6.1 Powering On/Off

Press and hold the Power button (usually marked with a power symbol) for a few seconds to turn the speaker ON or OFF. An audible prompt or LED indicator will confirm the status.

#### 6.2 Bluetooth Mode

- 1. Turn on the speaker. It will typically enter Bluetooth pairing mode automatically, indicated by a flashing LED light and an audible prompt.
- 2. On your Bluetooth-enabled device (smartphone, tablet, etc.), go to the Bluetooth settings and enable Bluetooth.
- 3. Scan for available devices. You should see "NAS-3010" or a similar name appear in the list.
- 4. Select "NAS-3010" to pair. Once successfully paired, the LED indicator will stop flashing and an audible confirmation will sound.
- 5. You can now play audio from your device through the speaker.

Note: If prompted for a password, enter "0000".

#### 6.3 FM Radio Mode

- 1. Turn on the speaker. Press the "Mode" button repeatedly until you hear the FM radio function activate.
- 2. To auto-scan and save available stations, press and hold the Play/Pause button. The speaker will scan and store stations automatically.
- 3. Use the Volume Up/Next Track and Volume Down/Previous Track buttons to navigate between saved stations.

# 6.4 USB/TF Card Playback

- Insert a USB flash drive or TF memory card (with audio files) into the respective port/slot on the speaker.
- 2. The speaker should automatically detect the storage device and begin playing audio. If not, press the "Mode" button to switch to USB or TF card mode.
- 3. Use the Play/Pause, Volume Up/Next Track, and Volume Down/Previous Track buttons to control playback.

# 6.5 Auxiliary Input (AUX) Mode

- 1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
- 2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output of your external audio device.
- 3. Press the "Mode" button on the speaker until it switches to AUX mode.
- 4. Play audio from your external device. Volume can be controlled via both the speaker and the external device.

# 7. MAINTENANCE

To ensure the longevity and optimal performance of your Naxa NAS-3010 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, waxes, or solvents.
- Storage: Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- Water Exposure: This speaker is NOT waterproof. Avoid exposing it to water, rain, or excessive
  moisture.
- Battery Care: Recharge the battery regularly, even if the speaker is not used frequently, to maintain battery health. Avoid fully discharging the battery for prolonged periods.

# 8. TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions:

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not turn on.	Ensure the battery is charged. Connect the speaker to a power source using the USB charging cable.  Press and hold the Power button for a few seconds.
No sound or low volume.	Increase the volume on both the speaker and the connected device.  Ensure the speaker is in the correct mode (Bluetooth, AUX, USB, TF).  Check if the audio cable is securely connected in AUX mode.
Bluetooth pairing fails.	Ensure the speaker is in Bluetooth pairing mode (flashing LED).  Make sure Bluetooth is enabled on your device and it's within range (typically 10 meters).  Forget or remove "NAS-3010" from your device's Bluetooth list and try pairing again.  Turn off and on both the speaker and your device.
FM radio reception is poor.	Move the speaker to a location with better signal reception.  Perform an auto-scan again to ensure all available stations are saved.

# 9. SPECIFICATIONS

Detailed technical specifications for the Naxa NAS-3010 Portable Bluetooth Speaker:

Model: NAS-3010Speaker Type: Stereo

• Connectivity Technology: Bluetooth, USB

• Compatible Devices: Smartphone

• Power Source: Battery Powered (2 Lithium Ion batteries included)

• Audio Output Mode: Mono

• Control Method: App (Note: While listed, primary control is via physical buttons on the device.)

• **Product Dimensions:** 13.5 x 6.1 x 4.6 inches

Item Weight: 3.3 poundsUPC: 840005015971

• Manufacturer: Naxa Electronics

• Waterproof: No

# 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Naxa Electronics website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance, you may contact Naxa customer support directly through their official channels.

