

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Whirlpool](#) /

› [Whirlpool 7.5 Kg Bloom Wash Pro Fully-Automatic Top Loading Washing Machine User Manual](#)

Whirlpool 360 BW PRO (540) H 7.5 GRAPHITE 10YMW

Whirlpool 7.5 Kg Bloom Wash Pro Fully-Automatic Top Loading Washing Machine User Manual

Model: 360 BW PRO (540) H 7.5 GRAPHITE 10YMW

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool 7.5 Kg Bloom Wash Pro Fully-Automatic Top Loading Washing Machine. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The Whirlpool Bloom Wash Pro washing machine is designed for optimal laundry care, featuring a 7.5 kg capacity suitable for 3-4 members. It boasts a 5-star energy efficiency rating and a powerful 740 RPM motor for faster drying. Key features include an In-Built Heater, 6th Sense Technology, and 12 wash programs to handle various fabric types and stain levels.



Front view of the Whirlpool 7.5 Kg Bloom Wash Pro Fully-Automatic Top Loading Washing Machine, highlighting the in-built heater feature.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not reach into the tub while it is filling with water or during a wash cycle.

3. SETUP AND INSTALLATION

Your washing machine is designed for freestanding installation. Proper setup is crucial for optimal performance and safety.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Report any damage immediately to your retailer.

3.2 Location

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. The product dimensions are approximately 57 cm (Depth) x 59 cm (Width) x 102.5 cm (Height).



Side view of the washing machine with key dimensions indicated.

3.3 Water Connection

Connect the water inlet hoses to the appropriate hot and cold water taps. Ensure connections are tight to prevent leaks. The machine requires a standard water supply.

3.4 Drain Hose

Position the drain hose securely into a standpipe or laundry tub, ensuring it is not kinked or obstructed.

3.5 Power Connection

Plug the power cord into a grounded electrical outlet. Verify that the voltage and frequency match the specifications listed on the appliance's rating label.



Rear view of the washing machine, illustrating the power cord and hose connections.

4. OPERATING INSTRUCTIONS

Your Whirlpool washing machine features a fully automatic control console with various programs and settings for efficient washing.

4.1 Control Panel Overview

The control panel allows you to select wash programs, adjust settings, and monitor the wash cycle.



Detailed view of the washing machine's control panel with various program options.

4.2 Wash Programs

Select from 12 specialized wash programs to suit your laundry needs:

- **Daily:** For everyday clothes.
- **Heavy:** For heavily soiled garments.
- **Delicate:** For fragile items requiring gentle care.
- **Whites:** Optimized for white fabrics.
- **Stainwash:** Targets tough stains.
- **Anti-Bac:** Provides a hygienic wash.
- **Woollens:** Gentle cycle for wool garments.
- **Bedsheet:** Specifically for bed linens.
- **Eco Wash:** Energy-efficient wash cycle.

- **Rinse + Spin:** For rinsing and spinning only.
- **Spin:** For draining water and spinning clothes.
- **Wash Only:** For washing without rinsing or spinning.



Visual representation of the 12 available wash programs.

4.3 Special Features

- **In-Built Heater & 3 Hot Water Modes:** The integrated heater allows for washing with warm, hot, or allergen-free water, effectively removing up to 50 tough stains and 99.9% of germs and allergens.

Customised care for fabrics with **3 Hot Water Modes**



Explanation of the three hot water modes and their applications.

- **6th Sense Technology:** Intelligently senses and adapts to your wash load, optimizing water and detergent usage.
- **ZPF Technology (Zero Pressure Fill):** Ensures the wash tub fills 50% faster even with low water pressure.
- **Dynamix:** Minimizes detergent residue on clothes.
- **Sipro Wash:** Provides a thorough and gentle wash action.
- **Auto Tub Clean:** Automatically cleans the wash tub to maintain hygiene.
- **Express Wash:** For quick washing of lightly soiled items.
- **Removes 48 Hour Old Stains:** Advanced stain removal capability for older stains.

Visual details of the 360 Bloomwash Pro design, impeller, and soft close lid.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Lint Filter

It is advisable to clean the lint filter after every few wash cycles to prevent lint buildup and ensure efficient drainage.

5.2 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

5.3 Tub Cleaning

Utilize the 'Auto Tub Clean' feature regularly to keep the wash tub hygienic and free from residue.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

6.1 Machine Does Not Drain Properly

If your washing machine is not draining correctly, check for any clogs in the drain hose or pump filter. Ensure the drain hose is not obstructed or kinked. Verify that the drain hose is positioned at the correct height as per installation guidelines.

6.2 Excessive Noise or Vibration

Ensure the machine is level and all four feet are in firm contact with the floor. Distribute the laundry evenly inside the tub to prevent imbalance during the spin cycle. Remove any shipping bolts if they were not removed during installation.

6.3 Machine Does Not Start

Check if the power cord is securely plugged into a working outlet. Ensure the water supply taps are open. Close the lid completely. Press the 'Start/Pause' button firmly. Check if any error codes are displayed on the control panel and refer to the specific error code section in the full manual (if available).

7. SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model	360 BW PRO (540) H 7.5 GRAPHITE 10YMW
Energy Efficiency	5 Star Rating
Capacity	7.5 Kilograms
Maximum Rotational Speed	740 RPM
Noise Level Washing	63 Decibels
Noise Level Spinning	72 dB
Installation Type	Freestanding

Feature	Detail
Form Factor	Top-Loading
Special Features	Inbuilt Heater
Colour	Graphite
Control Console	Fully Automatic
Number of Option Cycles	12
Access Location	Top Load
Voltage	230 Volts
Material	Stainless Steel
Item Weight	7 kg 60 g
Product Dimensions (LxWxH)	57D x 59W x 102.5H Centimeters



Energy Savings Guide indicating the 5-star rating for efficiency.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Whirlpool washing machine comes with a **2-year comprehensive warranty** on the appliance and a **10-year warranty on the motor**.

8.2 Customer Support

For any assistance, service requests, or inquiries, please contact Whirlpool customer support:

- **Manufacturer:** Whirlpool of India Ltd.
- **Address:** Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India
- **Email:** helpdeskindia@whirlpool.com
- **Toll-Free:** 1800 208 1800

12 WASH PROGRAMS



Daily



Heavy



Delicates



Whites



Stainwash



Anti-bacterial



Woollens



Bedsheets



Eco Wash



Rinse + Dry



Dry Only



Wash Only

Information regarding Whirlpool's service staff safety protocols.