

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Citizen](#) /

› [Citizen Promaster Sea Aqualand Eco-Drive Watch BJ2169-08E Instruction Manual](#)

Citizen BJ2169-08E

Citizen Promaster Sea Aqualand Eco-Drive Watch

MODEL: BJ2169-08E

Introduction

This manual provides essential information for the proper use and care of your Citizen Promaster Sea Aqualand Eco-Drive Watch, Model BJ2169-08E. This timepiece features Citizen's innovative Eco-Drive technology, powered by light, eliminating the need for battery replacement. It is designed for robust performance, including diving capabilities, and offers a range of advanced functions for daily wear and aquatic adventures.



Front view of the Citizen Promaster Sea Aqualand Eco-Drive Watch, showcasing its dial, hands, and bezel.

Setup

1. Initial Charging (Eco-Drive)

Your Eco-Drive watch is powered by light. Upon receiving your watch, expose it to a bright light source (natural or artificial) for several hours to ensure it is fully charged. A full charge can last for months, even in darkness. Avoid storing the watch in dark places for extended periods to prevent it from stopping.

Video: Explanation of Citizen's Eco-Drive Technology and how it powers the watch using light.

2. Time and Date Setting

Refer to the detailed instructions on the official Citizen website for specific time and date setting procedures for the BJ2169-08E model. Generally, the crown and pushers are used to adjust the time, date, and other functions. The watch supports 12/24 hour time formats.

3. Time Zone Adjustment

This watch features easy time zone adjustment. Consult the full instruction manual on the Citizen website for precise steps to switch between different time zones, such as Eastern and Central time, using the main dial and top buttons.

Video: Overview of Citizen Eco-Drive watches, including features and general operation.

Operating Instructions

1. Chronograph Function

The integrated 1-second chronograph can measure elapsed time up to 50 minutes. Use the pushers on the side of the watch to start, stop, and reset the chronograph. Refer to the detailed manual for specific button operations.

2. Depth Display and Dive Mode

The Aqualand model includes a depth display function, measuring depths up to 50 meters. It features an Auto Start Dive Mode, which automatically activates when submerged, and a Maximum Depth Memory to record your deepest dive. Ensure all crowns are securely screwed down before water exposure.

3. Power Reserve Indicator

The watch is equipped with a power reserve indicator, typically displayed on a sub-dial or via the chronograph second hand, to show the remaining charge level. Keep the watch exposed to light to maintain an optimal power reserve.

4. Rotating Bezel

The stainless steel bezel with blue accents is unidirectional and can be rotated to mark elapsed time, particularly useful for dive timing. Align the bezel's zero marker with the minute hand at the start of an event.



Side view of the watch, highlighting the crown and pushers used for various functions.

Maintenance

1. Cleaning

Clean your watch regularly with a soft, damp cloth. For the polyurethane strap, mild soap and water can be used. Ensure the watch is completely dry before storing or wearing. Avoid harsh chemicals or abrasive materials.

2. Water Resistance

This watch is water resistant to 200 meters (660 feet), suitable for professional marine activity and serious surface water sports, but not for saturation diving. Always ensure the crown is pushed in and screwed down tightly before any water

exposure.

3. Sapphire Crystal Care

The watch features a durable sapphire crystal, known for its scratch resistance. While highly resilient, it is not entirely scratch-proof. Avoid unnecessary impacts or contact with extremely hard surfaces.

4. Luminous Elements

The luminous hands and markers absorb light and glow in low-light conditions, providing enhanced readability. Exposure to bright light will recharge their luminescence.

Troubleshooting

If your watch stops or its functions appear erratic, first ensure it has received sufficient light exposure for charging. If the issue persists, consult the detailed troubleshooting guides available on the official Citizen website. Many common issues can be resolved by following the specific instructions for your movement.



Rear view of the watch, displaying the case back with model information and the polyurethane strap.

Specifications

- Model Number:** BJ2169-08E
- Movement:** Eco-Drive (Light-powered Quartz)
- Case Material:** Stainless Steel
- Crystal:** Sapphire Crystal
- Strap Material:** Polyurethane

- **Water Resistance:** 200 Meters (660 feet)
- **Functions:** Chronograph (1-second, up to 50 minutes), Depth Display (up to 50 meters), Auto Start Dive Mode, Maximum Depth Memory, 12/24 Hour Time, Power Reserve Indicator, Date
- **Bezel:** Unidirectional Rotating Bezel with Blue Accents
- **Luminescence:** Luminous Hands and Markers
- **Dimensions:** Package Dimensions: 6.26 x 5.16 x 4.17 inches; 5.38 ounces

Warranty and Support

Your Citizen Promaster Sea Aqualand Eco-Drive Watch is covered by a **5-Year Limited Warranty**. For detailed warranty terms, service requests, or to access comprehensive digital manuals and video tutorials specific to your watch's movement, please visit the official Citizen Watch Company website. Online resources provide step-by-step guides for all functions and adjustments.



The Citizen Promaster Sea Aqualand Eco-Drive Watch packaged in its durable protective case.

© 2024 Citizen Watch Company. All rights reserved.