

BLACK+DECKER TO1785SG

BLACK+DECKER Crisp N Bake Air Fry 4-Slice Toaster Oven

MODEL: TO1785SG

User Instruction Manual

1. Introduction and Overview

Thank you for choosing the BLACK+DECKER Crisp N Bake Air Fry 4-Slice Toaster Oven. This versatile appliance is designed to simplify your cooking with its multi-functional capabilities, including air frying, baking, broiling, toasting, and keeping food warm. Its compact design makes it ideal for any kitchen countertop, while its spacious interior can accommodate up to four slices of bread or a 9-inch pizza. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new toaster oven.

2. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Do not attempt to dislodge food when appliance is plugged in.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place paper, cardboard, plastic, or other flammable materials in the oven.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Food should not extend beyond the edges of the baking pan.
- Always use oven mitts or potholders when touching any hot surface of the oven.

3. Getting Started

Unpacking and Initial Setup

1. Remove all packaging material, any stickers, and the plastic band around the power plug.
2. Remove all parts from the carton and wash them as instructed in the "Cleaning and Maintenance" section.
3. Select a location where this unit is to be used, allowing enough space from the back of the unit and wall to allow heat to flow without damage to cabinets and walls.
4. Ensure the crumb tray is in place before use.

First Use (Burn-Off)

This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven. When using the oven for the first time, you may notice smoke or a slight odor during the initial few minutes. This is normal. It is recommended to run the oven empty for about 10-15 minutes on the highest temperature setting to burn off any manufacturing residues.

4. Parts and Features



1. Extra deep curved interior

† 2. Air Fry mesh tray
(Part# TOD1775-01)

† 3. Wire rack/broil rack

† 4. Bake pan/drip tray
(Part# TO1303-05)

5. Easy-view glass door

6. Power indicator light

7. Temperature selector knob

8. Toast shade/timer knob with stay
on setting*
(knob turns unit ON or OFF O)

† 9. Crumb tray (Part# TO1700-01)

Note: † indicates consumer replaceable/
removable parts

GETTING STARTED

This appliance is intended for household use only.

- Remove all packing material, any stickers, and the plastic band around the power plug.
- Remove and save literature.
- Please go to www.prodprotect.com/blackanddecker to register your warranty.
- Wash all removable parts as instructed in Care and Cleaning Section.
- Select a location where this unit is to be used, allowing enough space from the back of the unit and wall to allow heat to flow without damage to cabinets and walls.
- Ensure crumb tray is in place before use.

 
Important information about using your oven

1. This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
2. When using the oven for the first time, you may notice smoke or a slight odor during the first few minutes. This is normal.
3. Be sure food or baking pan does not come within 1 1/2 inches (3.8 cm) of the top heating elements.
4. Food should not extend beyond the edges of the baking pan to avoid drippings from falling onto the heating elements.
5. Many factors influence cook times such as altitude, humidity and variations in electrical grids. For best results, monitor the end of the cook cycle.
6. **Cooking Containers:** Metal, ovenproof glass or ceramic bakeware can be used in your oven. Follow the manufacturer's instructions. Be sure the top edge of the container is at least 1 1/2 inches (3.81cm) away from the upper heating elements.

TOAST

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to TOAST position.
2. Open oven door and insert wire rack.
3. Place items to be toasted directly on wire rack and close the door.

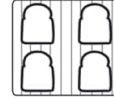

NOTE: for optimal toast, bread should be of uniform thickness and placed in one of the locations shown.

4. Turn toast shade/timer knob past 10 and then turn back to desired toast shade.
- NOTE:** You must set the toast shade selector knob as desired for the oven to begin toasting.
5. The on indicator light comes on and remains on until toasting cycle is complete.
6. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
8. Unplug appliance when not in use.

BAKE

NOTE: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature selector knob to the desired temperature.
2. Turn toast shade/timer knob past 10 and then to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself.)
3. The power indicator light comes on and remains on during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.
5. Once oven has preheated, open oven door and insert food. Close oven door.

NOTE: Use a metal, glass or ceramic baking dish placed on the wire rack

6. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to O (OFF) once cooking cycle is complete.
7. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
8. Unplug appliance when not in use.

Figure 1: Toaster Oven Components

1. Extra deep curved interior
2. Air Fry mesh tray (Part# TO17D75-01)
3. Wire rack/broil rack
4. Bake pan/drip tray (Part# TO1303-05)
5. Easy-view glass door
6. Power indicator light
7. Temperature selector knob
8. Toast shade/timer knob with stay on setting*
(*knob turns UNIT ON or OFF)
9. Crumb tray (Part# TO1700-01)

Note: Indicates consumer replaceable/removable parts

Key Features:

- **Air Fry Technology:** Utilizes high-intensity hot air to bake, brown, and crisp your favorite fried foods with little to no oil, offering a healthier alternative to deep frying.



Air Fry Technology

Deep fried taste without the fat!

Air Fry Technology in action, circulating hot air for crispy results.

- **Versatile 5 Cooking Functions:** Offers Air Fry, Bake, Broil, Toast, and Keep Warm settings for a wide range of cooking needs.



Two Control Knobs

Precise timer & 5 Cooking Functions

The two control knobs allow selection of temperature and cooking function.

- **EvenToast Technology™:** Ensures consistent and even toasting by distributing heat and infrared energy optimally.



EvenToast Technology™

EvenToast Technology ensures uniform browning of toast.

- **Compact Design, Spacious Interior:** Fits easily on countertops while accommodating up to 4 slices of bread or a 9-inch pizza.



Fits 9" pizza or 4 Slices of Bread

The oven's interior can fit up to 4 slices of bread or a 9-inch pizza.

- **Easy Cleanup:** Includes a removable crumb tray, air fry mesh tray, bake pan, and rack for convenient cleaning.



Includes

Rack, Pan and Air Fry Mesh Basket

Included accessories: rack, pan, and air fry mesh basket for versatile cooking and easy cleaning.

5. Setup

Before first use, ensure the toaster oven is placed on a stable, heat-resistant surface with adequate ventilation around it. Plug the appliance into a standard electrical outlet. Ensure all removable accessories (crumb tray, rack, pan, air fry basket) are correctly positioned for your desired cooking function.



Ensure proper placement and ventilation for the toaster oven.

6. Operating Instructions

Your toaster oven features two control knobs for easy operation: a Temperature Selector Knob and a Timer/Toast Knob.

General Operation:

1. Place food on the appropriate rack or pan.
2. Close the oven door.
3. Set the Temperature Selector Knob to the desired temperature or function (Warm, Min, Bake, Broil, Air Fry).
4. Set the Timer/Toast Knob to the desired cooking time or toast shade. For continuous operation, turn the knob to "Stay On".
5. The power indicator light will illuminate when the oven is operating.
6. When cooking is complete, the timer will ding, and the power indicator light will turn off.
7. Carefully remove food using oven mitts.

Specific Functions:

Toast:

- It is not necessary to preheat the oven for toasting.
- Set Temperature Selector Knob to TOAST position.
- Open oven door and insert wire rack.
- Place items to be toasted directly on the wire rack and close the door.
- Rotate the Timer/Toast Knob past 10, then set to desired toast shade. The knob will turn UNIT ON.
- The power indicator light comes on and remains on until toasting cycle is complete.
- When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
- Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.

Bake:

- For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.
- Set Temperature Selector Knob to the desired temperature (e.g., 350°F for baking).
- Turn Timer/Toast Knob past 10 and then to desired baking time. For longer baking times, you can use the "Stay On" setting.
- The power indicator light comes on and remains on during the entire baking time.
- The heating elements will cycle on and off to maintain even heat distribution.
- Once oven has preheated, open oven door and insert food. Close oven door.
- If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out. If not using the oven timer, turn the oven to O (OFF) once cooking cycle is complete.
- Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.

Air Fry:

- Place food in the Air Fry mesh tray. For best results, do not overcrowd the basket to allow for optimal air circulation.
- Insert the Air Fry mesh tray into the oven.
- Set Temperature Selector Knob to AIR FRY. Note: The Air Fry function operates at a fixed high temperature for optimal crisping.
- Set the Timer/Toast Knob to the desired air frying time.
- Monitor food during cooking and shake or flip items halfway through for even results.
- When cooking is complete, carefully remove the Air Fry mesh tray using oven mitts.

Broil:

- Place food on the bake pan or wire rack, depending on the recipe.
- Set Temperature Selector Knob to BROIL.
- Set the Timer/Toast Knob to the desired broiling time.
- Keep a close watch on food during broiling as it cooks quickly.
- When cooking is complete, carefully remove food using oven mitts.

Keep Warm:

- Place cooked food in the oven on the appropriate rack or pan.

- Set Temperature Selector Knob to WARM.
- Set the Timer/Toast Knob to the desired time for keeping warm, or to "Stay On" for continuous warming.

7. Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

Before Cleaning:

- Always unplug the appliance from the electrical outlet and allow it to cool completely before cleaning.

Cleaning Removable Parts:

- The crumb tray, air fry mesh tray, wire rack, and bake pan can be washed in warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
- For stubborn food residue, soak the parts in warm, soapy water before cleaning.

Cleaning Interior and Exterior:

- Wipe the interior walls and bottom of the oven with a damp cloth or sponge. For tougher stains, use a mild liquid cleanser. Avoid abrasive cleaners or scouring pads.
- Clean the exterior surface with a damp cloth or sponge. Dry thoroughly.
- Do not immerse the appliance in water or any other liquid.

8. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Appliance is not plugged in. Power outlet is not functioning.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker or try a different outlet.
Food is not cooking evenly.	Oven not preheated (for bake/broil). Food is overcrowded. Incorrect rack position.	Preheat the oven for 10 minutes before baking or broiling. Do not overcrowd the air fry basket or baking pan; cook in smaller batches if necessary. Refer to recipe for recommended rack position.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal. Run the oven empty for 10-15 minutes on the highest setting before first use. Ensure good ventilation.
Excessive smoke during cooking.	Grease or food debris on heating elements or crumb tray.	Unplug the oven and allow it to cool. Clean the interior, especially the crumb tray and heating elements, to remove any buildup. Ensure food is not dripping directly onto elements.

Problem	Possible Cause	Solution
Toast is too light or too dark.	Toast shade setting is incorrect.	Adjust the Timer/Toast Knob to a lighter or darker setting as desired for future use.

9. Specifications

- Brand:** BLACK+DECKER
- Model Number:** TO1785SG
- Product Dimensions:** 15.5 x 14.23 x 8.2 inches
- Item Weight:** 8.75 Pounds
- Color:** Gray
- Special Feature:** Air Fry
- Control Type:** Knob
- Door Style:** Dropdown Door
- What's in the Box:** Toaster Oven, Air Fry Basket, Bake Pan, Wire Rack



10. Warranty and Support

Limited 2-Year Warranty: This product is covered by a 2-year limited warranty from the date of original purchase. This warranty covers defects in material or workmanship. It does not cover damage resulting from accident, misuse, abuse, commercial use, or unauthorized modification of the product. For warranty service, technical support, or product information, please contact our customer service team:

Website: www.blackanddecker.com

Phone: Refer to your product registration card or visit our website for regional contact numbers.

Please have your model number (TO1785SG) and proof of purchase available when contacting support.