

## SELECLINE MP47874

# SELECLINE MP47874 Washing Machine Detergent Dispenser User Manual

Model: MP47874

## 1. INTRODUCTION

---

This manual provides instructions for the installation, usage, maintenance, and troubleshooting of your SELECLINE MP47874 washing machine detergent dispenser. This product is designed as a replacement part for compatible washing machines, ensuring proper detergent and softener distribution during wash cycles.

## 2. COMPATIBILITY

---

The SELECLINE MP47874 detergent dispenser is compatible with various washing machine models. Please verify your appliance's model number against the following list to ensure proper fit and function:

- Washing machine category products: 146327 DT0842CF1A 731379
- Washing machine category products: 146327 DT0842CF1A 727223
- Washing machine category products: 180426 690571
- Washing machine category products: 180426 730329
- Washing machine category products: 600081647

If your model is not listed, consult your washing machine's original manual or contact SELECLINE support for compatibility confirmation.

## 3. INSTALLATION

---

This section outlines the general steps for replacing your washing machine's detergent dispenser. Always ensure the washing machine is unplugged from the power outlet and the water supply is turned off before beginning any installation or maintenance.

1. **Preparation:** Unplug the washing machine from the electrical outlet and turn off the water supply.
2. **Remove Old Dispenser:** Carefully pull out the existing detergent drawer. Depending on your washing machine model, there may be a release tab or button to fully remove it.
3. **Disconnect Hoses (if applicable):** If the dispenser unit is connected to water inlet hoses, gently disconnect

them. Note their positions for reattachment.

4. **Remove Dispenser Housing:** Locate any screws or clips securing the dispenser housing to the washing machine. Remove them and carefully extract the old dispenser unit.
5. **Install New Dispenser:** Insert the SELECLINE MP47874 dispenser housing into the designated slot. Ensure it fits securely.
6. **Connect Hoses:** Reattach any water inlet hoses to their correct positions on the new dispenser.
7. **Insert Drawer:** Slide the detergent drawer into the new dispenser housing until it clicks into place.
8. **Final Checks:** Ensure all connections are secure. Restore water supply and plug the washing machine back into the power outlet.



Figure 1: Front view of the SELECLINE MP47874 detergent dispenser with the drawer partially open, showing compartments for detergent and softener.



Figure 2: Top-down view of the SELECLINE MP47874 detergent dispenser, illustrating the water inlet connections and internal structure.

## 4. USAGE

The detergent dispenser typically features multiple compartments for different laundry additives. Refer to your washing machine's user manual for specific compartment functions, but generally:

- **Main Wash Compartment:** For liquid or powder detergent used in the main wash cycle.
- **Pre-Wash Compartment:** For pre-wash detergent, if your washing machine has a pre-wash cycle.
- **Fabric Softener Compartment:** For liquid fabric softener. Do not overfill; ensure the level does not exceed the 'MAX' line.

Always follow the detergent manufacturer's instructions for dosage.

## 5. MAINTENANCE

Regular cleaning of the detergent dispenser is crucial to prevent blockages and ensure optimal performance.

1. **Remove Drawer:** Pull out the detergent drawer completely (refer to installation step 2).
2. **Clean Compartments:** Rinse the drawer under warm running water. Use a small brush (e.g., an old toothbrush) to remove any detergent residue, mold, or mildew from all compartments and the siphon cap (if present).
3. **Clean Housing:** Wipe the inside of the dispenser housing in the washing machine with a damp cloth to remove any buildup.
4. **Reinsert Drawer:** Once clean and dry, slide the drawer back into the housing until it locks into place.

Perform this cleaning monthly or as needed, especially if you notice detergent residue or poor dispensing.

## 6. TROUBLESHOOTING

If you encounter issues with your detergent dispenser, consider the following:

- **Detergent Not Dispensing:**
  - Check for blockages in the dispenser compartments or the water jets above the dispenser.
  - Ensure the water pressure to the washing machine is adequate.
  - Verify that the dispenser drawer is fully inserted.
- **Water Leaking from Dispenser:**
  - Ensure the dispenser drawer is not overfilled, especially the softener compartment.
  - Check for cracks or damage to the dispenser housing or drawer.
  - Verify that the water inlet hoses are securely connected and not leaking.
- **Residue Left in Dispenser:**
  - Clean the dispenser thoroughly as described in the Maintenance section.
  - Ensure you are using the correct type and amount of detergent for your water hardness and load size.

If problems persist, consult a qualified technician or contact SELECLINE customer support.

## 7. SPECIFICATIONS

Attribute	Detail
Brand	SELECLINE
Model Number	MP47874
ASIN	B084F4RYT3
Product Type	Washing Machine Detergent Dispenser (Spare Part)

## 8. WARRANTY AND SUPPORT

As this product is a spare part, specific warranty terms may vary. Information regarding the availability of spare parts is currently unavailable. For detailed warranty information or technical support, please refer to your original washing machine's documentation or contact the retailer or SELECLINE customer service directly.

For further assistance, you may visit the [SELECLINE brand page on Amazon.fr](#).

