

Deerma VC20 Plus

Deerma VC20 PLUS Handheld Cordless Vacuum Cleaner User Manual

Model: VC20 Plus | Brand: Deerma

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Deerma VC20 PLUS Handheld Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

The Deerma VC20 PLUS is a versatile and lightweight cordless vacuum cleaner designed for convenient cleaning of various surfaces in your home or car. Its wireless design offers freedom of movement, while its powerful suction ensures effective dirt and dust removal.

PRODUCT COMPONENTS

Familiarize yourself with the components included in your Deerma VC20 PLUS package:

- Main Vacuum Unit (Handheld)
- Extension Tube
- Floor Brush (with soft wool roller and screw scraper)
- 2-in-1 Crevice Tool / Brush Nozzle
- Small Brush Nozzle
- Power Adapter
- Wall Mount Bracket (for storage)



Image: Overview of the Deerma VC20 PLUS main unit and included accessories, including the extension tube, floor brush, and various nozzles.



Image: The Deerma VC20 PLUS assembled in its upright stick vacuum configuration, showcasing its sleek white design and the Deerma brand logo.

SETUP

Follow these steps to assemble your vacuum cleaner:

1. **Charging the Battery:** Before first use, fully charge the vacuum cleaner. Connect the power adapter to the charging port on the main unit and plug it into a wall outlet. The indicator lights will show charging status.
2. **Assembling the Stick Vacuum:**
 - Insert the extension tube into the main vacuum unit until it clicks securely.
 - Attach the floor brush to the other end of the extension tube, ensuring it clicks into place.
3. **Assembling the Handheld Vacuum:**
 - For handheld use, detach the extension tube and floor brush.
 - Directly attach the desired nozzle (e.g., 2-in-1 crevice tool or small brush nozzle) to the main vacuum unit.

Your browser does not support the video tag.

Video: Demonstrates the assembly of the Deerma VC20 PLUS, showing how to connect the extension tube and floor brush, and how to attach different nozzles for handheld use.

Your browser does not support the video tag.

Video: A vertical format video showcasing the assembly process and various cleaning applications of the Deerma VC20 PLUS.

OPERATING INSTRUCTIONS

The Deerma VC20 PLUS offers two cleaning modes for efficient and thorough cleaning:

1. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
2. **Using the Stick Vacuum:**
 - For floor cleaning, use the assembled stick vacuum with the floor brush. The soft wool roller brush with screw scraper is effective for various floor textures.
 - The flexible brush head allows for deep access under furniture.
3. **Using the Handheld Vacuum:**
 - Transform to handheld mode by detaching the extension tube.
 - Attach the 2-in-1 crevice tool for cleaning narrow gaps, corners, or furniture surfaces.
 - Attach the small brush nozzle for delicate surfaces or upholstery.
4. **Battery Indicator:** The battery indicator lights on the main unit show the remaining battery life. Ensure the unit is charged when the lights are low.



Image: The vacuum cleaner's flexible floor brush reaching under a bed to clean dust and debris, highlighting its maneuverability.



Image: Demonstrates the versatility of the vacuum, with one person using it in stick mode on a floor and another using it in handheld mode to clean stairs.



Image: A user holding the lightweight handheld unit high to clean window blinds, illustrating its ease of use for elevated cleaning tasks.



Image: A detailed view of the floor brush in action, effectively sweeping up debris from a wooden floor, showcasing its cleaning performance.

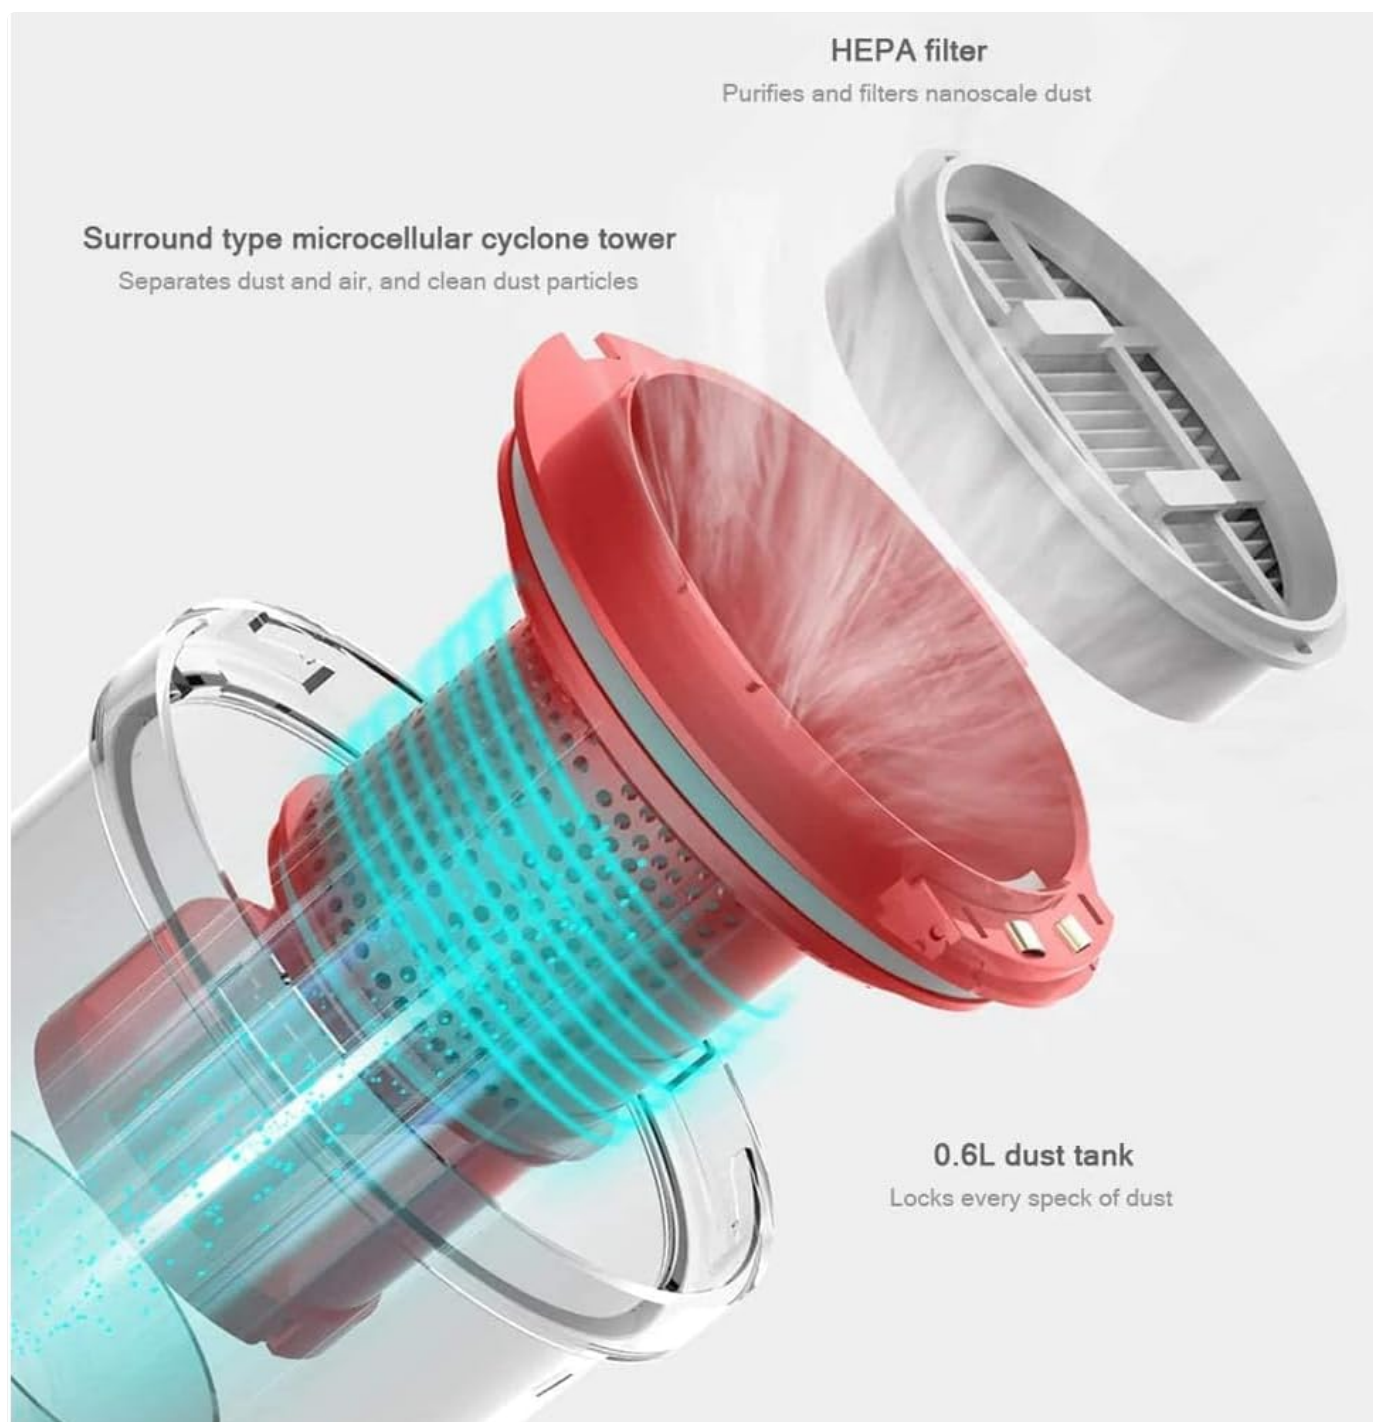


Image: An internal diagram illustrating the surround type microcellular cyclone tower for separating dust and air, and the HEPA filter for purifying nanoscaled dust, along with the 0.6L dust tank.

Lightweight design

Makes cleaning more labor-saving



Image: The handheld vacuum cleaner being used to clean a sofa, demonstrating its adaptability for furniture and upholstery cleaning.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Deerma VC20 PLUS vacuum cleaner.

1. Emptying the Dust Tank:

- The 0.6L dust tank should be emptied regularly, especially when it reaches the MAX fill line.
- To empty, detach the dust tank from the main unit and dispose of the collected debris.

2. Cleaning the Filters:

- The HEPA filter and cyclone filter should be cleaned periodically.
- Gently tap the filters to remove loose dust. For thorough cleaning, rinse them under running water. Ensure they are completely dry before reassembling.

3. Cleaning the Floor Brush:

- Remove any tangled hair or debris from the soft wool roller brush.
- The screw scraper can be cleaned with a damp cloth.

4. **Storing the Vacuum:**

- Store the vacuum cleaner in a cool, dry place.
- Utilize the wall mount bracket for convenient and space-saving storage.

Your browser does not support the video tag.

Video: A detailed demonstration of how to disassemble the dust tank, clean the filters, and maintain the various brush heads of the Deerma VC20 PLUS.

TROUBLESHOOTING

If you encounter issues with your Deerma VC20 PLUS, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is depleted; Power button not pressed correctly.	Charge the battery fully; Ensure the power button is pressed firmly.
Weak suction	Dust tank is full; Filters are clogged; Brush head is blocked.	Empty the dust tank; Clean the HEPA and cyclone filters; Remove any obstructions from the brush head.
Brush head not rotating	Hair or debris tangled in the brush; Brush head not properly attached.	Clean the roller brush; Reattach the brush head securely.
Short battery life	Battery not fully charged; Battery degradation over time.	Ensure full charge before use; Contact customer support if battery life significantly decreases.

If the problem persists after trying these solutions, please contact Deerma customer support for assistance.

SPECIFICATIONS

- Brand:** Deerma
- Model Number:** VC20 Plus
- Color:** White and Pink
- Product Dimensions:** 17 x 22 x 76 cm
- Item Weight:** 1 Kilograms
- Capacity (Dust Tank):** 0.6 Liters
- Power / Wattage:** 100 watts
- Voltage:** 14.4 Volts
- Noise Level:** 75 dB
- Special Features:** Cordless, Lightweight
- Filter Type:** Cartridge (HEPA)
- Surface Recommendation:** All floors
- Power Source:** Battery Powered

WARRANTY AND SUPPORT

Your Deerma VC20 PLUS Handheld Cordless Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or warranty claims, please contact Deerma customer service through their official website or the contact information provided in your product documentation. You can also visit the [Deerma Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question