

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 3-Seat Patio Swing Chair User Manual

Outsunny Swing Bench

Outsunny 3-Seat Patio Swing Chair User Manual

Model: Swing Bench

Brand: Outsunny

1. INTRODUCTION

Welcome to your new Outsunny 3-Seat Patio Swing Chair. This manual provides essential information for the safe and efficient assembly, operation, maintenance, and troubleshooting of your outdoor swing glider. Please read these instructions thoroughly before use and retain them for future reference.



Figure 1: The Outsunny 3-Seat Patio Swing Chair, featuring a black frame and grey cushions, designed for outdoor relaxation.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions may result in serious injury or property damage.

- Ensure all parts are present and undamaged before assembly. Do not attempt to assemble if any parts are missing or broken.
- Assemble the swing chair on a flat, stable surface.
- Do not exceed the maximum weight capacity of 600 lbs (270 kg). This swing is designed for up to 3 adults.
- Keep children and pets away from the assembly area.
- Regularly inspect all bolts and connections to ensure they remain tight.
- Do not stand on the swing or use it as a stepping stool.
- Avoid using the swing during strong winds, heavy rain, or other severe weather conditions. The canopy should be lowered or removed in such conditions.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

PRODUCT DETAILS



Elastic PE
Strap Design



Sturdy
Steel Frame



Strong
Spring Hook



Anti-Slip
Foot Pad



Reinforced
Bar



Figure 2: Key components of the swing chair, including the elastic PE strap design, sturdy steel frame, strong spring hook, anti-slip foot pads, and reinforced bar.

Typical Components:

- Main Frame (Steel tubes and bars)
- Swing Seat (with jacquard sling fabric)
- Adjustable Canopy
- Cushions (Thicken, Removable)
- Springs and Hooks
- Fasteners (Bolts, Nuts, Washers)
- Anti-slip Foot Pads

- Assembly Tools (if included)

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the steps carefully to ensure proper and safe construction of your swing chair.

Assembly Video Guide:

Your browser does not support the video tag.

Video 1: Detailed assembly guide for the Outsunny 3-person Swing Chair (Model 84A-140BK). This video demonstrates the step-by-step process for constructing the swing frame, attaching the seat, and installing the canopy.

Step-by-Step Assembly:

1. **Assemble the Base Frame:** Connect the main horizontal bar to the curved side supports using the provided bolts and nuts. Ensure all connections are secure but do not fully tighten until all frame components are in place.
2. **Attach the Upright Supports:** Secure the upright supports to the base frame. These supports will hold the top bar from which the swing seat hangs.
3. **Install the Top Bar:** Place the top horizontal bar onto the upright supports. Secure it with the appropriate fasteners.
4. **Attach the Swing Seat:** Connect the swing seat to the top bar using the provided springs and hooks. Ensure the seat hangs freely and securely.
5. **Install the Canopy Frame:** Assemble the canopy frame and attach it to the designated points on the main frame.
6. **Mount the Canopy Fabric:** Slide the canopy fabric onto its frame and secure it. Ensure it is taut and properly aligned.
7. **Place the Cushions:** Position the thick, removable cushions onto the swing seat.
8. **Final Tightening:** Once all components are assembled, go back and fully tighten all bolts and nuts. Do not overtighten.
9. **Attach Foot Pads:** Secure the anti-slip foot pads to the bottom of the frame legs to protect surfaces and enhance stability.



Figure 3: Overall dimensions of the assembled swing chair: 79.5" L x 47.25" W x 67.75" H. Refer to this diagram for proper spacing during assembly.

5. OPERATING INSTRUCTIONS

Seating Capacity:

The Outsunny Patio Swing Chair is designed to comfortably seat up to three adults, with a maximum weight capacity of 600 lbs (270 kg). Ensure weight is distributed evenly.

3 SEATER SWING

Three-seater design provides room to relax with friends



Weight Capacity
270 KG/594 LBS



Seats Up to 3

Figure 4: Illustration of the swing's three-seater design, highlighting its capacity for multiple users.

Adjusting the Canopy:

The swing features a tilting sunshade canopy that can be adjusted to block UV rays and provide shade. To adjust the canopy angle (up to 60 degrees), locate the adjustment knobs on the side supports of the canopy frame. Loosen the knobs, adjust the canopy to the desired angle, and then tighten the knobs securely to fix its position.

ADJUSTABLE CANOPY TOP

Tilt design allows you to adjust the canopy angle to block the sun all day long



By rotating the controller

Figure 5: Visual guide to adjusting the canopy top, showing the tilt mechanism and the rotation controller for angle adjustment.

Cushion Comfort:

The swing includes thick, removable jacquard cushions for enhanced comfort. These cushions are covered with breathable mesh fabric, designed to dry quickly after rain and remain cool in warm weather. They attach easily with "one-touch" fastening.

JACQUARD SLING FABRIC

Sling canopy and cushion for added comfort and breathability

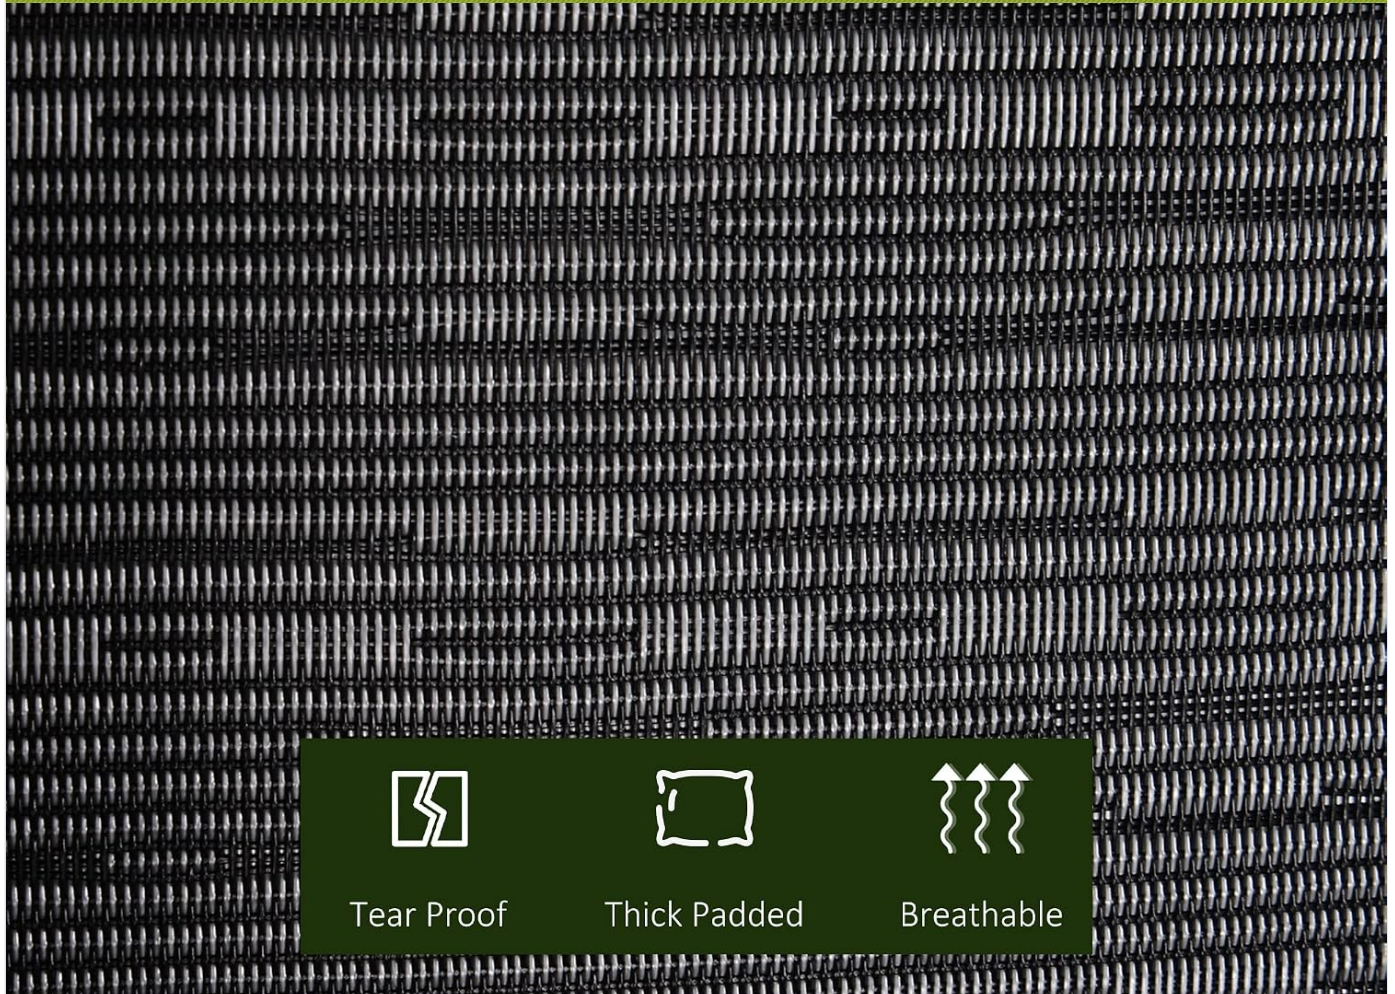


Figure 6: Close-up view of the jacquard sling fabric, highlighting its tear-proof, thick padded, and breathable qualities for optimal comfort.

6. MAINTENANCE AND CARE

- **Cleaning:** Clean the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. The cushions can be spot cleaned with mild soap and water. Allow them to air dry completely before storage or re-use.
- **Cushion Care:** While the cushions are designed to dry quickly, it is recommended to store them indoors during prolonged periods of rain or when not in use to extend their lifespan.
- **Frame Inspection:** Periodically check all bolts, nuts, and connections for tightness. Tighten as necessary. Inspect the steel frame for any signs of rust or damage. Apply rust-inhibiting paint if needed.
- **Canopy Care:** Keep the canopy fabric clean from debris. If possible, remove the canopy during strong winds or heavy snowfall to prevent damage.
- **Storage:** During off-season or prolonged periods of non-use, store the swing chair in a dry, protected area to prevent weather damage.

7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose bolts or uneven ground.	Ensure all assembly bolts are securely tightened. Move the swing to a flat, level surface. Check foot pads for wear.
Canopy does not stay in position.	Adjustment knobs are loose or worn.	Tighten the canopy adjustment knobs firmly. If worn, contact customer support for replacement parts.
Cushions feel hot or retain water.	Prolonged sun exposure or inadequate drying.	Move cushions to shade when not in use. Ensure cushions are fully dry after rain before storing or covering.
Squeaking noise during swinging.	Friction at pivot points or springs.	Apply a silicone-based lubricant to the swing springs and pivot points where the seat attaches to the frame.

8. SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	Swing Bench
Color	Black
Product Dimensions	47.25"D x 79.5"W x 67.75"H
Frame Material	Alloy Steel
Finish Type	Powder Coated
Seat Depth	20.75 inches
Assembly Required	Yes
Manufacturer	Aosom LLC
Item Weight	92.8 pounds
Weight Capacity	600 lbs (270 kg)
Country of Origin	China
Date First Available	January 14, 2020

9. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided by Aosom Direct, the manufacturer. Typically, products purchased through Amazon.com are eligible for a 30-day easy return policy.

For technical support, missing parts, or any inquiries regarding your Outsunny Patio Swing Chair, please contact Aosom Direct customer service. Contact details can usually be found on their official website or through your Amazon order details.

It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Outsunny. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question