

Deerma DX700

Deerma DX700S 2-in-1 Vertical Handheld Vacuum Cleaner User Manual

INTRODUCTION

Welcome to the user manual for your new Deerma DX700S 2-in-1 Vertical Handheld Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read this manual thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Always disconnect the vacuum cleaner from the power supply before cleaning or performing maintenance.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up burning or smoking objects, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PRODUCT COMPONENTS

The Deerma DX700S vacuum cleaner is designed for versatile cleaning. Familiarize yourself with its main components:



Image: The Deerma DX700S vacuum cleaner, illustrating its primary vertical mode and the detachable handheld unit with various attachments.

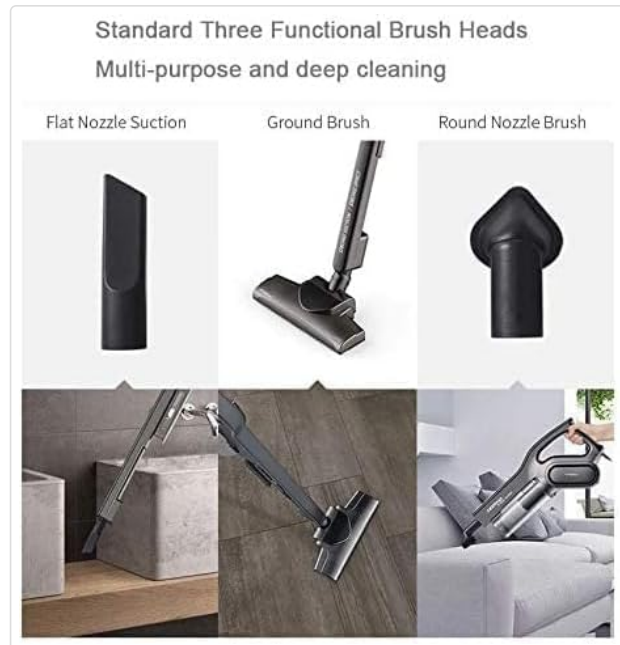


Image: Standard three functional brush heads included with the vacuum cleaner: Flat Nozzle Suction for crevices, Ground Brush for floors, and Round Nozzle Brush for upholstery.

- **Main Unit:** Contains the motor, dust box, and filter system.
- **Extension Tube:** Connects the main unit to the floor brush for vertical cleaning.
- **Floor Brush:** Designed for cleaning various floor surfaces.
- **Flat Nozzle Suction:** Ideal for narrow gaps and corners.
- **Round Nozzle Brush:** Suitable for cleaning irregular surfaces and upholstery.
- **Power Cord:** For connecting to an electrical outlet.

ASSEMBLY AND SETUP

Your Deerma DX700S vacuum cleaner can be assembled in two main configurations: vertical and handheld.

1. Vertical Mode Assembly:

Insert the extension tube into the main unit until it clicks into place. Then, attach the floor brush to the other end of the extension tube, ensuring it is securely fastened.



Image: Visual guide demonstrating the assembly of the vacuum cleaner for both vertical and handheld use.

2. Handheld Mode Assembly:

Detach the extension tube and floor brush from the main unit. Directly attach either the Flat Nozzle Suction or the Round Nozzle Brush to the main unit, depending on your cleaning needs.



Image: A user demonstrating the flexible use of the vacuum cleaner, transitioning between vertical and handheld configurations for different cleaning tasks.

3. **Power Connection:**

Once assembled, plug the power cord into a suitable electrical outlet. Ensure the voltage matches the specifications of the vacuum cleaner.

OPERATING INSTRUCTIONS

The Deerma DX700S is designed for ease of use in both vertical and handheld configurations.

1. **Power On/Off:**

Locate the power button on the main unit. Press it once to turn the vacuum cleaner on, and press it again to turn it off.

2. **Vertical Cleaning:**

For floor cleaning, use the vacuum in its vertical configuration. Guide the floor brush across the surface to be cleaned. The ergonomic handle provides comfortable operation.



Image: A user operating the Deerma DX700S in vertical mode for floor cleaning and demonstrating its use for reaching elevated areas.

3. **Handheld Cleaning:**

For cleaning furniture, car interiors, or hard-to-reach areas, detach the main unit and attach the appropriate nozzle. The lightweight design makes it easy to maneuver.



Image: A user demonstrating the Deerma DX700S in vertical mode, effectively cleaning a hard floor surface.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dust Box:

The large capacity dust box should be emptied regularly, especially when the dust level reaches the MAX line. Press the release button to detach the dust box from the main unit. Dispose of the collected dust and debris into a waste bin. The transparent design allows for easy monitoring of dust levels.

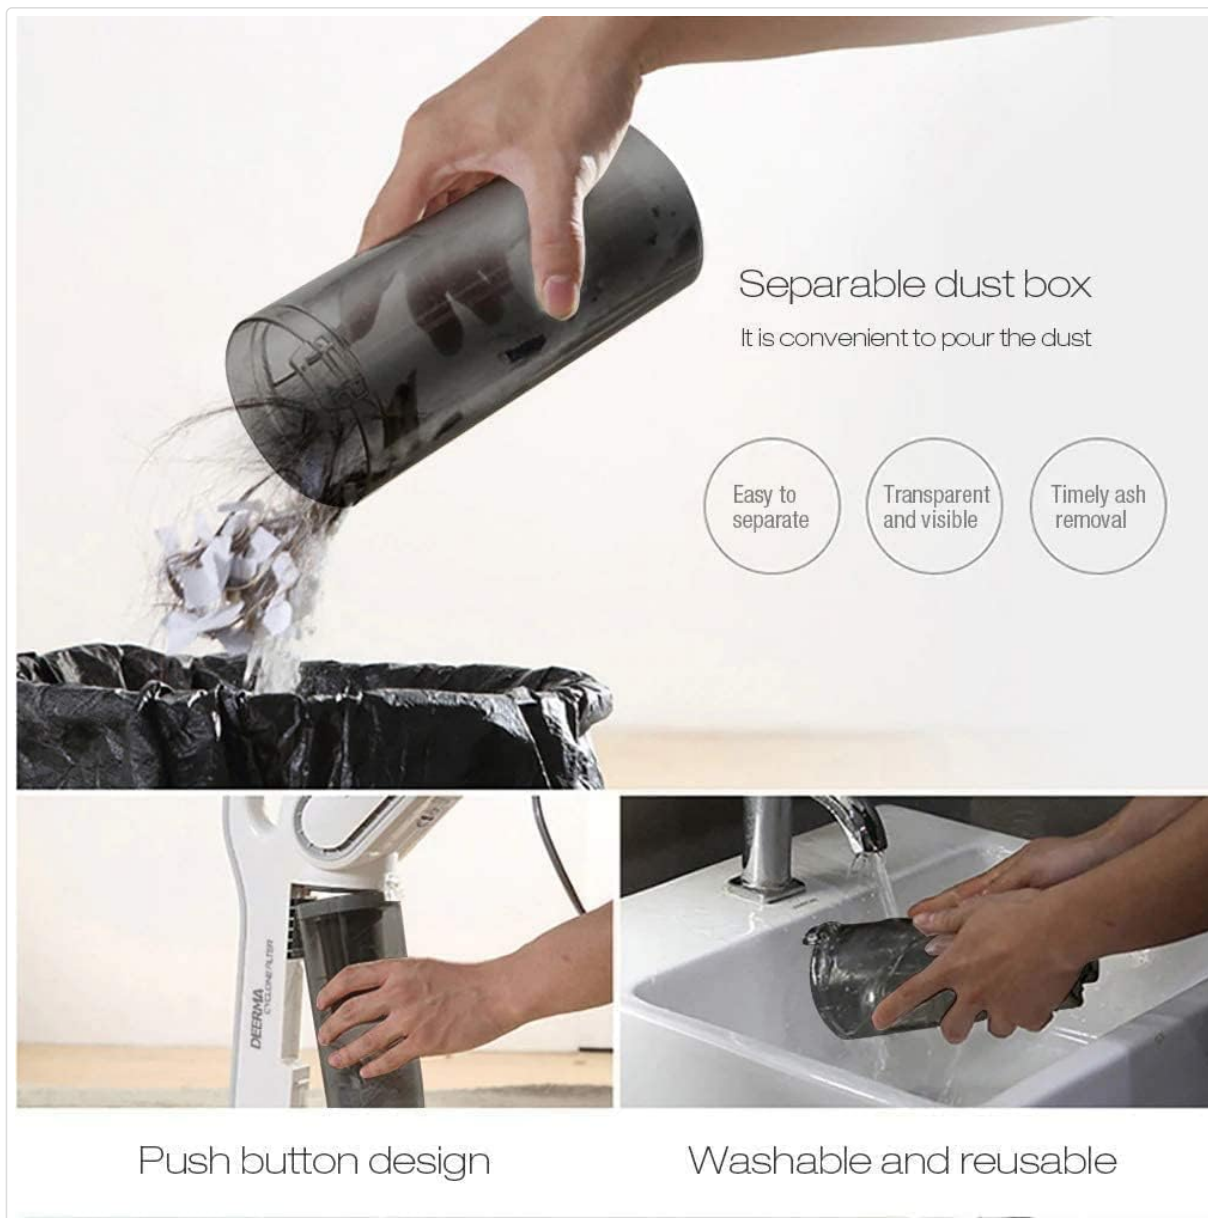


Image: Instructions for emptying the separable dust box, highlighting its transparency and washable components for easy maintenance.

2. Cleaning the Filter:

The vacuum cleaner features a triple filter system. The filter cotton is hand-washable and reusable. After emptying the dust box, remove the filter components. Rinse the filter cotton under running water until clean. Allow it to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.

3. Cleaning Attachments:

Wipe down the exterior of the vacuum cleaner and attachments with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your Deerma DX700S, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply; power cord not properly plugged in.	Check if the power cord is securely plugged into a working outlet. Ensure the power button is pressed.

Problem	Possible Cause	Solution
Low suction power.	Dust box is full; filter is clogged; hose/nozzle is blocked.	Empty the dust box. Clean or replace the filter. Check for and remove any blockages in the hose or attachments.
Unusual noise during operation.	Blockage in the brush roll or hose; damaged motor.	Turn off and unplug the vacuum. Check for and remove any foreign objects from the brush roll or hose. If the noise persists, contact customer support.
Dust escaping from the vacuum.	Dust box not properly closed; filter not installed correctly or damaged.	Ensure the dust box is securely latched. Check that the filter is correctly installed and not damaged. Clean or replace the filter if necessary.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Deerma
Model Number	DX700
Color	Black
Product Dimensions	29.97 x 21.59 x 116.08 cm
Item Weight	2.8 Kilograms
Power / Wattage	160 watts
Voltage	25 Volts
Noise Level	75 dB
Filter Type	Cartridge (Hand-washable)
Power Source	Corded Electric
Special Features	2-in-1 (Handheld & Vertical), Low Noise, Triple Filter System

WARRANTY AND CUSTOMER SUPPORT

Your Deerma DX700S vacuum cleaner comes with a minimum 1-year manufacturer warranty, as indicated on the product packaging. For warranty claims, technical assistance, or any product-related inquiries, please contact the Deerma Official Store or authorized service centers.

Please retain your proof of purchase for warranty validation.

For further assistance, you may visit the official Deerma store online:[Deerma Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question