

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux EEM48330L Fully Integrated Dishwasher User Manual](#)

## Electrolux EEM48330L

# Electrolux EEM48330L Fully Integrated Dishwasher User Manual

Model: EEM48330L

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Electrolux EEM48330L fully integrated dishwasher. Please read these instructions carefully before installation and operation to ensure optimal performance and to prevent damage to the appliance or injury to yourself. Keep this manual for future reference.

## 2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent accidents and ensure proper operation:

- Ensure the appliance is properly earthed.
- Do not allow children to operate or play near the dishwasher.
- Sharp items should be loaded with points down to prevent injury.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, due to the risk of scalding.
- In case of malfunction, disconnect the appliance from the power supply before attempting any inspection or repair.
- This appliance is designed for household use only.

## 3. SETUP AND INSTALLATION

The Electrolux EEM48330L is a fully integrated dishwasher designed to blend seamlessly with your kitchen cabinetry. Professional installation is recommended.

### **3.1 Unpacking**

Carefully remove all packaging materials. Inspect the dishwasher for any transport damage. Report any damage immediately to your retailer.

### **3.2 Positioning and Leveling**

Place the dishwasher in the desired location. Ensure the appliance is level using the adjustable feet to prevent water leaks and ensure proper door alignment. The dimensions of the appliance are approximately 55 cm (L) x 60 cm (W) x 82 cm (H).

### **3.3 Water Connection**

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure all connections are tight to prevent leaks. The dishwasher features a leak sensor for added safety.

### **3.4 Electrical Connection**

Connect the power cord to a properly earthed electrical outlet. The appliance requires a 230V power supply. Do not use extension cords or multiple adapters.

### **3.5 First Use Preparation**

Before the first wash cycle, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. Refer to the respective sections for detailed instructions.



Figure 1: Front view of the Electrolux EEM48330L fully integrated dishwasher, showing the control panel at the top edge of the door.

## 4. OPERATING INSTRUCTIONS

Follow these steps for daily operation of your dishwasher.

### 4.1 Control Panel Overview

The EEM48330L features a fully integrated control panel located on the top edge of the door. It typically includes program selection buttons, a start/pause button, and indicator lights for salt, rinse aid, and cycle status.

### 4.2 Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items in the lower basket and smaller, more delicate items in the upper basket.
- Ensure spray arms can rotate freely.
- The dishwasher has a capacity for 14 place settings.

### **4.3 Adding Detergent and Rinse Aid**

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Refill the rinse aid dispenser when the indicator light illuminates. Rinse aid helps with drying and prevents streaks.

### **4.4 Selecting and Starting a Program**

1. Close the dishwasher door.
2. Select the desired wash program using the program selection buttons. The dishwasher offers 8 cycle options, including a Normal and Quick wash.
3. Press the Start button to begin the cycle.

### **4.5 Interrupting and Canceling a Program**

To interrupt a program, carefully open the door. The program will pause. To cancel, press and hold the program button for a few seconds. The dishwasher will drain any remaining water.

### **4.6 End of Cycle**

Once the program is complete, the dishwasher will signal with an audible alert or indicator light. Open the door slightly to allow steam to escape before unloading. The drying system assists in efficient drying.

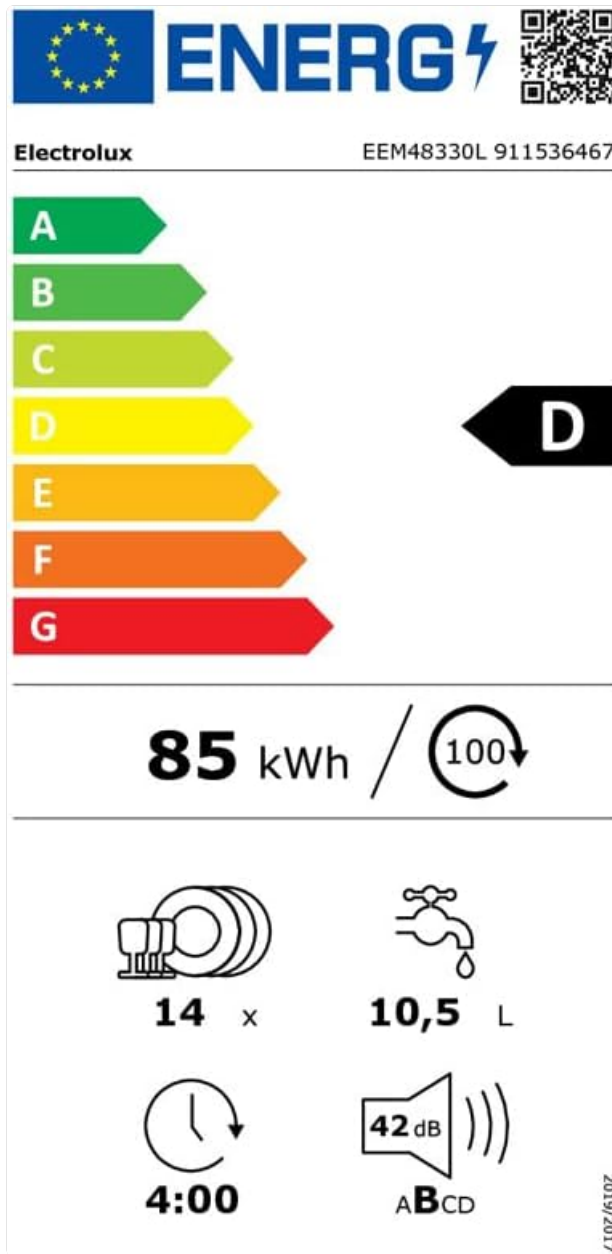


Figure 2: Energy label for the Electrolux EEM48330L dishwasher, indicating an energy class D, 85 kWh/100 cycles, 14 place settings, 10.5 liters water consumption, and a noise level of 42 dB.

## 5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your dishwasher.

### 5.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

### 5.2 Interior Cleaning

Periodically run a dishwasher cleaning cycle with a specialized cleaner to remove grease and limescale buildup.

### 5.3 Filter Cleaning

The filter system should be cleaned regularly to prevent blockages and ensure effective washing. Remove the filters, rinse them under running water, and brush away any food particles. Reassemble correctly.

## 5.4 Spray Arm Cleaning

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any debris from the holes using a thin object like a toothpick.

## 6. TROUBLESHOOTING

Before contacting service, consult the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Poor cleaning results	Incorrect loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, add more detergent.
Water remaining in the tub	Clogged drain hose or filter.	Clean the filter system, check drain hose for kinks or blockages.
Excessive noise	Dishes interfering with spray arms, foreign object in pump, improper leveling.	Rearrange dishes, check for obstructions, ensure dishwasher is level.
Leakage	Improper installation, damaged door seal, overfilling.	Check hose connections, inspect door seal, ensure not to overfill detergent/rinse aid. The appliance has overflow protection and is leak resistant.

## 7. SPECIFICATIONS

Feature	Specification
Model	EEM48330L
Type	Fully Integrated Dishwasher
Dimensions (L x W x H)	55 x 60 x 82 cm
Place Settings	14
Noise Level	42 dB
Energy Consumption (per 100 cycles)	85 kWh

Feature	Specification
Water Consumption (per cycle)	10.5 Liters
Number of Programs	8
Special Features	Leak Sensor, Rinse Aid Dispenser, Low Water Consumption, Quick Wash, Adjustable Basket, Overflow Protection, Leak Resistant
Included Components	Power Cord, Cutlery Basket, Drying System

## 8. WARRANTY AND SUPPORT

Your Electrolux EEM48330L dishwasher comes with a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including coverage duration and service procedures.

For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. Have your model number (EEM48330L) and serial number ready when you call.

You can find contact information for your region on the official Electrolux website or in the documentation included with your appliance.