

Globo 58378B

Globo TANNA Table Lamp Instruction Manual

Model: 58378B

INTRODUCTION

Thank you for purchasing the Globo TANNA Table Lamp. This manual provides detailed instructions for the safe and efficient use of your new lamp. Please read this manual thoroughly before installation and operation, and keep it for future reference.

Safety Information

- Ensure the power supply voltage matches the lamp's requirements (230V).
- Do not expose the lamp to water or excessive humidity.
- Do not attempt to disassemble or modify the lamp. Refer all servicing to qualified personnel.
- Unplug the lamp from the power outlet before cleaning or when not in use for extended periods.
- Keep the lamp away from heat sources and direct sunlight.

PRODUCT OVERVIEW

The Globo TANNA Table Lamp (Model 58378B) is a modern and versatile lighting solution featuring a dark brown plastic, chrome, and leather-look finish. It incorporates advanced LED technology with dimmable functionality and color temperature adjustment. The lamp also includes a display for time, date, and temperature, controlled via a touch dimmer interface.



Figure 1: Front view of the Globo TANNA Table Lamp, showcasing its sleek design and integrated display for time and temperature.



Figure 2: The Globo TANNA Table Lamp positioned on a desk, illustrating its practical application in a home office environment.

Key Features:

- Integrated LED light source (7W, 230V)
- Dimmable light output (310lm source, 278lm output)
- Adjustable Color Correlated Temperature (CCT): 3000K (warm white), 4500K (neutral white), 5500K (cool white)
- Touch dimmer control

- Built-in display for time, date, and temperature
- Durable construction with plastic, chrome, and leather-look elements
- Compact dimensions: 550mm (L) x 140mm (W) x 590mm (H)

SETUP

1. Unpacking

1. Carefully remove the lamp and all packaging materials from the box.
2. Inspect the lamp for any signs of damage. If damaged, do not proceed with installation and contact your retailer.
3. Retain packaging for future transport or storage.

2. Placement

Place the lamp on a stable, flat surface. Ensure there is adequate space around the lamp for proper ventilation and to allow for adjustment of the lamp head.

3. Power Connection

1. Locate the power adapter cable.
2. Insert the small end of the power adapter into the power input port on the back or base of the lamp.
3. Plug the other end of the power adapter into a standard 230V AC wall outlet.
4. The lamp's display should illuminate, indicating it is receiving power.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power touch button on the lamp's base. A single tap will turn the lamp on or off.



Figure 3: Detail of the touch-sensitive control panel located on the base of the lamp, showing the power button and other function controls.

2. Brightness Adjustment (Dimmer)

With the lamp on, press and hold the power touch button to continuously adjust the brightness. Release the button when the desired brightness level is reached. The lamp supports stepless dimming.

3. Color Temperature Adjustment

The lamp offers three color temperature settings: 3000K (warm white), 4500K (neutral white), and 5500K (cool white). Locate the color temperature touch button (often indicated by a sun or color icon) on the base. Each tap will cycle through the available color temperatures.

4. Setting Time, Date, and Temperature Display

The lamp features a built-in display. Specific buttons for setting time, date, and temperature are usually located near the display or on the base. Refer to the icons next to the touch controls for these functions. Typically:

- **Mode Button:** Press to cycle through display modes (e.g., time, date, alarm).
- **Set Button:** Press and hold to enter setting mode for the currently displayed item.
- **Up/Down Buttons:** Use to adjust values (hours, minutes, day, month, year).
- **Temperature Unit:** Some models allow switching between Celsius and Fahrenheit. Look for a dedicated button or a setting within the time/date menu.

Note: Exact button functions may vary slightly. Please refer to the icons on your lamp's control panel.



Figure 4: Side profile of the lamp, highlighting the vertical display panel that shows time, date, and temperature readings.

MAINTENANCE

Cleaning

1. Always unplug the lamp from the power outlet before cleaning.
2. Use a soft, dry cloth to wipe the lamp's surfaces.
3. For stubborn marks, a slightly damp cloth with mild soap can be used, but ensure no liquid enters the lamp's internal components.
4. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

LED Light Source

The Globo TANNA Table Lamp uses integrated LED technology. The LED light source is designed for a long lifespan and is not user-replaceable. If the LED light source fails, the entire lamp may need to be replaced or serviced by a qualified technician.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply. Power adapter not properly connected. Faulty outlet.	Check if the power adapter is securely plugged into both the lamp and the wall outlet. Try plugging another device into the outlet to confirm it is working.
Light flickers or is dim.	Unstable power supply. Dimmer setting too low.	Ensure the lamp is connected to a stable power source. Adjust the brightness using the touch dimmer.
Display is not working or shows incorrect information.	Power interruption. Settings need adjustment.	Unplug the lamp for 30 seconds, then plug it back in to reset. Re-enter the time, date, and temperature settings as per the "Operating Instructions" section.
Touch controls are unresponsive.	Temporary software glitch. Dirty touch panel.	Unplug the lamp for a few minutes, then plug it back in. Clean the touch panel with a soft, dry cloth.

SPECIFICATIONS

Attribute	Value
Model Number	58378B
Brand	Globo
Dimensions (LxWxH)	550 x 140 x 590 mm
Weight	810 g

Attribute	Value
Light Source Type	Integrated LED
Power	7W
Voltage	230V
Luminous Flux (Source)	310 lm
Luminous Flux (Output)	278 lm
Color Temperature (CCT)	3000K, 4500K, 5500K (Adjustable)
Dimmable	Yes (Touch Dimmer)
Material	Plastic, Chrome, Leather-look
Color	Dark Brown
Special Features	Time, Date, Temperature Display

WARRANTY AND SUPPORT

Warranty Information

This Globo product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or contact your retailer for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact the retailer where you purchased the lamp or visit the official Globo website for support contact details.

© 2024 Globo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084GSX8XM>

More documents and user manuals: <https://manuals.plus/>