

[Manuals.plus](#) /

> [ROMOSS](#) /

> ROMOSS LT20PS+ 20000mAh Portable Power Bank User Manual

ROMOSS LT20PS+

ROMOSS LT20PS+ 20000mAh Portable Power Bank User Manual

Model: LT20PS+

INTRODUCTION

This manual provides instructions for the safe and efficient use of your ROMOSS LT20PS+ 20000mAh Portable Power Bank. Please read this manual thoroughly before using the product and retain it for future reference.

PRODUCT OVERVIEW

The ROMOSS LT20PS+ is a high-capacity portable power bank designed to charge multiple devices. It features a 20000mAh battery, multiple input and output ports, and a digital display for precise battery status.

Key Features:

- **20000mAh High Capacity:** Provides multiple charges for smartphones and tablets.
- **Digital LED Display:** Shows the exact battery percentage, charging voltage, and current.
- **Compact Design:** Measures approximately 5.7 × 2.7 × 1.1 inches for portability.
- **Versatile Inputs:** Supports Micro USB, Lightning, and Type-C inputs for recharging the power bank.
- **Multiple Outputs:** Equipped with 3 USB outputs (including Type-C and Fit+ ports) to charge up to three devices simultaneously.
- **18W Two-Way Type-C Quick Charge:** Allows for fast charging of compatible devices and quick recharging of the power bank itself.

3 Input&3 Outputs

- Smart LED Digital Display
- Compact& Portable Size
- Charging 3 devices simultaneously

5.4
times

iPhoneXs

3.6
times

Galaxy Note 9

1.3
times

iPad Pro



Image: The ROMOSS LT20PS+ power bank illustrating its three input ports (Micro USB, Lightning, Type-C) and three output ports (Type-

SETUP

Before first use, fully charge your ROMOSS LT20PS+ power bank. A full charge ensures optimal performance and battery longevity.

Charging the Power Bank:

1. Connect a compatible charging cable (Micro USB, Lightning, or Type-C) to one of the power bank's input ports.
2. Connect the other end of the cable to a power source, such as an 18W wall charger (not included).
3. The digital LED display will show the charging progress. The power bank is fully charged when the display shows 100%.

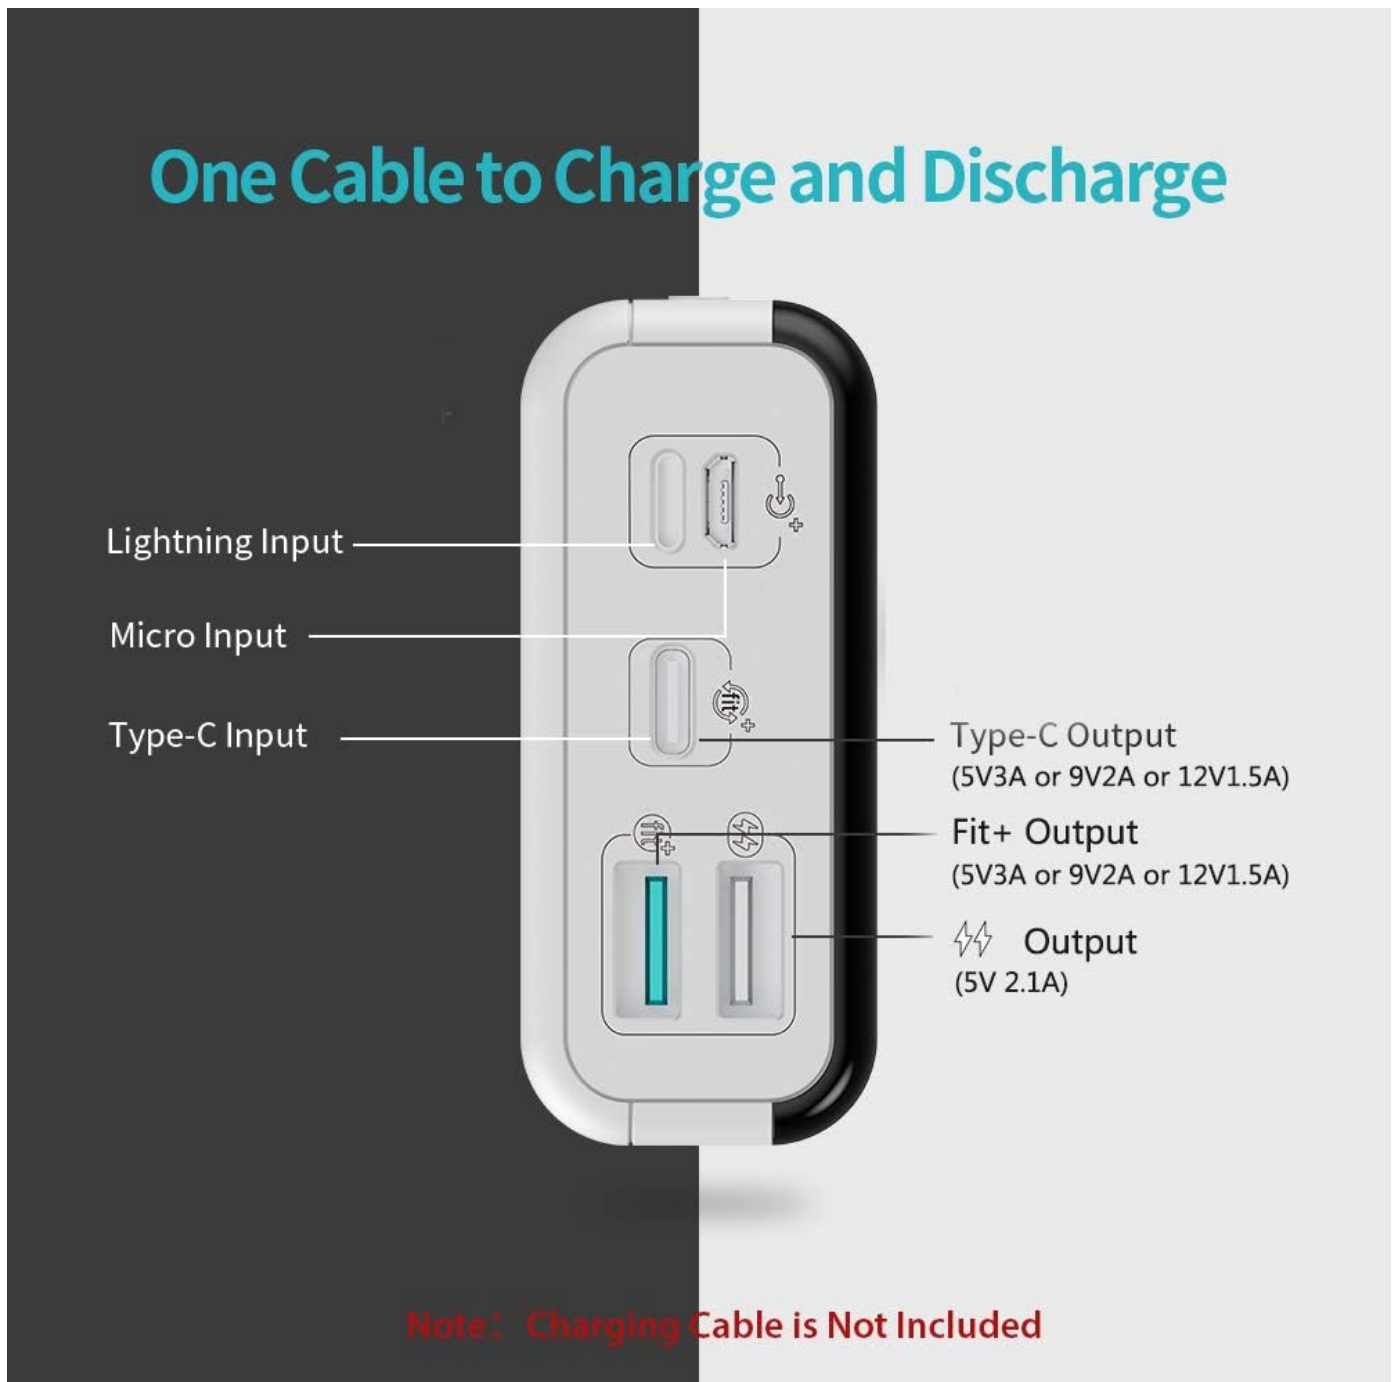


Image: A detailed diagram of the ROMOSS LT20PS+ power bank's input and output ports, including Lightning, Micro USB, and Type-C inputs, and Type-C, Fit+, and standard USB outputs.

OPERATING INSTRUCTIONS

The ROMOSS LT20PS+ power bank can charge up to three devices simultaneously.

Charging Your Devices:

1. Connect your device's charging cable to one of the power bank's output USB ports (Type-C, Fit+, or standard USB).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The digital display will show the remaining battery percentage.
4. To check the battery level or activate the display, briefly press the power button.



Image: The ROMOSS LT20PS+ power bank simultaneously charging three different mobile devices, demonstrating its multi-output capability.



Image: A visual representation of the ROMOSS LT20PS+ power bank's 4X faster charging speed compared to conventional charging methods.

Digital Display Information:

The LED display provides real-time information:

- **Battery Percentage:** Shows the remaining charge from 0-100%.
- **Charging Voltage (V):** Displays the output voltage.
- **Charging Current (A):** Displays the output current.
- **Fast Charge Indicator:** Indicates when fast charging is active.

Smart Digital Display

With alternate press of power button



100%

Fast Charge

100%

Power Percentage

V 5.1

Charging Voltage (V)

A 1.2

Charging Current (A)

Image: The smart digital display of the ROMOSS LT20PS+ power bank, showing various charging metrics like battery percentage, voltage, and current.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power bank.

- Keep the power bank dry and away from moisture.
- Do not expose it to extreme temperatures (hot or cold).
- Avoid dropping or subjecting the power bank to strong impacts.
- Clean the exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use for extended periods. Recharge the power bank at least once every three months to maintain battery health.

TROUBLESHOOTING

Power bank not charging:

- Ensure the charging cable is securely connected to both the power bank's input port and the power source.
- Verify that the wall charger and cable are functional and compatible (18W charger recommended for fast charging).
- Try a different charging cable or wall adapter.

Devices not charging from power bank:

- Ensure the power bank has sufficient charge (check the digital display).
- Verify that the charging cable is securely connected to both the power bank's output port and your device.
- Try a different output port or charging cable.
- Some devices may require a specific cable or charging protocol; ensure compatibility.

Slow charging:

- Ensure you are using a fast-charging compatible cable and your device supports fast charging.
- The power bank's 18W PD (Power Delivery) output requires a compatible Type-C to Type-C cable and a device that supports PD.
- Charging multiple devices simultaneously may reduce individual charging speeds.

Power bank feels warm during use:

- It is normal for the power bank to become slightly warm during charging or discharging. If it becomes excessively hot, disconnect it immediately and contact support.

Swollen battery:

- If you notice any swelling or deformation of the power bank, discontinue use immediately and dispose of it safely according to local regulations. Do not attempt to puncture or disassemble a swollen battery.

SPECIFICATIONS

Feature	Detail
Manufacturer	ROMOSS
Model Number	LT20PS+
Dimensions	17.2 x 10.4 x 3.8 cm
Weight	470 grams
ASIN	B084GVZ5J6
Connector Type	USB Type-C, Micro USB
Battery Capacity	20000mAh
Special Feature	Digital Display
Voltage	5 Volts
Battery Cell Composition	Lithium Polymer
Power Source	Battery Powered

Feature	Detail
Amperage	3 Amps
Output Current	3 Amps

WARRANTY AND SUPPORT

ROMOSS products come with a standard warranty. For warranty claims, technical support, or any product-related inquiries, please refer to the warranty card included with your purchase or visit the official ROMOSS website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question