

[Manuals.plus](#) /

› [LucasArts](#) /

› Star Wars: Episode I Racer - Nintendo 64 Instruction Manual

LucasArts Star Wars Episode I Racer

Star Wars: Episode I Racer - Nintendo 64 Instruction Manual

Model: Star Wars Episode I Racer

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Star Wars: Episode I Racer game cartridge for the Nintendo 64 console. Please read this manual thoroughly before use to ensure proper functionality and an optimal gaming experience.



Image: Star Wars: Episode I Racer game cartridge for Nintendo 64. This shows the front of the game cartridge with the game's title and artwork.

SETUP INSTRUCTIONS

- 1. Prepare Your Console:** Ensure your Nintendo 64 console is connected to a power source and a television. Verify that at least one Nintendo 64 controller is securely plugged into the console's controller ports.
- 2. Insert the Game Cartridge:** Hold the Star Wars: Episode I Racer cartridge with the label facing forward. Gently but firmly insert the cartridge into the game slot on top of your Nintendo 64 console. Ensure it is fully seated. Do not force the cartridge.
- 3. Power On:** Turn on your television and select the correct input channel for your Nintendo 64 console. Then, press the POWER button on your Nintendo 64 console. The game should load automatically.

OPERATING INSTRUCTIONS

Basic Controls

The game utilizes the standard Nintendo 64 controller. Familiarize yourself with the controller layout for optimal gameplay.

- **Analog Stick:** Steer your podracer.
- **A Button:** Accelerate.
- **B Button:** Brake/Reverse.
- **C-Buttons (Up/Down/Left/Right):** Various functions, including weapon fire, boost, or looking around, depending on context. Refer to in-game tutorials for specific actions.
- **Z-Trigger (under controller):** Often used for looking behind or special maneuvers.
- **START Button:** Pause game, access in-game menus.

Gameplay

Star Wars: Episode I Racer is a high-speed racing game. Your objective is to compete in pod races across various planets, win races, and upgrade your podracer components. Progress through the championship to unlock new tracks and characters.

Saving Progress

Game progress is typically saved automatically at specific points or through a manual save option within the game's menu. Ensure your Nintendo 64 console remains powered on during the save process to prevent data corruption.

MAINTENANCE AND CARE

- **Cartridge Cleaning:** If the game does not start or experiences issues, gently clean the gold connector pins on the bottom of the cartridge using a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before reinserting.
- **Storage:** Store the game cartridge in a cool, dry place, away from direct sunlight, extreme temperatures, and excessive dust. Keep it in its original case or a protective sleeve when not in use.
- **Handling:** Avoid touching the gold connector pins with your fingers to prevent oil and dirt transfer. Do not bend, drop, or expose the cartridge to liquids.

TROUBLESHOOTING

Problem	Possible Solution
Game does not start or freezes.	1. Ensure the cartridge is fully and correctly inserted into the console. 2. Clean the cartridge's connector pins as described in the Maintenance section. 3. Power off and restart the Nintendo 64 console. 4. Verify the console itself is functioning correctly with other games.
Controller input is unresponsive.	1. Check that the controller is securely plugged into the console. 2. Try a different controller port or a different controller if available.

Problem	Possible Solution
No video or audio output.	1. Ensure the Nintendo 64 console's A/V cables are securely connected to both the console and the television. 2. Verify the television is set to the correct input source.

SPECIFICATIONS

- **Product Name:** Star Wars: Episode I Racer
- **Compatible Console:** Nintendo 64
- **Game Type:** Racing
- **Manufacturer:** LucasArts
- **Product Dimensions:** 5.35 x 3.03 x 0.83 inches
- **Item Weight:** 3.84 ounces
- **ASIN:** B084GXJ7DZ

WARRANTY AND SUPPORT

As this product is a renewed item, warranty and support are typically provided by the seller or through the Amazon Renewed program. Please refer to your purchase documentation or the seller's specific return and warranty policies for details.

For general Nintendo 64 console support, please consult the original console's instruction manual or manufacturer's website.

© 1999 LucasArts. All rights reserved. Nintendo 64 is a trademark of Nintendo.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question