

Deerma DX118C

Deerma DX118C 2-in-1 Electric Vacuum Cleaner User Manual

Model: DX118C

INTRODUCTION

Thank you for choosing the Deerma DX118C 2-in-1 Electric Vacuum Cleaner. This versatile appliance is designed to provide efficient cleaning for your home, offering both upright stick vacuum and portable handheld functionalities. With powerful suction and a lightweight design, it is ideal for various surfaces including carpets and hard floors. Please read this manual carefully before operation to ensure safe and optimal use of your new vacuum cleaner.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without dust cup and/or filters in place.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Deerma DX118C vacuum cleaner.



Image: The Deerma DX118C vacuum cleaner shown in its full stick configuration on the left, and as a compact handheld unit on the right. This illustrates its 2-in-1 design.



Image: The Deerma DX118C vacuum cleaner assembled as a stick vacuum, alongside its various accessories: a round brush, a crevice tool, a HEPA filter, and the main floor brush attachment.

Main Components:

- **Main Unit:** Contains the motor, dust cup, and filter system.
- **Extension Tube:** Connects the main unit to the floor brush for stick vacuum mode.
- **Floor Brush:** Main cleaning head for floors and carpets.
- **Crevice Tool:** Narrow attachment for tight spaces and corners.
- **Brush Nozzle:** Small brush attachment for upholstery, curtains, and delicate surfaces.
- **Dust Cup:** Collects dirt and debris.
- **HEPA Filter:** Advanced filtration system to capture fine dust and allergens.
- **Power Cord:** For connecting to an electrical outlet.

SETUP AND ASSEMBLY

Your Deerma DX118C vacuum cleaner can be assembled in two configurations: stick vacuum or handheld vacuum.

Assembling as a Stick Vacuum:

1. Insert the extension tube into the main unit until it clicks securely into place.
2. Attach the floor brush to the other end of the extension tube, ensuring it is firmly connected.
3. Ensure the dust cup is properly installed and the HEPA filter is clean and in place.

Assembling as a Handheld Vacuum:

1. For handheld use, detach the extension tube and floor brush from the main unit.
2. Directly attach either the crevice tool or the brush nozzle to the main unit's suction opening.
3. Ensure the chosen attachment is securely fitted.



Image: The handheld vacuum unit with a crevice tool attached, demonstrating its use for cleaning tight spaces. Below are images of the main floor brush, crevice tool, and brush nozzle.

OPERATING INSTRUCTIONS

Follow these steps to operate your Deerma DX118C vacuum cleaner effectively.

General Operation:

1. Plug the power cord into a suitable electrical outlet (220-270V).
2. Press the power button located on the main unit to turn the vacuum cleaner ON.
3. Begin cleaning the desired surface.
4. When finished, press the power button again to turn the vacuum cleaner OFF and unplug it from the outlet.

Using as a Stick Vacuum:

Ideal for cleaning large floor areas, carpets, and rugs.



Image: A woman is shown using the Deerma DX118C in its stick vacuum configuration to clean a carpeted floor in a living room setting.



Image: A split image demonstrating the two modes of the vacuum. On the left, a person uses the stick vacuum on a carpet. On the right, the same person uses the handheld vacuum for elevated cleaning.

- Ensure the extension tube and floor brush are securely attached.
- Maneuver the vacuum across the floor, allowing the powerful suction to pick up dirt and debris. The floor brush is designed for effective cleaning on various surfaces.



Image: Close-up views of the floor brush attachment demonstrating its effectiveness on three different surfaces: wooden floor, tile floor, and a blanket (carpet).

Using as a Handheld Vacuum:

Perfect for cleaning furniture, car interiors, stairs, and hard-to-reach areas.



Image: The Deerma DX118C in its handheld configuration, with the brush nozzle attached, ready for detailed cleaning tasks.

- Ensure the desired attachment (crevice tool or brush nozzle) is securely attached to the main unit.
- Hold the main unit comfortably and direct the attachment to the area you wish to clean.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup:

1. Ensure the vacuum cleaner is turned OFF and unplugged.
2. Locate the dust cup release button/latch on the main unit.
3. Press the button/latch and carefully remove the dust cup.
4. Empty the contents of the dust cup into a trash bin.
5. Reattach the dust cup to the main unit until it clicks securely.

Cleaning the HEPA Filter:

The HEPA filter should be cleaned regularly, ideally after every few uses, or when suction power decreases.

1. With the dust cup removed, carefully take out the HEPA filter.
2. Tap the filter gently over a trash bin to remove loose dust and debris.
3. If necessary, rinse the filter under cool running water. **Do not use detergent.**

4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner**Do not use the vacuum with a wet filter.**

General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use harsh cleaners or solvents.
- Check the floor brush for any tangled hair or debris and remove them as needed.
- Store the vacuum cleaner in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Deerma DX118C, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; Power outlet issue; Damaged cord/plug.	Ensure plug is firmly in outlet; Test outlet with another appliance; Contact customer support if cord/plug is damaged.
Low suction power.	Full dust cup; Clogged filter; Blockage in nozzle/tube.	Empty dust cup; Clean or replace HEPA filter; Check and clear any blockages in the floor brush, extension tube, or main unit opening.
Unusual noise during operation.	Blockage; Loose part; Motor issue.	Check for and remove any blockages; Ensure all parts are securely assembled; If noise persists, discontinue use and contact customer support.
Dust escaping from vacuum.	Dust cup not properly installed; Filter missing or damaged.	Ensure dust cup is securely latched; Check that HEPA filter is correctly installed and not damaged. Replace if necessary.

SPECIFICATIONS

Brand	Deerma
Model Number	DX118C
Color	White
Product Dimensions	20 x 30 x 50 cm
Item Weight	2.02 Kilograms
Power / Wattage	160 watts
Voltage	220 Volts
Noise Level	76 dB
Special Features	Lightweight, HEPA Filtration

Filter Type	Cloth (HEPA)
Surface Recommendation	All floors
Power Source	Corded Electric

WARRANTY AND SUPPORT

Deerma products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Deerma website.

If you require technical assistance, have questions about your product, or need to claim warranty service, please contact Deerma customer support through the following channels:

- **Official Website:** www.deerma.com (Please check for regional websites for specific contact information)
- **Customer Service Email:** Refer to your product packaging or official website.
- **Customer Service Phone:** Refer to your product packaging or official website.

When contacting support, please have your product model number (DX118C) and purchase date ready.

© 2024 Deerma. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

