

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components W10509257 Dishwasher Door Gasket User Manual

UpStart Components AP-WPW10509257-2PK-DL132

UpStart Components W10509257 Dishwasher Door Gasket User Manual

Model: AP-WPW10509257-2PK-DL132

1. INTRODUCTION

This manual provides detailed instructions for the proper installation, care, and troubleshooting of the UpStart Components W10509257 Dishwasher Door Gasket. This product is a high-quality, durable replacement part designed to restore the sealing integrity of your dishwasher door, preventing leaks and ensuring efficient operation.

The W10509257 Dishwasher Door Gasket is compatible with various models, including Whirlpool DU840SWLQ0, and serves as a direct replacement for part numbers WPW10509257, AP6022476, W10509257, 3368994, 3376927, PS11755809, W10082795, and WPW10509257VP. This package includes two (2) gaskets for your convenience.



An image showing the black rubber dishwasher door gasket, coiled for packaging. This gasket forms a seal around the dishwasher door to prevent water leaks during operation.

2. SAFETY INFORMATION

Before attempting any repair or installation, please read and understand all safety precautions. Failure to follow these instructions may result in personal injury or damage to the appliance.

- **Disconnect Power:** Always ensure the dishwasher is completely disconnected from its power source (unplugged or circuit breaker off) before beginning any work.
- **Personal Protective Equipment:** Wear appropriate personal protective equipment, such as work gloves and eye protection, to prevent injury.
- **Professional Assistance:** If you are unsure about any step of the installation process, it is recommended to consult a qualified appliance technician.
- **Sharp Edges:** Be aware of potential sharp edges or components inside the dishwasher during installation.

3. INSTALLATION INSTRUCTIONS

This gasket is designed for easy at-home installation. Please verify that this is the correct part for your dishwasher model by checking your original part number before proceeding.

1. **Prepare the Dishwasher:** Ensure the dishwasher is unplugged from the electrical outlet or that the circuit breaker supplying power to the dishwasher is turned off. Open the dishwasher door completely.
2. **Remove Old Gasket:** Carefully locate the existing door gasket. It is typically seated in a groove around the inner perimeter of the dishwasher tub opening. Gently pull the old gasket out of the groove, starting from one corner. It may be held in place by friction or small clips.
3. **Clean the Gasket Groove:** Thoroughly clean the groove where the old gasket was seated. Remove any food debris, grime, or residue that may have accumulated. A clean groove ensures a proper seal for the new gasket.
4. **Install New Gasket:** Begin by inserting one end of the new UpStart Components W10509257 gasket into the groove at the top center of the dishwasher tub opening. Carefully work your way around the perimeter, pressing the gasket firmly into the groove. Ensure the gasket is fully seated and flush with the tub surface.
5. **Check for Proper Seating:** Once the gasket is fully installed, gently run your finger along the entire length of the gasket to ensure it is evenly seated and there are no bulges or twists.
6. **Test the Seal:** Close the dishwasher door slowly and firmly. The door should close smoothly and create a tight seal. Reconnect power to the dishwasher and run a short cycle to check for any leaks. If leaks occur, re-examine the gasket's seating.

4. OPERATING PRINCIPLE

The dishwasher door gasket functions as a critical seal, preventing water from escaping the dishwasher tub during wash cycles. When the dishwasher door is closed, the gasket compresses against the tub frame, creating a watertight barrier. A properly installed and maintained gasket is essential for the efficient and leak-free operation of your dishwasher.

5. CARE AND MAINTENANCE

To ensure the longevity and effectiveness of your dishwasher door gasket, follow these simple maintenance tips:

- **Regular Inspection:** Periodically inspect the gasket for any signs of wear, cracks, tears, or hardening. Replace the gasket if any damage is observed.
- **Cleaning:** Regularly wipe down the gasket and the gasket groove with a damp cloth to remove food particles, grease, and detergent residue. This prevents buildup that can compromise the seal.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners or harsh chemicals on the gasket, as these can

degrade the material over time.

6. TROUBLESHOOTING

If you experience issues after installing the new gasket, consider the following common problems and solutions:

- Issue:** Water leaking from the dishwasher door.
Solution:
 - Ensure the gasket is fully and evenly seated in its groove around the entire perimeter of the dishwasher tub.
 - Check for any twists or kinks in the gasket that might prevent a proper seal.
 - Inspect the gasket for any damage that may have occurred during installation.
 - Verify that the dishwasher door latches securely and applies adequate pressure to the gasket.
- Issue:** Dishwasher door not closing properly or difficult to close.
Solution:
 - Ensure the gasket is not pinched or misaligned.
 - Check if the gasket is too thick or if there's any obstruction in the door's closing path.
 - Allow some time for the new gasket to compress and conform to the door frame.

7. PRODUCT SPECIFICATIONS

Brand	UpStart Components
Model Number	AP-WPW10509257-2PK-DL132
Part Number	AP-WPW10509257-2PK-DL132
ASIN	B084H1QD87
Quantity	2 Gaskets
Compatible Part Numbers	WPW10509257, AP6022476, W10509257, 3368994, 3376927, PS11755809, W10082795, WPW10509257VP
Date First Available	February 5, 2020

8. WARRANTY INFORMATION

Any warranties for this product are offered solely by UpStart Components. This product is a replacement part and is not affiliated with any original equipment manufacturer (OEM) brands, nor is it covered under any warranties offered by the original manufacturers. For specific warranty details, please refer to the terms provided by UpStart Components at the time of purchase.

9. CUSTOMER SUPPORT

For further assistance, questions regarding installation, or troubleshooting, please contact UpStart Components customer support. Refer to your purchase documentation or the seller's information for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084H1QD87>

More documents and user manuals: <https://manuals.plus/>