

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GUESS](#) /

› **GUESS Men's Analog Quartz Watch GW0050G3 User Manual**

GUESS GW0050G3

User Manual

GUESS MEN'S ANALOG QUARTZ WATCH GW0050G3

Model: GW0050G3

Introduction

This manual provides detailed instructions for the proper setup, operation, and maintenance of your GUESS Men's Analog Quartz Watch, Model GW0050G3. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

Product Overview



Image 1: Front view of the GUESS GW0050G3 watch. It features a round orange silicone case and strap, with a black digital display showing time, date, and other functions. Four silver buttons are visible on the sides, labeled LIGHT, MODE, START, and SET.

Key Features:

- **Case:** Round orange silicone over steel construction.
- **Strap:** Orange iconic logo silicone strap with a secure buckle closure.
- **Display:** Black digital display.
- **Functions:** Includes digital time display, day, date, month, 1/100 second chronograph, and alarm.

Watch Components:

Your GW0050G3 watch features four primary control buttons:

- **LIGHT Button:** Activates the backlight for visibility in low-light conditions.
- **MODE Button:** Cycles through different display modes (Time, Chronograph, Alarm, Timer).
- **START Button:** Used to start/stop functions in chronograph mode or adjust settings.
- **SET Button:** Used to enter setting modes and confirm selections.

Setup

Initial Power-On:

Your watch comes with a Lithium Metal battery pre-installed. It should be ready for immediate use. If the display is blank, press any button to activate it. If it remains blank, the battery may need replacement (refer to the Maintenance section).

Setting Time and Date:

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Press the **SET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, 12/24-hour format).
3. Use the **START** button to increase the value of the selected digit. Hold the **START** button for faster adjustment.
4. Continue pressing **SET** to move to the next setting (minutes, year, month, day). Adjust each using the **START** button.
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

Operating Instructions

Using the Chronograph (Stopwatch):

1. Press the **MODE** button until "STW" (Stopwatch) is displayed.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the timing.
4. To resume, press **START**. To reset the stopwatch to zero, press the **SET** button while the stopwatch is paused.
5. Press the **MODE** button to exit stopwatch mode.

Setting the Alarm:

1. Press the **MODE** button until "ALM" (Alarm) is displayed.
2. Press the **SET** button to enter alarm setting mode. The hour digits will flash.
3. Use the **START** button to adjust the hour.
4. Press **SET** to move to the minute digits and adjust using the **START** button.
5. Press **SET** again to toggle the alarm ON/OFF (usually indicated by an alarm icon). Use **START** to switch.
6. Press the **MODE** button to exit alarm setting mode.

Using the Backlight:

Press the **LIGHT** button to illuminate the display for a few seconds. This feature is useful in dark environments.

Maintenance

Cleaning Your Watch:

Wipe the watch case and strap regularly with a soft, dry cloth. For silicone parts, a slightly damp cloth with mild soap can be used, followed by thorough drying. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Water Resistance:

While your watch is designed for daily wear, it is important to understand its water resistance rating. Avoid prolonged exposure to water, hot water, or steam. Do not operate buttons while the watch is submerged in water.

Battery Replacement:

The watch uses a Lithium Metal battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance integrity.





Image 2: Left: Rear view of the orange silicone strap with a silver buckle. Right: Side profile of the watch, highlighting the orange silicone case and the silver control buttons.

Troubleshooting

- **Display is blank or dim:** The battery may be low or depleted. Consider professional battery replacement.
- **Time is incorrect:** Re-enter the time setting mode and adjust the time and date as per the "Setting Time and Date" instructions.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If issues persist, a battery reset or professional inspection may be required.

Specifications

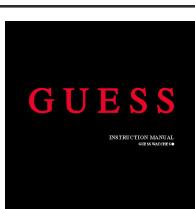
Feature	Detail
Model Number	GW0050G3
Brand	GUESS
Movement	Quartz
Display Type	Digital
Case Material	Silicone over Steel
Strap Material	Silicone
Strap Length	190mm
Dial Color	Black (Digital)
Battery Type	1 Lithium Metal battery (included)
Product Dimensions	8 x 9 x 9 cm
Item Weight	250 g

Warranty and Support

For information regarding the warranty period and terms for your GUESS watch, please refer to the warranty card included with your purchase or visit the official GUESS website. For technical support or service inquiries, please contact GUESS customer service directly.

You can often find additional support resources and contact information on the official [GUESS website](#).

Related Documents - GW0050G3

	<p>Guess Watches Instruction Manual - Features, Operation, and Setup Comprehensive instruction manual for Guess watches, covering operation, features, chronograph functions, analog-digital models, and setup procedures for various watch types. Includes guidance on time, date, day, alarm, timer, and stopwatch functions.</p>
	<p>GUESS Watch User Guide Comprehensive user guide for GUESS watches, covering setup, care, warranty, and various movement functionalities. Learn how to operate and maintain your GUESS timepiece.</p>

 <p>CG MOBILE GŁOŚNIKI Stachawki bezprzewodowe GUESS BT 4G ze skórą ekologiczną z metalowym logo – niebieskie Instrukcja obsługi <small>Model: GUESS BT 4G</small></p> <p>1. WYKŁADZIENIE Deklaracja o spójności zgodności technicznej GUESS BT 4G PU LEATHER Z METALOWYM LOGO NAPISANYM – NIEBIESKIM. Wnosi się do instytucji zezwalającej na użycie przycisków, aby zapewnić, że produkt jest zgodny z kryteriami: - Dopuszczalny poziom głośności</p> <p>2. PRZESŁAĆ PRODUKTU Stosunek do pozwolenia GUESS BT 4G (Wysokość x Szerokość x Główka) i jego opakowanie, aby zapewnić, że produkt jest zgodny z kryteriami: - Dopuszczalny poziom głośności</p> <p>2.1. Zawartość opakowania • Główka do słuchawek GUESS BT 4G • Kabel dołączenia • Podkładka do słuchawek</p> <p>2.2. Elementy / informacje słuchawek</p>	<p><u>Guess BT 4G PU Leather Case with Metal Logo - Blue User Manual</u></p> <p>Official user manual for the Guess BT 4G PU Leather case with metal logo in blue. Learn about product features, safety guidelines, usage instructions, care, and warranty.</p>
	<p><u>Guess Script Metal Logo Headphones: User Manual and Specifications</u></p> <p>Comprehensive guide for Guess Script Metal Logo headphones, covering first use, controls, LED indicators, and technical specifications. Includes instructions for pairing, playback, calls, and voice assistant activation.</p>
	<p><u>GUESS Wireless Headphones OF-V27 User Manual</u></p> <p>User manual for GUESS Wireless Headphones, model OF-V27, providing instructions on Bluetooth pairing, operation, charging, and specifications.</p>
 <p>GUESS SMARTWATCH OWNER'S MANUAL A Complete Overview on How to Use Your Smartwatch</p>	<p><u>GUESS Connect iOS User Manual: A Complete Overview</u></p> <p>This user manual provides a comprehensive guide to setting up and using the GUESS Connect iOS smartwatch, covering features, controls, app integration, and troubleshooting.</p>