

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 137292700 Dryer Belt Replacement Manual for Frigidaire FLSE60RGS1

UpStart Components AP-137292700-DL16

UpStart Components 137292700 Dryer Belt Replacement Manual

For Frigidaire FLSE60RGS1 and compatible models

1. INTRODUCTION

This manual provides detailed instructions for the installation, maintenance, and troubleshooting of the UpStart Components 137292700 Dryer Belt. This replacement part is designed for compatibility with Frigidaire FLSE60RGS1 dryers and other models using the 134163500 drum belt. Please read this manual thoroughly before attempting any installation or repair to ensure safe and correct procedure.

2. SAFETY INFORMATION

WARNING: Always disconnect power to the appliance before performing any service or maintenance. Failure to do so can result in serious injury or death.

- Ensure the dryer is unplugged from the electrical outlet or the circuit breaker is turned off before beginning any work.
- Wear appropriate personal protective equipment, such as gloves, to protect hands from sharp edges or moving parts.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep children and pets away from the work area.
- Handle tools carefully to prevent injury.

3. PRODUCT OVERVIEW

The UpStart Components 137292700 Dryer Belt is a high-quality replacement part designed to restore proper tumbling function to your dryer. It is engineered for durability and ease of installation.

Compatible Part Numbers:

- 137292700
- AP4565702

- 134163500
- 134503900
- 148271
- 1615170
- 5303283287
- AH3408299
- EA3408299
- PS3408299



Figure 3.1: UpStart Components 137292700 Dryer Belt in its packaging.

4. INSTALLATION INSTRUCTIONS

Replacing a dryer belt requires disassembling parts of the dryer. Follow these steps carefully. Refer to your specific dryer model's service manual for detailed disassembly instructions if needed.

Tools You May Need: Screwdrivers (Phillips and flathead), nut drivers, work gloves.

1. **Disconnect Power:** Unplug the dryer from the wall outlet or turn off the circuit breaker supplying power to the dryer. This is a critical safety step.
2. **Access Dryer Interior:** Depending on your dryer model (e.g., Frigidaire FLSE60RGS1), you will need to remove the top panel, front panel, or both to gain access to the drum and motor assembly. This typically involves removing screws located at the back, top, or inside the door frame.
3. **Remove the Old Belt:**
 - Locate the motor and idler pulley assembly. The old belt will be wrapped around the dryer drum, the motor pulley, and the idler pulley.
 - Release tension from the idler pulley. This usually involves pushing the idler pulley to one side to loosen the belt.
 - Carefully remove the old belt from the motor pulley, idler pulley, and then from around the dryer drum. Inspect the old belt for signs of wear, fraying, or breakage.

4. **Install the New Belt:**



Figure 4.1: The new UpStart Components 137292700 Dryer Belt, coiled.

- Position the new UpStart Components 137292700 dryer belt around the dryer drum. Ensure the ribbed side of the belt faces the drum.
- Route the belt around the motor pulley and the idler pulley. The ribbed side of the belt should make contact with the motor pulley, and the smooth side typically rests against the idler pulley.
- Apply tension to the idler pulley to secure the belt in place. The belt should be taut but not

overly stretched.



Figure 4.2: Close-up view of the ribbed surface of the dryer belt, which should face the drum and motor pulley.

5. **Reassemble Dryer:** Carefully reattach all panels and screws that were removed during disassembly. Ensure all connections are secure.
6. **Test Operation:** Plug the dryer back into the electrical outlet or turn on the circuit breaker. Run a short cycle to ensure the drum tumbles correctly and there are no unusual noises.

5. OPERATING INSTRUCTIONS

This product is a replacement part. For operating instructions of your dryer, please refer to the original instruction manual provided by the dryer manufacturer (e.g., Frigidaire).

6. MAINTENANCE

Regular inspection of your dryer belt can help prevent future issues. It is recommended to:

- Periodically inspect the belt for signs of wear, cracks, fraying, or stretching. This can be done during other dryer maintenance, such as cleaning the lint trap housing.
- Ensure the dryer drum spins freely when the belt is disengaged (if accessible).
- Keep the area around the motor and pulleys free of lint and debris, as this can cause premature belt wear.

7. TROUBLESHOOTING

If your dryer is experiencing issues after belt replacement, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer drum does not tumble.	Belt not properly installed or broken.	Re-check belt installation. Ensure it is correctly routed around the motor and idler pulleys. Verify the belt is not broken.
Squealing or grinding noise during operation.	Belt rubbing against a component, worn idler pulley, or worn drum rollers.	Inspect belt routing for obstructions. Check idler pulley and drum rollers for wear and replace if necessary.
Dryer runs but clothes are not drying efficiently.	Not directly related to the belt, but could indicate other issues.	Check lint filter, exhaust vent for blockages, and heating element.

8. SPECIFICATIONS

Feature	Detail
Part Number	137292700 (AP-137292700-DL16)
Compatible OEM Part Numbers	134163500, AP4565702, 134503900, 148271, 1615170, 5303283287, AH3408299, EA3408299, PS3408299
Compatible Dryer Models	Frigidaire FLSE60RGS1 and others using compatible part numbers
Material	Durable, high-quality material
Manufacturer	UpStart Components

9. WARRANTY AND SUPPORT

This UpStart Components replacement part is not affiliated with any original equipment manufacturer (OEM) brands. Any warranties for this product are offered solely by UpStart Components. For specific warranty details or support inquiries, please contact UpStart Components directly through their official channels.

For general product information or to verify compatibility, please refer to the product listing or contact your retailer.