

[Manuals.plus](#) /

› [POTTY TIME](#) /

› Potty Watch for Kids Potty Training Instruction Manual

POTTY TIME pottywatch

POTTY TIME Potty Watch Instruction Manual

Model: pottywatch

PRODUCT OVERVIEW

The POTTY TIME Potty Watch is designed to assist with potty training by providing timely reminders. It features a built-in timer, music, and flashing lights to encourage children to use the potty at regular intervals. The watch is water-resistant and comes with an adjustable strap for a comfortable fit.



Figure 1: Front view of the POTTY TIME Potty Watch, displaying its digital timer and light indicators.



Figure 2: Key features and dimensions of the Potty Watch, highlighting its durable and child-friendly design.

Key Features:

- **Potty Training Reminders:** Programmed to play music and flash lights at set intervals (30, 60, or 90 minutes).
- **Durable Construction:** Made with premium-quality materials for resistance against abrasion.
- **Adjustable Strap:** Ensures a comfortable and secure fit for various wrist sizes.
- **Automatic Reset:** Timer automatically resets after each reminder for consistent training.
- **Water-Resistant:** Designed to be splash-proof for everyday use, including hand washing.

Your browser does not support the video tag.

Video 1: An official overview of the Potty Time Potty Watch, demonstrating its core features and benefits for potty training.

SETUP INSTRUCTIONS

The Potty Watch comes ready to use with pre-installed batteries. Follow these steps to set up the timer:

1. **Activate the Watch:** The watch may be in a "sleep" mode to conserve battery during shipping. Press any button to activate the display.
2. **Set the Timer Interval:**
 - Locate the "TIMER" button on the front of the watch.
 - Press and hold the "TIMER" button until the display shows "30", "60", or "90".
 - Tap the "TIMER" button repeatedly to cycle through the desired intervals (30, 60, or 90 minutes).
 - Release the button once your desired interval is displayed. The timer will automatically begin counting down.
3. **Wearing the Watch:** Adjust the soft jelly wristband to fit comfortably on your child's wrist. The stainless steel buckle ensures a secure fit.

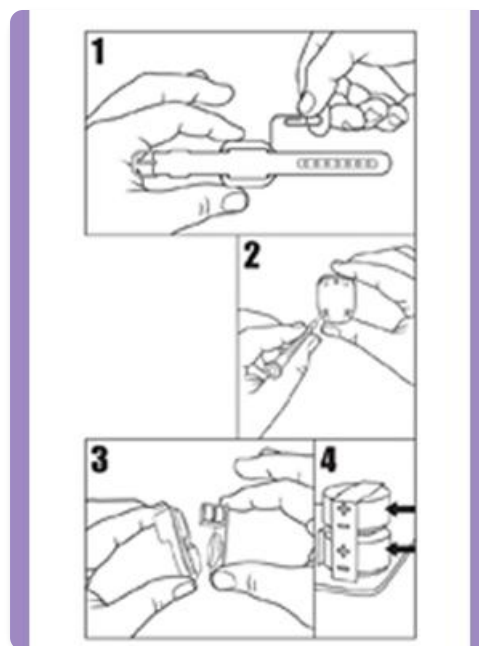


Figure 3: Diagram indicating the location of the 'Set' and 'Timer' buttons on the Potty Watch for easy setup.

OPERATING INSTRUCTIONS

Once the timer is set, the Potty Watch will operate automatically:

- **Timer Countdown:** The digital display will show the remaining time until the next reminder.
- **Reminder Alert:** When the timer reaches 00:00, the watch will activate flashing lights and play a fun song. This signals to your child that it's "potty time."
- **Automatic Reset:** After the song and lights conclude, the timer will automatically reset to the previously selected

interval and begin counting down again. This ensures consistent reminders throughout the day.

- **Music and Lights:** The watch features 3 fun songs and colorful lights to make potty time engaging for children.



Figure 4: The Potty Watch actively reminding a child with music notes and flashing lights.

MAINTENANCE

To ensure the longevity of your Potty Watch, proper maintenance is recommended. This includes occasional cleaning and battery replacement when needed.

Battery Replacement:

The Potty Watch uses 2 LR44 batteries. When the display becomes dim or the alerts are weak, it's time to replace the batteries. Refer to the video below for detailed instructions.

Your browser does not support the video tag.

Video 2: A step-by-step guide on how to change the batteries in your Potty Watch.

Cleaning:

Wipe the watch clean with a damp cloth. Avoid submerging the watch in water, as it is splash-proof but not fully waterproof.

TROUBLESHOOTING

If you encounter issues with your Potty Watch, try the following solutions:

- **Watch Not Activating/Display is Blank:**
 - Press any button to wake the watch from sleep mode.
 - Check the batteries. If they are old or depleted, replace them following the battery replacement instructions.
- **Lights or Music Not Working:**
 - Ensure the batteries are properly installed and have sufficient charge.
 - If the display shows "P 888", it indicates loose batteries. Gently press down on the battery contacts to ensure a secure connection.
- **Timer Not Counting Down Correctly:**
 - Re-set the timer interval to ensure it was correctly selected.
 - If the timer is significantly off, it may indicate very low battery power, even if the display is visible. Replace batteries.
- **Watch is Not Water-Resistant Anymore:**
 - Ensure the waterproof band around the internal components is properly seated after any battery changes.
 - Avoid prolonged exposure to water or submersion.

Frequently Asked Questions:

- **HOW DOES THE POTTY WATCH WORK?**

Simply set it for 30, 60 or 90 minute reminders. When the time is up it lights up & plays music reminding your tot it's time to go. It auto resets for the next reminder.
- **IS POTTY WATCH "WATER PROOF"?**

Now more water-resistant & completely splashproof. While you can't submerge it in water. It's better protected while helping your child wash their hands.
- **WILL POTTY WATCH HELP MY CHILD WITH SPECIAL NEEDS?**

Potty Watch is for everyone. You can review reviews on Facebook, Amazon or search #pottywatch on Instagram to see a thousand stories about successful Potty Training.

SPECIFICATIONS

Feature	Detail
Product Dimensions	1 x 1 x 1 inches
Item Model Number	pottywatch
Batteries	2 LR44 batteries required (included)
Material Type	Plastic

Additional Product Features	Timer
Item Weight	1.76 ounces
Country/Region of Origin	China

WHAT'S IN THE BOX

- Potty Training Seat with Removable Insert
- Set of Six Reusable Magic Color Changing Stickers

Note: The "What's in the Box" section from the product data may refer to a bundle. The primary product is the Potty Watch.

WARRANTY AND SUPPORT

POTTY TIME is a family-owned U.S. small business. We are committed to providing quality products and support for your potty training journey.

- **Warranty:** The product typically comes with a 60-day warranty. Please refer to your purchase documentation for specific warranty details.
- **Customer Service:** For any questions, concerns, or support needs, please visit the official POTTY TIME website or contact their customer service as indicated on the product packaging.

© 2024 POTTY TIME. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question