

Hespéride 3560238679241

Hespéride Allure Extendable Garden Table Instruction Manual

Model: 3560238679241

[Safety Information](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Read all instructions and warnings carefully before assembling, using, or maintaining this product. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all components are present and undamaged before assembly.
- Assemble the table on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly.
- Keep children and pets away from the assembly area.
- Do not stand or sit on the table.
- Distribute weight evenly across the table surface. The maximum recommended distributed load is 50 kg.
- Regularly check all bolts and connections to ensure they remain tight.
- Use the table only for its intended purpose as an outdoor dining or gathering surface.

2. SETUP AND ASSEMBLY

The Hespéride Allure Extendable Garden Table requires assembly. Follow these general steps. Refer to the included hardware and specific diagrams in your product packaging for detailed instructions.

2.1 Unpacking

1. Carefully remove all components from the packaging.
2. Lay out all parts on a protective surface to identify them and check for any damage.
3. Verify that all hardware (screws, bolts, washers, tools) is present according to the parts list.

2.2 Assembling the Table Frame

1. Attach the table legs to the main frame using the provided bolts and tools. Ensure all connections are secure but do not fully tighten yet.
2. If there are crossbars or support beams, attach them to stabilize the frame.

2.3 Attaching the Tabletop

1. Carefully place the tabletop sections onto the assembled frame.
2. Secure the tabletop sections to the frame using the designated screws.
3. Once all parts are loosely assembled, gradually tighten all screws and bolts evenly until secure. Do not overtighten.



Figure 1: Hespéride Allure Garden Table in its compact, unextended form.



Figure 2: Top-down view of the table, showing the compact configuration.

3. OPERATING INSTRUCTIONS: EXTENDING THE TABLE

The Hespéride Allure table features an extendable design, allowing it to accommodate more guests. The extension mechanism is designed for ease of use.

3.1 Extending the Table

1. **Clear the Table:** Ensure there are no items on the table surface before attempting to extend it.
2. **Unlock (if applicable):** Some extendable tables have latches or locks underneath. Check if your table has any and unlock them.
3. **Pull Apart:** Gently pull the two main halves of the tabletop apart. The table will slide smoothly on its runners, revealing the central extension leaf storage area or space for the leaf.
4. **Insert Extension Leaf:** If your table uses a separate leaf, carefully lift and place the extension leaf into the gap created. Align it with the main tabletop sections.
5. **Push Together:** Gently push the two main halves of the tabletop back together until they meet the extension leaf and form a continuous surface.
6. **Lock (if applicable):** Secure any latches or locks underneath the table to prevent accidental retraction.

3.2 Retracting the Table

1. **Clear the Table:** Ensure the table is clear of all items.
2. **Unlock (if applicable):** Release any latches or locks securing the extended table.
3. **Pull Apart:** Gently pull the two main halves of the tabletop apart slightly to create a gap.
4. **Remove Extension Leaf:** Carefully lift and remove the extension leaf. Store it in a safe, dry place, or in the table's integrated storage if available.
5. **Push Together:** Push the two main halves of the tabletop back together until they meet and form the compact table.
6. **Lock (if applicable):** Secure any latches or locks to keep the table in its compact form.



Figure 3: The Hespéride Allure Garden Table in its extended configuration, accommodating more seating.



Figure 4: An overhead view of the extended table, showcasing its capacity for outdoor dining.

4. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your Hespéride Allure Extendable Garden Table.

4.1 Cleaning

- Clean the table regularly with a soft, damp cloth.
- For stubborn dirt, use a mild soap solution and rinse thoroughly with clean water.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- Dry the table completely after cleaning to prevent water spots.

4.2 Protection

- While designed for outdoor use, protecting the table from extreme weather conditions (heavy rain, snow, prolonged

direct sunlight) will extend its lifespan.

- Consider using a protective cover when the table is not in use for extended periods, especially during off-season.
- Store the table in a dry, sheltered area during winter months if possible.

4.3 Inspection

- Periodically inspect all bolts, screws, and connections to ensure they are tight. Retighten as necessary.
- Check the extension mechanism for smooth operation and lubricate moving parts with a silicone-based spray if needed.



Figure 5: Detail of the table surface, highlighting the aluminum material with wood-effect finish.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your extendable garden table.

Problem	Possible Cause	Solution
Table feels wobbly or unstable.	Loose bolts or uneven surface.	Ensure all assembly bolts are securely tightened. Place the table on a flat, level surface. If on uneven ground, use shims under the legs.
Extension mechanism is stiff or difficult to operate.	Lack of lubrication, dirt in runners, or misalignment.	Clean the runners and moving parts of the extension mechanism. Apply a silicone-based lubricant to the sliding tracks. Check for any obstructions or misaligned parts.
Tabletop sections do not align perfectly when extended/retracted.	Misalignment during assembly or uneven ground.	Ensure the table is on a level surface. Check if the extension leaf is inserted correctly. If the issue persists, re-check assembly steps for proper alignment of the frame and tabletop sections.
Scratches or marks on the surface.	Abrasion from objects or improper cleaning.	Use placemats or coasters to protect the surface. Avoid dragging objects across the table. Use only soft cloths for cleaning. Minor scratches may be buffed out with appropriate aluminum-safe polish, if applicable to the finish.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	3560238679241
Brand	Hespéride
Dimensions (Compact)	115 cm (Length) x 115 cm (Width) x 77 cm (Height)
Dimensions (Extended)	Approximately 240 cm (Length) x 115 cm (Width) x 77 cm (Height)
Weight	44.5 Kilograms
Maximum Recommended Load	50 Kilograms (distributed evenly)
Frame Material	Aluminum with epoxy treatment
Tabletop Material	Aluminum with nutmeg wood-effect finish
Color	Nutmeg / Graphite
Shape	Rectangular (when extended)
Recommended Use	Outdoor dining, gatherings, and events
Country of Origin	China

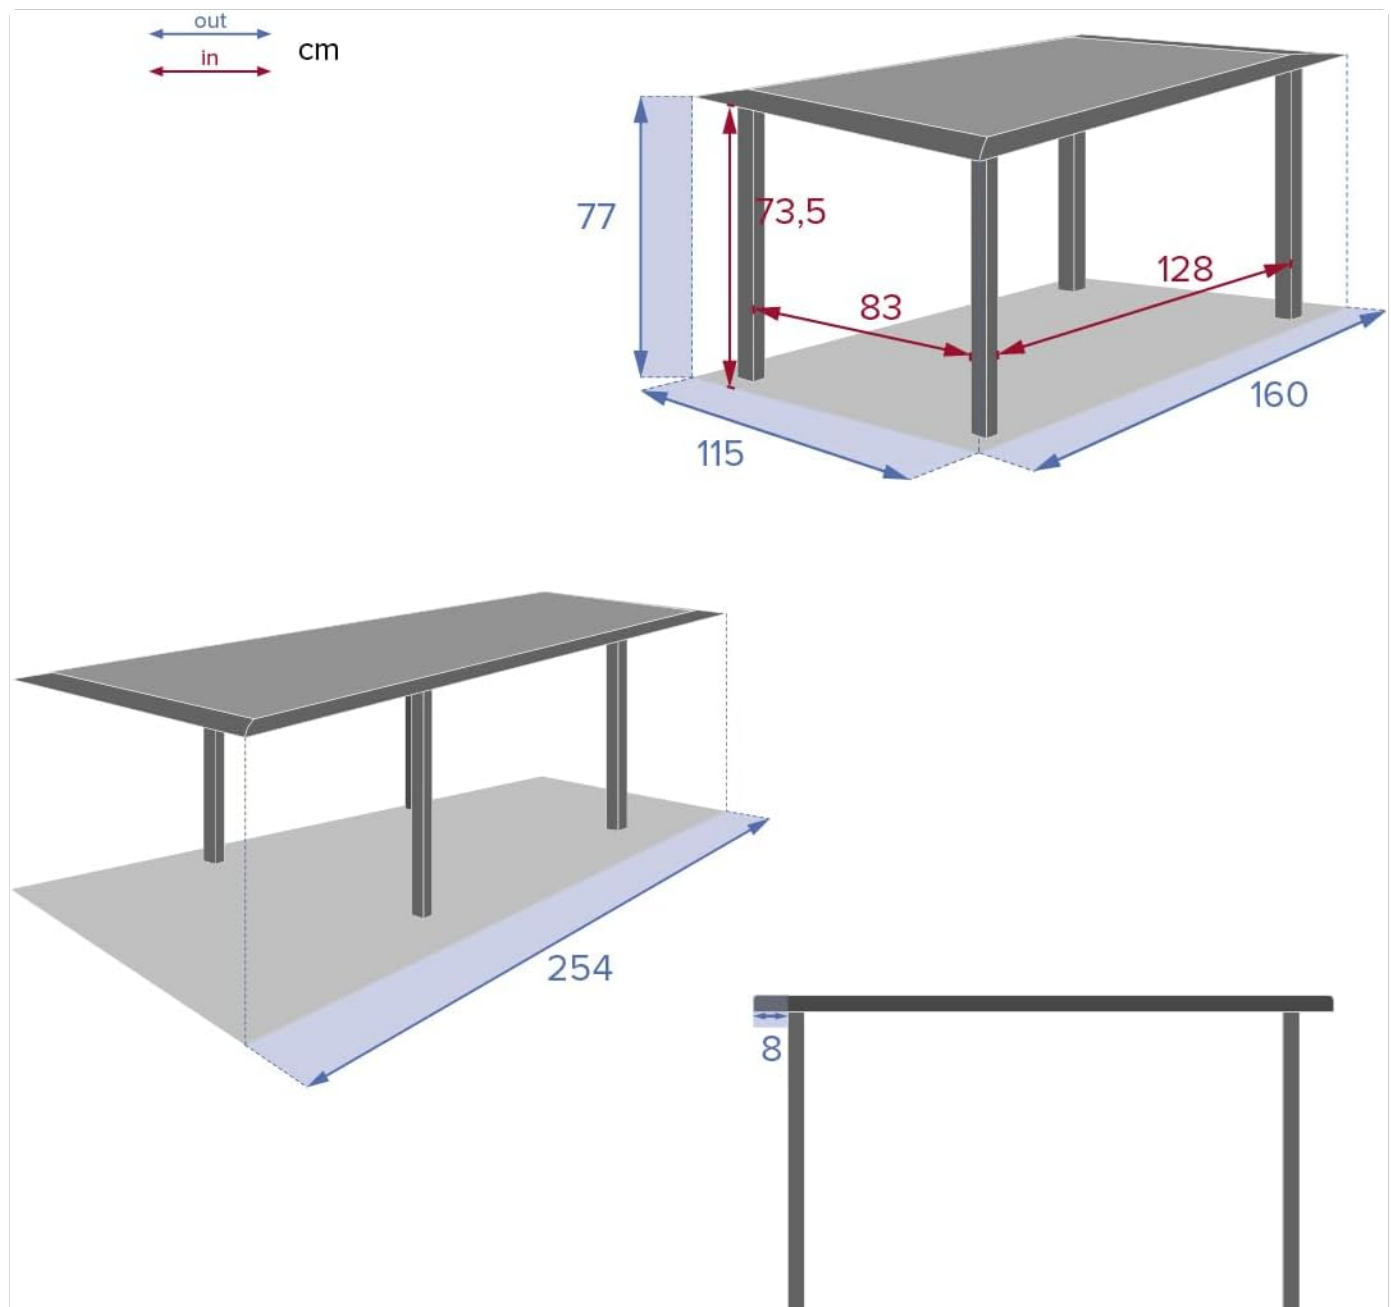


Figure 6: Dimensional diagram of the table, illustrating compact and extended lengths.

7. WARRANTY AND CUSTOMER SUPPORT

Information regarding the specific warranty period and terms for the Hespéride Allure Extendable Garden Table is not available in the provided product data. Please refer to your purchase documentation or the official Hespéride website for detailed warranty information.

7.1 Customer Support

For any questions, missing parts, or assistance with assembly or operation, please contact Hespéride customer support or the retailer from whom you purchased the product. Contact details are typically found on the manufacturer's website or your purchase receipt.

You can visit the Hespéride brand store for more information: [Hespéride Brand Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question