

Cecotec Force Clima 12500

Cecotec Force Clima 12500 Cold&Warm Portable Air Conditioner User Manual

Model: Force Clima 12500 (05259)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before operating your Cecotec Force Clima 12500 portable air conditioner. Keep it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the unit is connected to a properly grounded power outlet with the correct voltage (240V).
- Do not operate the unit with a damaged power cord or plug.
- Do not block air inlets or outlets. Maintain at least 20 cm clearance around the unit.
- Do not insert objects into the air vents.
- Keep the unit away from flammable materials and heat sources.
- Always unplug the unit before cleaning or performing any maintenance.
- Do not use the unit in wet environments such as bathrooms or laundries.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The unit includes safety features such as anti-frost, anti-overflow, and compressor safety.

2. PRODUCT OVERVIEW AND COMPONENTS

The Cecotec Force Clima 12500 is a portable air conditioner designed for cooling, heating, dehumidifying, and fan-only operation. It features a 12000 BTU capacity, remote control, and an LED display.

Components Included:

- 1 x Portable Air Conditioner Unit
- 1 x Remote Control
- 1 x Window Kit (for exhaust hose installation)

- 1 x Exhaust Hose
- 1 x User Manual



Figure 1: Cecotec Force Clima 12500 unit in a living space, showcasing its compact design.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the air conditioner from its packaging. Retain the packaging for future storage or transport. Check for any damage during transit.

3.2 Placement

Place the unit on a flat, stable surface. Ensure there is at least 20 cm of space around the unit for proper airflow. The unit is equipped with 360° multi-directional wheels for easy movement.

3.3 Exhaust Hose and Window Kit Installation

The portable air conditioner requires an exhaust hose to vent hot air outside. This is crucial for effective cooling and heating.

1. Attach one end of the exhaust hose to the air outlet on the back of the unit.
2. Extend the exhaust hose to the nearest window.
3. Install the provided window kit into the window opening. This kit helps seal the window around the exhaust hose to prevent outside air from entering.
4. Secure the other end of the exhaust hose to the window kit adapter, ensuring a tight seal.



Figure 2: Portable air conditioner with exhaust hose installed in a window for proper ventilation.

3.4 Drainage Setup

During dehumidification or cooling modes, water will accumulate inside the unit. The unit has a dehumidification capacity of up to 28 liters per day. You can choose between manual drainage or continuous drainage:

- **Manual Drainage:** When the internal water tank is full, the unit will stop operating and an indicator will light up. Turn off the unit, place a suitable container under the drainage port, and remove the drain plug to empty the water. Replace the plug securely after draining.
- **Continuous Drainage:** For continuous operation, especially in high humidity, connect a drain hose (not included) to

the continuous drainage port and direct it to a floor drain or a larger container.

4. OPERATING INSTRUCTIONS

The unit can be controlled via the integrated LED display panel or the remote control.

4.1 Control Panel and Remote Control



Figure 3: Remote control for convenient operation.



Figure 4: Close-up view of the unit's top control panel and LED display.

4.2 Power On/Off

Press the **Power** button on the control panel or remote control to turn the unit on or off.

4.3 Mode Selection

Press the **Mode** button to cycle through the 5 available operating modes:

- **Cooling Mode:** For cooling the room. Adjust temperature using the Up/Down arrows.
- **Heating Mode:** For heating the room (heat pump function). Adjust temperature using the Up/Down arrows.
- **Fan Mode:** Circulates air without cooling or heating.
- **Dehumidification Mode:** Removes excess moisture from the air.
- **Night Mode (Sleep Mode):** Operates quietly with reduced fan speed and gradually adjusts temperature for comfortable sleep.

4.4 Temperature Adjustment

In Cooling or Heating mode, use the **Up** and **Down** arrow buttons to set your desired temperature.

4.5 Fan Speed Selection

Press the **Fan Speed** button to select from 3 available fan speeds (Low, Medium, High).

4.6 Timer Function

The timer allows you to set the unit to turn on or off automatically after a specified period, up to 24 hours.

1. Press the **Timer** button.
2. Use the **Up** and **Down** arrows to set the desired time in hours.
3. The timer will activate after a few seconds.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner. Always unplug the unit before cleaning.

5.1 Cleaning the Air Filter

The unit is equipped with an antimicrobial air filter. A dirty filter can reduce efficiency and airflow.

1. Locate the air filter panel, usually on the back or side of the unit.
2. Remove the filter.
3. Clean the filter using a vacuum cleaner to remove dust, or wash it gently with lukewarm water and mild detergent.
4. Allow the filter to dry completely before reinstalling it.
5. Clean the filter every two weeks or more frequently depending on usage and air quality.

5.2 Draining Accumulated Water

If not using continuous drainage, regularly check and drain the internal water tank as described in Section 3.4. Failure to drain can lead to the unit shutting down.

5.3 Storage

If storing the unit for an extended period:

1. Ensure all water is drained from the unit.
2. Clean the air filter.
3. Unplug the power cord and coil it neatly.
4. Store the unit in a dry, upright position, preferably in its original packaging.

6. TROUBLESHOOTING

Before contacting customer support, review the following common issues and solutions.

Problem	Possible Cause	Solution
Unit does not turn on	No power; Power cord not plugged in; Water tank full	Check power supply; Plug in power cord; Drain water tank

Problem	Possible Cause	Solution
Not cooling/heating effectively	Air filter dirty; Exhaust hose not properly installed; Room too large; Doors/windows open	Clean air filter; Ensure exhaust hose is sealed; Close doors/windows; Check room size (max 25 m ²)
Water leakage	Drain plug loose; Unit not level; Continuous drain hose blocked	Secure drain plug; Place unit on a level surface; Clear any blockages in the drain hose
Unit is noisy	Unit not level; Fan speed too high; Internal components vibrating	Ensure unit is on a level surface; Reduce fan speed; This is a portable unit, some operational noise is normal.
Remote control not working	Batteries dead; Obstruction between remote and unit	Replace batteries; Remove any obstructions; Ensure remote is pointed at the unit's receiver

If the problem persists after trying these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Technical specifications for the Cecotec Force Clima 12500 Portable Air Conditioner.

Feature	Specification
Model Name	Force Clima 12500 Cold&Warm
Model Number	05259
Cooling Capacity	12000 BTU
Heating Function	Yes (Heat Pump)
Power (Electrical)	1340 W
Voltage	240 Volt
Dimensions (D x W x H)	52.5P x 46l x 83.5H cm
Weight	1 Kilograms (Note: This weight seems incorrect for an AC unit, please refer to product packaging for accurate weight.)
Noise Level	1 Decibel (Note: This noise level seems incorrect, please refer to product packaging for accurate noise level.)
Coverage Area	Up to 25 m ²
Modes	Cooling, Heating, Fan, Dehumidification, Night
Fan Speeds	3
Dehumidification Capacity	Up to 28 liters/day
Control Method	Remote Control, On-unit Display

Feature	Specification
Filter Type	Antimicrobial Air Filter
Energy Efficiency Rating (BEE)	5 stars
Seasonal Energy Efficiency Ratio (SEER)	15



Figure 5: Detailed dimensions of the unit.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Cecotec product comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. The availability of spare parts in the EU is guaranteed for 10 years.

8.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Cecotec customer support. Contact details can typically be found on the official Cecotec website or on your purchase documentation.

You can also visit the [Cecotec Store on Amazon](#) for more product information and support resources.