

[Manuals.plus](#) /

› [BALMUDA](#) /

› BALMUDA The Toaster User Manual

BALMUDA K01M-KG

BALMUDA The Toaster User Manual

MODEL: K01M-KG

INTRODUCTION

Thank you for choosing BALMUDA The Toaster. This innovative steam oven toaster is designed to elevate your culinary experience, offering precise heat control and steam technology to achieve perfect results for various types of bread and oven-cooked dishes. This manual provides essential information for safe and effective use, setup, operation, maintenance, and troubleshooting.



IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always use a heatproof dish when heating pizza or other foods that may drip oil on the heater tube to prevent fire risk.
- To prevent burns, use a tong or pot holder when taking out food or containers from the toaster.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and flammable materials.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

Components



**Fits two slices and compact size
suitable for any kitchen**



BALMUDA baking pan included



Width: 14.1 in.



Width: 12.6 in.

Height:
8.2 in.

Contents of the package, including the toaster unit, instruction manual, 5cc cup, toasting rack, and baking pan.

Your BALMUDA The Toaster comes with the following components:

- Toaster Unit
- Baking Pan
- Toasting Rack
- 5cc Water Cup
- Instruction Manual

Controls

The toaster features two main control knobs:

- **Mode Dial:** Selects the cooking mode (Sandwich Bread, Artisan Bread, Pizza, Pastry, Oven).
- **Timer Dial:** Sets the cooking time (up to 15 minutes) and acts as the ON/OFF switch.



The mode dial allows selection of specific cooking functions and temperatures.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Placement:** Place the toaster on a flat, stable, and heat-resistant surface with adequate clearance from walls and other appliances for ventilation.
3. **First Use Cleaning:** Before first use, wipe the interior and exterior with a damp cloth. Wash the baking pan, toasting rack, and 5cc cup with warm, soapy water, then rinse and dry thoroughly.
4. **Water Reservoir:** For modes requiring steam, fill the 5cc cup with water and pour it into the water inlet on top of the toaster. Ensure the water tank is clean and free of debris.



Pouring water into the designated reservoir for steam generation.

OPERATING INSTRUCTIONS

General Operation


1. Place the food on the toasting rack or baking pan and slide it into the toaster.
2. If using a steam mode, add 5cc of water to the water reservoir.
3. Select the desired cooking mode using the Mode Dial.
4. Set the cooking time using the Timer Dial. The toaster will begin heating automatically.
5. Once the timer reaches zero, the toaster will turn off. Carefully remove the food using tongs or oven mitts.

Cooking Modes

BALMUDA The Toaster offers five specialized cooking modes to optimize results for different foods:

Four modes that make all types of bread more delicious.

Plus an Oven Mode that's ideal for cooking!

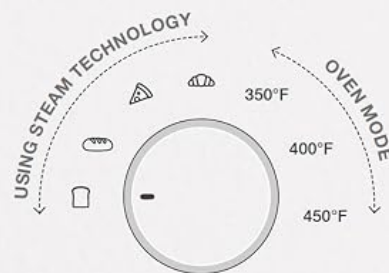

Sandwich Bread Mode

Gives thinly sliced bread a deliciously crisp surface with a light, moist interior.



Artisan Bread Mode

Toasts thicker slices of bread a crisp, fragrant golden brown, sealing the moisture in just like dry-frying in a frying pan.



Pizza Mode

Grills food using a higher-temperature upper heating element. Recommended to give a crusty, golden brown surface to foods like pizza or toast with toppings.



Pastry Mode

Warms pastries and breads thoroughly, without browning.

350°F
400°F
450°F

Oven Mode

This mode is used without adding water. Ideal for frozen foods, cheese-topped gratins and other oven-cooked dishes.

Overview of the specialized cooking modes and their applications.

- **Sandwich Bread Mode:** Ideal for thin slices of bread, creating a deliciously crisp surface with a light, moist interior. Perfect for everyday toast.



Sandwich Bread Mode

Elevate your toast to a new level.

Toast prepared with Sandwich Bread Mode, showing a crisp exterior and soft interior.

- **Artisan Bread Mode:** Toasts thicker slices of bread, such as sourdough or rye, to a crisp, fragrant golden brown, sealing in moisture.
- **Pizza Mode:** Grills food using a higher-temperature upper heating element. Recommended for giving a crusty, golden-brown surface to foods like pizza or toast with toppings.



Pizza Mode

Pizza made fresh again.

Pizza slice perfectly reheated with Pizza Mode, restoring its fresh taste and texture.

- **Pastry Mode:** Warms pastries and breads thoroughly without excessive browning, restoring their fluffy texture and crisp exterior.



Pastry Mode

Re-fluff & crisp up your
croissant at home.

A croissant re-fluffed and crisped using Pastry Mode.

- **Oven Mode:** This mode is used without adding water. Ideal for frozen foods, cheese-topped gratins, and other oven-cooked dishes. Available temperatures: 350°F, 400°F, 450°F.



350°F
400°F
450°F

Oven Mode

Toast to oven for everyday use.

A gratin dish baked to perfection using the Oven Mode.

Steam Technology


The unique steam technology of BALMUDA The Toaster works by enveloping the bread in a thin layer of steam, which heats more rapidly than air. This process lightly toasts the surface while keeping the inner moisture and flavor from escaping, resulting in a perfectly crisp exterior and a soft, fluffy interior.



Steam Technology

Enjoy the ultimate toast. Crisp on top,
soft and moist inside.

Adding water to the steam reservoir for optimal toasting results.

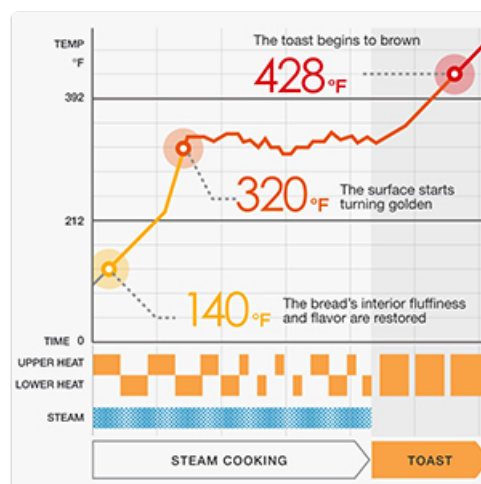

The precise temperature control and steam process ensure ideal texture and flavor.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your toaster.

- **Daily Cleaning:** After each use, allow the toaster to cool completely. Remove the toasting rack and baking pan and wash them with warm, soapy water. Wipe the interior and exterior with a damp cloth.
- **Crumb Tray:** The crumb tray is located at the bottom of the toaster. Pull it out, empty crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before reinserting.
- **Water Reservoir:** Periodically clean the water reservoir to prevent mineral buildup. Use a soft brush or cloth to wipe the inside. For stubborn deposits, a solution of water and white vinegar can be used, followed by thorough rinsing.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.

TROUBLESHOOTING

If you encounter any issues with your BALMUDA The Toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet issue; timer not set.	Ensure plug is securely in outlet. Check power outlet. Turn timer dial past '0' to activate.
Bread is not toasting evenly.	Incorrect mode selected; uneven placement of food.	Ensure correct mode for bread type. Distribute food evenly on the rack.
Steam is not visible or insufficient.	Water reservoir empty; mineral buildup.	Add 5cc of water to the reservoir. Clean the water reservoir if mineral buildup is present.
Food is burning.	Time set too long; incorrect mode/temperature.	Reduce cooking time. Select appropriate mode and temperature for the food.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Brand:** BALMUDA
- **Model Name:** K01M-KG
- **Color:** Black
- **Product Dimensions:** 14.1"W x 12.6"D x 8.2"H
- **Item Weight:** 10.2 pounds
- **Control Type:** Knob
- **Door Style:** Dropdown Door
- **Power Source:** AC
- **Temperature Range (Oven Mode):** 350 - 450 Degrees Fahrenheit
- **Material:** Stainless Steel, Tempered Glass
- **Included Components:** Baking Pan, Toasting Rack, 5cc Water Cup
- **UPC:** 051497133948



Detailed dimensions of the toaster for proper placement.

WARRANTY AND SUPPORT

BALMUDA products are designed for quality and durability. For information regarding your product's warranty, please refer to the warranty card included in your packaging or visit the official BALMUDA website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact BALMUDA customer service through their official channels. Always provide your product model number (K01M-KG) and purchase details when seeking support.

© 2024 BALMUDA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

