

## Pantone PTWC001Y

# Pantone PTWC001Y 10W Universal Wireless Charger User Manual

## 1. INTRODUCTION

---

Thank you for choosing the Pantone PTWC001Y 10W Universal Wireless Charger. This device provides convenient and efficient wireless charging for all Qi-compatible devices. Its compact and lightweight design makes it ideal for use at home or in the office. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

## 2. SAFETY INFORMATION

---

- Do not expose the charger to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the charger to strong impacts.
- Do not disassemble, modify, or attempt to repair the device yourself. This will void the warranty and may cause damage or injury.
- Keep the charger away from medical implants (e.g., pacemakers) to prevent potential interference.
- Use only the provided MicroUSB cable and a compatible power adapter (not included) with appropriate voltage and amperage.
- Ensure proper ventilation around the charger during use.
- Do not place metal objects, credit cards, or other foreign materials between the charging pad and your device, as this may interfere with charging or cause overheating.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Pantone PTWC001Y 10W Universal Wireless Charger
- MicroUSB Cable
- User Manual (this document)



Image: The retail packaging for the Pantone PTWC001Y wireless charger, showing the product inside.

#### 4. PRODUCT OVERVIEW

---

The Pantone PTWC001Y is a circular wireless charging pad designed for ease of use. It features a clean, minimalist design with a central charging area and an LED indicator light.



Image: Top view of the Pantone PTWC001Y wireless charger, showcasing its yellow base and white charging surface with the Pantone logo and an indicator light.



Image: The Pantone PTWC001Y wireless charger connected to its yellow MicroUSB cable, viewed from the top.

## 5. SETUP

---

Follow these steps to set up your wireless charger:

1. Connect the MicroUSB end of the provided cable into the MicroUSB port on the back of the wireless charger.
2. Connect the USB-A end of the cable to a compatible USB power adapter (not included). A 10W (5V/2A) or higher power adapter is recommended for optimal charging speed.
3. Plug the power adapter into a wall outlet. The charger is now ready for use.

## 6. OPERATING INSTRUCTIONS

---

To charge your device wirelessly:

1. Ensure the wireless charger is properly connected to a power source.
2. Place your Qi-compatible smartphone or other device directly onto the center of the charging pad.
3. The LED indicator light on the charger will illuminate to confirm that charging has begun. Your device's screen should also indicate that it is charging.
4. For optimal charging, ensure your device is centered on the pad and remove any thick cases or metal attachments that might interfere with wireless charging.
5. Once your device is fully charged, remove it from the charging pad.

## 7. MAINTENANCE

---

To maintain your wireless charger in good condition:

- Disconnect the charger from the power source before cleaning.
- Wipe the surface of the charger with a soft, dry, or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners.

- Store the charger in a cool, dry place when not in use.

## 8. TROUBLESHOOTING

---

If you encounter issues with your wireless charger, refer to the following common solutions:

- **Device not charging:**
  - Ensure the charger is properly connected to a working power outlet.
  - Verify that your device is Qi-compatible.
  - Reposition your device on the center of the charging pad.
  - Remove any thick phone cases or metal objects from your device.
  - Try using a different power adapter and cable to rule out issues with accessories.
- **Slow charging:**
  - Ensure you are using a power adapter that provides sufficient output (e.g., 5V/2A or higher).
  - Check for proper alignment of your device on the charging pad.
  - Close unnecessary background applications on your device.
- **LED indicator not lighting up:**
  - Check the power connection to the charger.
  - Ensure your device is placed correctly on the charging pad.

## 9. SPECIFICATIONS

---

<b>Brand</b>	Pantone
<b>Model Number</b>	PTWC001Y
<b>Power Output</b>	10 Watts
<b>Input Voltage</b>	100 Volts (typical, depends on adapter)
<b>Amperage</b>	2 A
<b>Connector Type</b>	Micro USB
<b>Wireless Charging Standard</b>	Qi
<b>Compatible Devices</b>	All Android Devices, Apple iPhones, MP3 Players, Smartwatches, Cell Phones (Qi-enabled)
<b>Special Features</b>	Lightweight Design, Charging Indicator
<b>Color</b>	Yellow

## 10. WARRANTY AND SUPPORT

---

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or contact your retailer for specific warranty terms and conditions. For technical support or further assistance, please contact the Pantone customer service department through their official website or the contact information provided with your product documentation.

