

Nikko 10072

Nikko RC Elite Trucks 10072 Instruction Manual

Model: 10072

INTRODUCTION

This manual provides essential information for the safe and optimal operation of your Nikko RC Elite Trucks 10072. Please read all instructions carefully before use to ensure proper setup, operation, and maintenance. Keep this manual for future reference.

SAFETY INFORMATION

- **Age Recommendation:** This product is suitable for users aged 8 years and older. Adult supervision is recommended.
- **Battery Safety:** Use only the specified batteries and charging methods. Do not mix old and new batteries, or different types of batteries. Dispose of batteries responsibly.
- **Operating Environment:** Operate the vehicle in open areas, away from people, pets, and obstacles. Avoid operating near roads, water bodies (unless specified as waterproof), or in adverse weather conditions.
- **Moving Parts:** Keep fingers, hair, and loose clothing away from moving wheels and other components to prevent injury.
- **Electrical Safety:** Do not attempt to modify or disassemble the vehicle or remote control. This can cause damage and void the warranty.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Nikko RC Elite Truck 10072
- Remote Controller
- 9.6V Rechargeable Battery Pack (for vehicle)
- USB Charging Cable

- 4 x AAA Batteries (for remote controller)
- Instruction Manual



This image displays all components included in the Nikko RC Elite Truck 10072 package: the remote control truck, the handheld remote controller, four AAA batteries for the remote, a USB charging cable, and the rechargeable 9.6V battery pack for the truck.

SETUP

1. Battery Installation (Remote Controller)

1. Locate the battery compartment on the back of the remote controller.
2. Open the battery compartment cover.
3. Insert 4 x AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Battery Charging (Vehicle)

1. Connect the 9.6V rechargeable battery pack to the USB charging cable.
2. Plug the USB charging cable into a standard USB power adapter (not included) or a computer USB port.
3. The charging indicator light on the USB cable will illuminate during charging. Refer to the charger's instructions for specific light behavior.
4. Allow sufficient time for a full charge (typically 60-90 minutes). Do not overcharge.
5. Once fully charged, disconnect the battery pack from the charger.

3. Battery Installation (Vehicle)

1. Locate the battery compartment on the underside of the vehicle.
2. Open the battery compartment cover.
3. Connect the charged 9.6V battery pack to the vehicle's power connector.
4. Place the battery pack inside the compartment and close the cover securely.

4. Pairing the Vehicle and Remote Controller

To establish a connection between the vehicle and the remote controller:

1. Ensure both the vehicle and the remote controller have fresh or fully charged batteries installed.
2. Turn on the remote controller by pressing and holding its ON button for several seconds until the indicator light illuminates.
3. Immediately turn on the vehicle by pressing and holding its ON button. The vehicle's indicator light should flash.
4. The remote and vehicle should automatically pair. The indicator lights on both devices will become solid when a successful connection is established.
5. If pairing fails, turn both devices off and repeat the process.

OPERATING

Basic Controls

- **Throttle Trigger:** Pull the trigger to move forward. Push the trigger to brake or reverse.
- **Steering Wheel:** Turn the wheel left to steer the vehicle left, and right to steer right.

Driving Tips

- Start with slow movements to get accustomed to the controls.
- Practice steering and throttle control in an open, flat area.
- The Nikko RC Elite Truck 10072 is designed for off-road use and can reach speeds up to 20 Km/h.



A young user is shown operating the Nikko RC Elite Truck 10072 with the remote control in a sandy, rocky outdoor setting, demonstrating typical usage.



The Nikko RC Elite Truck 10072 is captured mid-air, jumping over a small rock, illustrating its off-road capabilities and durable design.

MAINTENANCE

Cleaning

- After each use, gently wipe down the vehicle with a soft, dry cloth to remove dirt and debris.
- Avoid using water or harsh chemicals, as this may damage electronic components.
- If the vehicle has been exposed to wet conditions, ensure it is thoroughly dried before storage.



An RC truck is shown driving through splashing water, indicating the vehicle's design for handling wet conditions. This highlights the robust construction of Nikko RC vehicles.

Storage

- Always remove batteries from both the vehicle and the remote control before long-term storage.

- Store the vehicle and remote in a cool, dry place, away from direct sunlight and extreme temperatures.

Battery Care

- Do not leave batteries charging unattended.
- If the battery pack becomes hot during charging, discontinue charging immediately.
- Never puncture or damage the battery pack.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not respond to remote.	Batteries are low or incorrectly installed. Not paired correctly.	Check and replace/recharge batteries. Ensure correct polarity. Re-attempt the pairing process (see Setup section).
Vehicle moves slowly or inconsistently.	Low battery in vehicle or remote. Obstruction in wheels/gears.	Recharge vehicle battery. Replace remote batteries. Check for debris in moving parts.
Short operating range.	Interference from other RC devices or electronics. Low battery.	Move to an area with less interference. Ensure batteries are fully charged.

SPECIFICATIONS

- **Model Number:** 10072
- **Dimensions (L x W x H):** 29.5 x 15 x 13.5 cm
- **Weight:** 1.66 Kilograms
- **Max Speed:** Up to 20 Km/h (12.4 MPH)
- **Vehicle Battery:** 9.6V Rechargeable Lithium-ion Pack
- **Remote Controller Batteries:** 4 x AAA (included)
- **Material:** Rubber, Plastic
- **Age Recommendation:** 8+ years



This image provides a side profile of the Nikko RC Elite Truck 10072, highlighting its robust suspension and tire design suitable for off-road conditions.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Nikko Toys website. Keep your proof of purchase for warranty claims.

Website: www.nikkotoys.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question