

Reely RE-6443487

Reely RY-BT540 RC Bait Boat

INSTRUCTION MANUAL

Model: RE-6443487

Introduction

Thank you for purchasing the Reely RY-BT540 RC Bait Boat. This remote-controlled bait boat is designed for efficient and precise bait delivery in fishing environments. Featuring a robust ABS hull, dual bait hoppers, and a powerful motor system, it offers reliable performance for anglers. Please read this manual thoroughly before operating the boat to ensure safe and optimal use.

Package Contents

Please verify that all items listed below are included in your package:

- 1 x Reely RY-BT540 RC Bait Boat
- 1 x Remote Control Unit
- 1 x AC Charger
- 2 x Spare Propellers
- 1 x Antenna
- 1 x Storage Bag



Image: All components included in the Reely RY-BT540 RC Bait Boat package.

Setup

1. **Charge the Boat Battery:** Connect the boat's battery to the provided AC charger. Ensure the battery is fully charged before first use. The charging indicator on the charger will show the charging status.
2. **Install Remote Control Batteries:** Open the battery compartment on the back of the remote control unit. Insert the required batteries (not specified in product data, assume standard AA/AAA) ensuring correct polarity. Close the compartment securely.
3. **Attach Antenna:** Screw the antenna firmly onto the designated port on the top of the bait boat. Ensure it is upright for optimal signal reception.
4. **Initial Inspection:** Before placing the boat in water, visually inspect the hull for any damage and ensure the propeller guards are securely in place.



Image: Overview of the Reely RY-BT540 RC Bait Boat with antenna installed.



Image: The remote control unit.

Operating Instructions

1. **Power On:** Turn on the remote control first, then turn on the bait boat. The boat's LED indicators will illuminate.
2. **Bait Loading:** Open the two independent bait hoppers located on the top rear of the boat. Load your desired bait (up to 1.5 kg total capacity). Close the hoppers securely.
3. **Navigation:** Use the remote control's joystick or trigger for forward/backward movement and the steering wheel for left/right turns. The boat is powered by two waterproof motor systems for precise control.

4. **Bait Release:** Once the boat is at the desired location, use the dedicated buttons on the remote control to independently open and release bait from either the left or right hopper.
5. **LED Lights:** The boat features an LED front light for visibility and blue LEDs at the rear, which can assist with night operation and orientation.
6. **Remote Control Range:** The effective remote control distance is up to 500 meters. Always operate within this range to maintain control.
7. **Power Off:** After use, turn off the bait boat first, then turn off the remote control.



Image: The bait boat releasing bait into the water.



Image: Top view of the bait boat showing the two bait hoppers.

Maintenance

- **Cleaning:** After each use, especially in saltwater, rinse the boat thoroughly with fresh water to remove any debris or salt residue. Wipe dry with a soft cloth. Do not use harsh chemicals.
- **Battery Care:** Always fully charge the boat battery before storage if it will not be used for an extended period. Store batteries in a cool, dry place. Do not overcharge or deep discharge.
- **Propeller Inspection:** Regularly check the propellers for any entanglement (e.g., fishing line, weeds) or damage. Clear any obstructions to ensure smooth operation.

- **Storage:** Store the bait boat and remote control in a dry, cool environment, away from direct sunlight and extreme temperatures. Use the provided storage bag for protection.

Troubleshooting

Problem	Possible Cause	Solution
Boat does not respond to remote control.	Low battery in boat or remote; out of range; interference.	Charge batteries; move closer to boat; avoid areas with strong interference.
Boat moves slowly or erratically.	Low boat battery; propeller entangled; motor issue.	Recharge boat battery; check and clear propellers; contact support if motor issue persists.
Bait hoppers do not open.	Mechanism jammed; remote control issue.	Check for obstructions in hoppers; ensure remote control batteries are good.

Specifications

Feature	Detail
Model Number	RE-6443487
Product Dimensions	54 x 26 x 15.3 cm
Item Weight	1.49 Kilograms
Material	Acrylonitrile Butadiene Styrene (ABS)
Remote Control Distance	Up to 500 meters
Bait Hopper Capacity	1.5 kg (total)
Batteries Included	Yes (for boat)
Manufacturer's Recommended Age	14 years and up


Warranty and Support

Reely products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Reely website. For technical support, spare parts, or any inquiries not covered in this manual, please contact Reely customer service through their official channels or the retailer from whom you purchased the product.

Note: Product specifications and features are subject to change without prior notice.

Related Documents

 ④ Betriebsanleitung 4-Kanal Pistolengriff-Fernsteueranlage 2,4 GHz QY4 Rev. 04 2005/05 Seite 2 - 11 ④ Betriebsanleitung 2,4 GHz 4-Kanal pistol-grip remote controller "QY4" Rev. 04 2005/05 Page 2/ - 11 CE	REELY GY4 2.4 GHz 4-Kanal Fernsteueranlage Bedienungsanleitung Umfassende Bedienungsanleitung für die REELY GY4 2.4 GHz 4-Kanal Pistolengriff-Fernsteueranlage. Erfahren Sie mehr über Installation, Betrieb, Sicherheitshinweise und technische Details für Ihr RC-Modell.
	Navodila za uporabo RC modela Buggy Reely Carbon Fighter III Obsežen uporabniški priročnik za RC model Buggy Reely Carbon Fighter III, 2WD RtR, 2,4 GHz. Vsebuje navodila za zagon, delovanje, varnost, vzdrževanje in odpravljanje težav.
 ④ Betriebsanleitung C129 V2 RC Helikopter RtF Rev. 04 2005/05 Seite 2 - 20 ④ Operating Instructions Electric model aircraft C129 V2 Helicopter Rev. 04 2005/05 Page 2/ - 20 CE	Reely C129 V2 RC Helicopter RtF: Operating Instructions Comprehensive operating instructions for the Reely C129 V2 RC Helicopter RtF, covering setup, flight, maintenance, and safety.
 ④ Betriebsanleitung 1:10 4WD EP Monster Truck „THOR“ Rev. 04 2005/05 Seite 2 - 20 ④ Operating Instructions 1:10 4WD EP Monster Truck "THOR" Rev. 04 2005/05 Page 2/ - 20 CE	Reely 1:10 4WD EP Monster Truck THOR Bedienungsanleitung Umfassende Bedienungsanleitung für den Reely 1:10 4WD EP Monster Truck THOR. Enthält Anleitungen zur Inbetriebnahme, Sicherheit, Bedienung, Wartung und Fehlerbehebung.

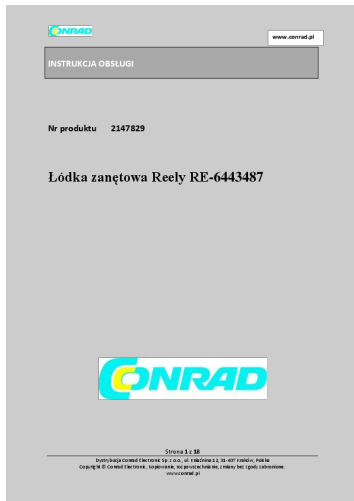

[pdf] User Manual Instructions

Gandi RC etetőhajó horgászcsali hajó RtR 540 mm Reely RY BT540 RE 6443487 Conrad hasznalati utmutato 2147829 rc etetohajo horgaszcsali hajo rtr reely ry bt540 re asset conrad media10 add 160267 c1 pl 002147829ML01 Navodila za uporabo ribiški čoln vabo podajalnik vabe mmŁódka zanętowa ElectronicReely MegaShop spletna trgovina Megashop siPilot zdalnego sterowania 2 4 GHz o zasięgu na duże odległości 500 metrów Dwa pojemniki przynęty rybne Każdy pojemnik może pomieścić Reely bait boat ConradBuy Futter Köderboot kaufennavodila ribiski coln mmupute rukovanje ribarski mamac hranilica brod mmhasznalati 6443487manual mmuser safety instructions mmbedienungs und sicherheitshinweise futter koederboot mmasset navodila upute 6443487asset manual user bedienungs ||| ||| INSTRUKCJA OBSŁUGI www.conrad.pl Nr produktu 2147829 Ldka zantowa Reely RE-6443487 Strona 1 z 18 Dystrybucja Conrad Electronic Sp. z o.o., ul. Knianina 12, 31-637 Krakw, Polska Cop INSTRUKCJA OBSŁUGI www.conrad.pl Nr produktu 2147829 Ldka zantowa Reely **RE-6443487** Strona 1 z 18 Dystrybucja Conrad Electronic Sp. z o.o., ul. Knianina 12, 31-637 Krakw, Polska Copyright Conrad Electronic, Kopiowanie, rozpowszechnianie, zmiany bez zgody zabronione. www.conrad.pl www.conrad.pl ... lang:pl **score:30** filesize: 813 K page_count: 18 document date: 2022-05-10



[pdf]

RC etetőhajó horgászcsali hajó RtR 540 mm Reely RY BT540 RE 6443487 Conrad hasznalati utmutato 2147829 rc etetohajo horgaszcsali hajo rtr reely ry bt540 re asset conrad media10 add 160267 c1 hu 002147829ML01 ||| Hasznlati tmutat Tvirnyts horgszcsali haj Rend.sz.: 2147829 2. oldal - 17 Tartalomjegyzk Oldal 1. Bevezets3 2. A szimblumok jelentse..... lang:id **score:14** filesize: 987.46 K page_count: 17 document date: 2022-06-29