

[manuals.plus](#) /

› [Celly](#) /

› [Celly PTBS001N Pantone Portable Bluetooth Speaker User Manual](#)

Celly PTBS001N

User Manual: Celly PTBS001N Pantone Portable Bluetooth Speaker

Model: PTBS001N | Brand: Celly



1. INTRODUCTION

Thank you for choosing the Celly PTBS001N Pantone Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity.

Package Contents

- Celly PTBS001N Pantone Portable Bluetooth Speaker
- 3.5mm Jack Cable
- USB Charging Cable (Micro USB)
- User Manual (this document)





Figure 1: Front view of the Celly PTBS001N Pantone Portable Bluetooth Speaker.

2. SETUP

2.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the Micro USB port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port.

- A full charge takes approximately 2 hours.
- The battery provides up to 8 hours of playback time.
- The charging indicator light (if present, usually red during charge, off/blue when full) will indicate charging status.

2.2 Powering On/Off

Press and hold the **Power button** (●) located on the control panel to power the speaker on or off. A sound prompt will indicate the power status.

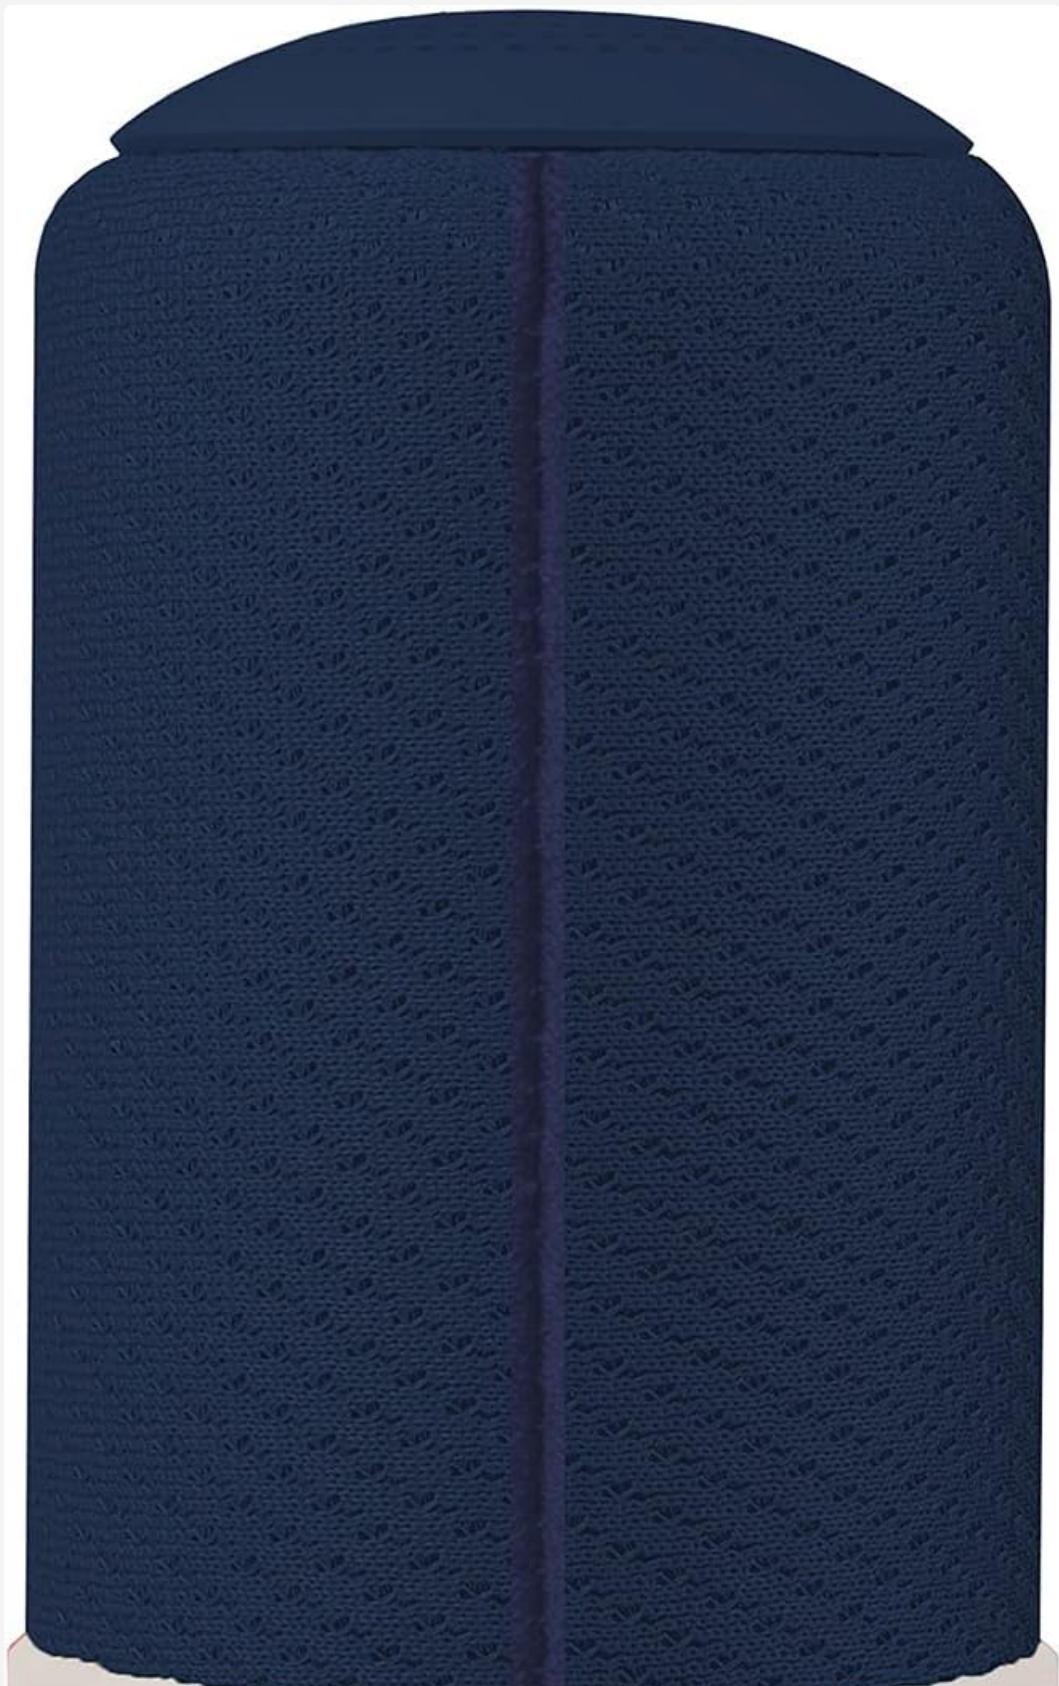




Figure 2: Control panel of the Celly PTBS001N speaker.

3. OPERATING INSTRUCTIONS

3.1 Bluetooth Pairing

1. Ensure the speaker is powered on and within 10 meters (33 feet) of your Bluetooth device.
2. The speaker will automatically enter Bluetooth pairing mode upon power-on if no device is connected. A blue LED indicator (if present) will flash rapidly.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "PTBS001N" or "Celly Pantone" from the list of found devices.
5. Once paired, the speaker will emit a confirmation sound, and the blue LED will remain solid.
6. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.



Figure 3: Speaker paired with a smartphone via Bluetooth.

3.2 Auxiliary (AUX) Input

To connect a device without Bluetooth capability, use the supplied 3.5mm jack cable.

1. Connect one end of the 3.5mm jack cable to the AUX port on the speaker.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the **Mode button (M)** on the speaker to switch to AUX mode.
4. Audio will now play through the speaker from your connected device.

3.3 MicroSD Card Playback

The speaker supports audio playback from a MicroSD card.

1. Insert a MicroSD card (with supported audio files) into the MicroSD card slot on the speaker.
2. The speaker will automatically switch to MicroSD mode and begin playing audio. If not, press the **Mode button**

(M) to cycle through modes until MicroSD mode is active.

3.4 Button Functions

Button/Port	Function
Power Button	Press and hold to Power On/Off.
+ Button	Short press: Increase Volume. Long press: Next Track.
- Button	Short press: Decrease Volume. Long press: Previous Track.
M (Mode) Button	Short press: Cycle through input modes (Bluetooth, AUX, MicroSD).
Phone Icon Button	Short press: Answer/End Call. Long press: Reject Call. Double press: Redial last number.
AUX Port	3.5mm audio input for wired connection.
Micro USB Port	For charging the speaker.
MicroSD Card Slot	For playing audio files directly from a MicroSD card.
MIC (Microphone)	For hands-free calling.

4. MAINTENANCE AND CARE

- Keep the speaker dry. Do not expose it to water or excessive moisture.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid extreme temperatures. Do not store the speaker in very hot or cold environments.
- Do not disassemble the speaker. This will void the warranty and may cause damage.
- When not in use for extended periods, charge the speaker at least once every three months to preserve battery life.

5. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect it to a power source and try again.
Cannot pair via Bluetooth.	<ul style="list-style-type: none">Ensure the speaker is in pairing mode (flashing blue LED).Make sure Bluetooth is enabled on your device.Move the speaker closer to your device (within 10m).Forget "PTBS001N" from your device's Bluetooth list and try pairing again.Restart both the speaker and your Bluetooth device.
No sound from speaker.	<ul style="list-style-type: none">Increase the volume on both the speaker and your connected device.Ensure the correct input mode (Bluetooth, AUX, MicroSD) is selected.Check if the audio cable is securely connected (for AUX mode).If using Bluetooth, ensure the device is properly paired and connected.

Problem	Possible Solution
Poor sound quality.	<ul style="list-style-type: none">Move the speaker closer to your Bluetooth device to reduce interference.Avoid obstacles between the speaker and the Bluetooth device.Try a different audio source or file.

6. SPECIFICATIONS

Feature	Detail
Model Name	PTBS001N
Brand	Celly
Connectivity Technology	Bluetooth, Auxiliary (3.5mm Jack), MicroSD
Speaker Type	Outdoor (Portable)
Maximum Speaker Output Power	5 Watts
Battery Life	8 hours
Charging Time	Approx. 2 hours
Wireless Range	Up to 10 meters (33 feet)
Dimensions (L x W x H)	7 x 7 x 15 cm (2.76 x 2.76 x 5.91 inches)
Weight	345 grams (0.76 lbs)
Color	Navy Blue
Surround Sound Channel Configuration	2.0

7. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Celly website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Celly customer service through their official website or the retailer from whom you purchased the product.

Official Celly Website: www.celly.com

	<p>Celly Pantone PT-WH005 Bluetooth Headphones User Manual</p> <p>User manual for the Celly Pantone PT-WH005 Bluetooth headphones, covering setup, operation, safety, technical specifications, and compliance information.</p>
	<p>Celly BUZ1 Bluetooth Earphones User Manual</p> <p>User manual for Celly BUZ1 Bluetooth earphones, providing instructions on setup, operation, safety precautions, maintenance, and technical specifications.</p>
	<p>Celly BHTWINSACT Bluetooth Stereo Earphones User Manual</p> <p>Comprehensive user manual for Celly BHTWINSACT Bluetooth Stereo Earphones, covering safety, usage, technical specifications, and compliance information.</p>
	<p>Celly BHTWINSACT Bluetooth Stereo Earphones User Manual</p> <p>User manual for Celly BHTWINSACT Bluetooth stereo earphones, covering setup, usage, safety, technical specifications, and disposal. Learn how to pair, use, and maintain your Celly wireless earbuds.</p>
	<p>CELLY Keith Haring TWS Earphones User Manual</p> <p>This document provides the user manual for the CELLY Keith Haring TWS earphones, including safety instructions, pairing, operation, and specifications. It is available in multiple languages.</p>
	<p>Celly PCBHSTEREO Bluetooth Stereo Earphones User Manual</p> <p>Comprehensive user manual for Celly PCBHSTEREO Bluetooth stereo earphones, covering safety guidelines, usage instructions, pairing, technical specifications, and compliance information.</p>