

[Manuals.plus](#) /

> [NKF](#) /

> RMT-JR01 Remote Control for JVC TV Remote Replacement EM32FL EM32T EM32TS EM39FT EM39T EM55FT EM28T BC50R JLC32BC3002 JLC37BC3000 JLC42BC3002 JLC47BC3000

NKF RMT-JR01

Instruction Manual

NKF RMT-JR01 REMOTE CONTROL FOR JVC TV

Model: RMT-JR01

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your NKF RMT-JR01 Replacement Remote Control for JVC TVs. This remote is designed to function as a direct replacement for your original JVC TV remote, requiring no programming or pairing.



Image: Front and back view of the NKF RMT-JR01 remote control, showcasing its design and battery compartment.

Setup

The NKF RMT-JR01 remote control is designed for immediate use with compatible JVC TV models without the need for complex programming or pairing procedures. Simply install the batteries, and the remote will be ready to operate your television.

Battery Installation

1. Locate the battery compartment on the back of the remote control. This is typically found at the bottom section.
2. Press down on the latch and slide the battery cover downwards to open the compartment.
3. Insert two (2) new 1.5V AA alkaline batteries into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries align correctly with the polarity indicators inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.



Image: Detailed diagram illustrating the correct insertion of two AA batteries into the remote control's battery compartment, showing polarity markings.

Note: Batteries are not included with the remote control. Use only new, high-quality alkaline batteries for optimal performance and longevity.

Operating Instructions

Once batteries are installed, the RMT-JR01 remote is ready to control your compatible JVC TV. Point the remote directly at the TV's infrared receiver for best performance.

Button Functions



Image: An overhead view of the RMT-JR01 remote control, with key buttons labeled to indicate their primary functions such as TV Power, Rewind, Fast Forward, Input, Menu, Info, OK, Volume, Channel, Return, and Audio.

- **Power (Red Button)**: Turns the TV on or off.
- **SLEEP**: Activates or adjusts the TV's sleep timer function.
- **Rewind (<<)** / **Fast Forward (>>)**: Controls media playback (e.g., skipping through content).
- **Play (>)** / **Pause (||)**: Controls media playback (e.g., starting or pausing content).
- **MEDIA**: Accesses the TV's media player or smart media functions.
- **INPUT**: Cycles through available input sources (HDMI, AV, Component, etc.).
- **MENU**: Opens the TV's main menu for settings and options.
- **INFO**: Displays information about the current program or input.
- **Directional Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections or enters sub-menus.
- **WIDE**: Adjusts the screen aspect ratio.
- **AUDIO**: Changes audio settings or tracks.
- **RETURN**: Goes back to the previous menu or screen.
- **VOL +/-**: Increases or decreases the volume level.
- **MUTE**: Mutes or unmutes the TV's audio.
- **CH +/-**: Changes the TV channel up or down.
- **Number Buttons (0-9)**: Directly enters channel numbers or numerical inputs.
- **ENT**: Confirms numerical entries, such as channel numbers.
- **HDMI, PC, TV, VIDEO, COMP, MUSIC**: Direct access buttons for specific input sources or functions.



Image: A user's hand holding the RMT-JR01 remote control, demonstrating its use with a JVC smart TV. The TV screen shows a user interface with various content options, highlighting the remote's intuitive control over smart TV functions.

Compatibility

The NKF RMT-JR01 remote control is compatible with a wide range of JVC TV models. This remote is specifically designed to replace the original RMT-JR01 remote and works out-of-the-box with the following JVC TV models:



Image: The RMT-JR01 remote control is shown next to a list of JVC TV models it is compatible with, including JLC32BC3000, JLC32BC3002, JLC37BC3000, JLC37BC3002, JLC42BC3000, JLC42BC3002, JLC47BC3000, JLC47BC3002, JLE32BC3001, JLE37BC3001, BC50R, EM28T, EM32FL, EM32T, EM32TS, EM37T, EM39FT, EM39T, EM55FT.

- JLC32BC3000
- JLC32BC3002
- JLC37BC3000
- JLC37BC3002
- JLC42BC3000
- JLC42BC3002

- JLC47BC3000
- JLC47BC3002
- JLE32BC3001
- JLE37BC3001
- JLE42BC3001
- JLE42BC3500
- JLE47BC3001
- JLE47BC3500
- BC50R
- EM28T
- EM32FL
- EM32T
- EM32TS
- EM37T
- EM39FT
- EM39T
- EM55FT

If your JVC TV model is not listed, please verify if your original remote control was an RMT-JR01 model. This replacement remote is designed to function identically to the original.

Maintenance

Proper care and maintenance will ensure the longevity and reliable performance of your NKF RMT-JR01 remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote. Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops and Impacts:** Protect the remote from physical shock. Dropping the remote can cause internal damage or break external components.

Troubleshooting

If you encounter issues with your NKF RMT-JR01 remote control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding to TV.	Dead or incorrectly installed batteries.	Ensure batteries are inserted with correct polarity (+/-). Replace both batteries with new 1.5V AA alkaline batteries.

Problem	Possible Cause	Solution
Remote's signal is weak or intermittent.	Obstruction between remote and TV; remote too far from TV; low battery power.	Ensure a clear line of sight to the TV's infrared receiver. Move closer to the TV. Replace batteries.
Certain buttons do not work.	Dirt or debris under the button; internal malfunction.	Clean the remote surface. If the issue persists after battery replacement, the remote may require replacement.
Remote does not control my TV.	Incompatible TV model.	Verify your JVC TV model is listed in the "Compatibility" section. This remote is a direct replacement for the RMT-JR01 model.

If these steps do not resolve the issue, please contact customer support for further assistance.

Specifications

Feature	Detail
Model Number	RMT-JR01
Brand	NKF
Compatible Devices	JVC Televisions (specific models listed in Compatibility section)
Power Source	2 x 1.5V AA Alkaline Batteries (not included)
Dimensions (L x W x H)	8.66 x 1.96 x 0.98 inches (approx. 22 x 5 x 2.5 cm)
Item Weight	2.89 ounces (approx. 82 grams)
Material	ABS (Acrylonitrile Butadiene Styrene)
Special Feature	No Programming Required



Image: A visual representation of the RMT-JR01 remote control with its length (8.66 inches), width (1.96 inches), and thickness (0.98 inches) clearly marked.

Warranty and Support

Specific warranty details for this replacement remote control are not provided in the product information. For any warranty claims or technical support, please contact the seller or manufacturer directly through the platform where the product was purchased.

When contacting support, please provide your order number, the product model (RMT-JR01), and a detailed description of the issue you are experiencing.

For general inquiries or to explore other products from NKF, you may visit the official NKF store on Amazon: [NKF Amazon Store](#).

© 2025 NKF. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.