

[Manuals.plus](#) /

› [Simfer](#) /

› Simfer H4.305.HGSSP Gas Hob User Manual

Simfer H4.305.HGSSP

Simfer H4.305.HGSSP Gas Hob User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Simfer H4.305.HGSSP gas hob. Please read these instructions carefully before installation, operation, and maintenance. Keep this manual for future reference.

SETUP AND INSTALLATION


Proper installation is crucial for the safe and optimal performance of your gas hob. Installation must be carried out by a qualified technician in accordance with local regulations and standards.

Safety Precautions

- Ensure the gas supply is turned off before commencing installation.
- Verify that the electrical supply matches the specifications of the appliance.
- Ensure adequate ventilation in the installation area.
- Do not modify the appliance.

Cutout Dimensions

Refer to the diagram below for the precise cutout dimensions required for your countertop. Ensure sufficient clearance around the hob for proper ventilation and safety.

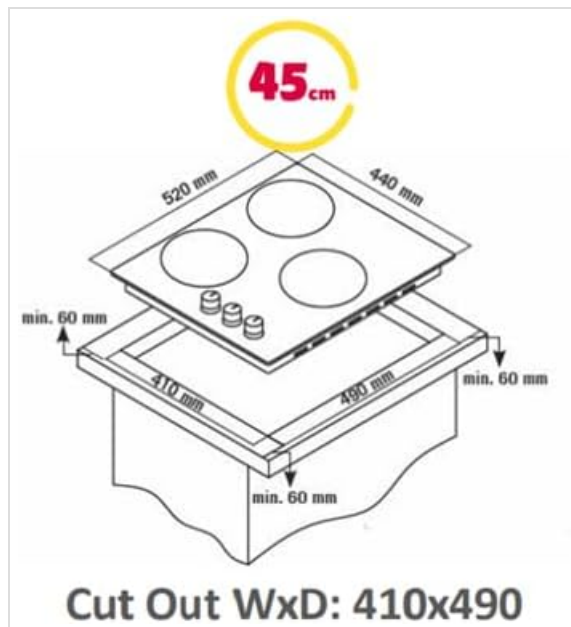

This diagram illustrates the physical dimensions of the hob and the required cutout dimensions for installation. The hob measures 520 mm in width and 440 mm in depth. The recommended cutout dimensions for the countertop are 410 mm in width and 490 mm in depth. A minimum clearance of 60 mm is required around the edges for safe operation and ventilation.

Connecting the Gas Supply

Connect the hob to the gas supply using a flexible or rigid pipe suitable for gas appliances, ensuring all connections are sealed and leak-tested. Use only approved fittings and materials.

Electrical Connection

Connect the hob to a grounded electrical outlet. Ensure the voltage and frequency match the appliance's requirements. The electrical connection should be easily accessible after installation.

OPERATING INSTRUCTIONS

Your Simfer H4.305.HGSSP gas hob features three burners, each controlled by a dedicated knob.

Igniting a Burner

1. Ensure the gas supply to the hob is open.
2. Push and turn the control knob for the desired burner counter-clockwise to the maximum flame position (large flame symbol).
3. Hold the knob in for a few seconds to allow the flame failure device (if present) to activate.
4. Once the burner ignites, release the knob. If the flame goes out, repeat the process.

Adjusting the Flame

After ignition, you can adjust the flame intensity by turning the control knob between the maximum flame position and the minimum flame position (small flame symbol). Do not turn the knob past the minimum setting, as this will extinguish the flame.

Turning Off a Burner

To turn off a burner, turn the control knob clockwise until it clicks into the 'off' position (dot symbol).

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your hob and ensure its safe operation.

Cleaning the Hob Surface

- Always ensure the hob is cool before cleaning.
- Use a soft cloth and mild detergent. Avoid abrasive cleaners, scouring pads, or harsh chemicals that can damage the surface.
- Wipe up spills immediately to prevent staining.

Cleaning Burner Components

- Remove the pan supports, burner caps, and burner crowns when cool.
- Wash them in warm soapy water, rinse thoroughly, and dry completely before reassembling.
- Ensure the ignition electrode and thermocouple are clean and free from food debris.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Burner does not ignite	No gas supply; Ignition electrode dirty; Burner cap/crown incorrectly placed.	Check gas valve; Clean electrode; Re-position burner components correctly.
Flame is uneven or yellow	Burner ports clogged; Incorrect gas type.	Clean burner ports; Contact a qualified technician to verify gas type.
Gas smell detected	Gas leak.	Immediately turn off gas supply, open windows, do not operate electrical switches, and contact a qualified technician.

If the problem persists after attempting these solutions, please contact a qualified service technician.

SPECIFICATIONS

Feature	Detail
Model	H4.305.HGSSP
Type	Gas Hob
Number of Burners	3
Overall Dimensions (WxD)	520 mm x 440 mm
Cutout Dimensions (WxD)	410 mm x 490 mm
Minimum Clearance	60 mm (around edges)
ASIN	B084L8B52H

WARRANTY INFORMATION

Your Simfer H4.305.HGSSP gas hob comes with a manufacturer's warranty. Please refer to the warranty card provided with your appliance for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For technical assistance, spare parts, or service requests, please contact your retailer or the authorized Simfer service center in your region. Have your model number (H4.305.HGSSP) and purchase date ready when contacting support.

You can often find contact details on the manufacturer's official website or in the documentation accompanying your product.

Simfer H4.305.HGSSP Gas Hob User Manual © 2024. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084L8B52H>

More documents and user manuals: <https://manuals.plus/>