

[Manuals.plus](#) /

› [Cricut](#) /

› Cricut Joy Machine User Manual

Cricut 2007813

Cricut Joy Machine User Manual

Model: 2007813

1. INTRODUCTION

The Cricut Joy is an ultra-compact smart cutting and writing machine designed for personalized projects. It enables users to create custom cards, simple decals, and labels efficiently. This machine cuts over 50 materials, including iron-on, cardstock, vinyl, and Smart Materials, which allow for matless cutting. The Cricut Joy operates with the free Design Space app, requiring a compatible computer or mobile device with Bluetooth wireless technology and a high-speed internet connection.

2. SETUP

2.1 Unboxing and Initial Connection

Carefully remove the Cricut Joy machine and all accessories from its packaging. Ensure all components are present, including the machine, power adapter, blade housing, and any included materials.



Image: The Cricut Joy machine displayed with its standard accessories, including a cutting mat, a pen, the power adapter, and the blade housing. This image illustrates the contents typically found upon unboxing.

2.2 Powering On

1. Connect the power adapter to the Cricut Joy machine and then plug it into a wall outlet.
2. The machine will power on automatically.

2.3 Software Installation and Bluetooth Pairing

The Cricut Joy requires the Design Space application for operation. This application is available for iOS, Android, Windows, and Mac devices.

1. Download and install the Cricut Design Space app from your device's app store or the official Cricut website.
2. Open the Design Space app and follow the on-screen prompts to create a Cricut ID or sign in to an existing account.
3. Ensure Bluetooth is enabled on your computer or mobile device.
4. Within the Design Space app, navigate to the machine setup process. The app will guide you through pairing your Cricut Joy via Bluetooth.

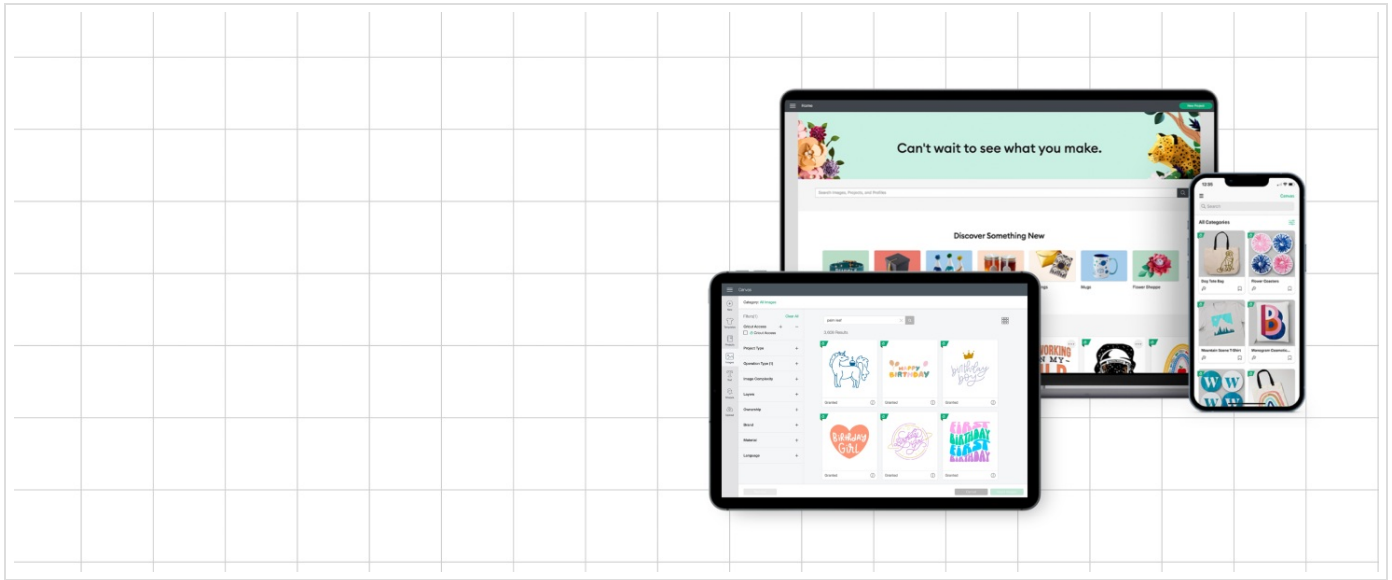


Image: The Cricut Design Space application interface displayed across a desktop computer, a tablet, and a smartphone, illustrating its multi-platform compatibility for designing projects.

3. OPERATING THE CRICUT JOY

3.1 Designing Your Project

Use the Design Space app to create or select your desired design. The app offers a library of pre-made designs and tools for custom creation.



1. Use our app to design your idea or choose from our library

Compatible with  Desktop  Mobile/Tablet

Image: A laptop screen displaying the Cricut Design Space application, showing a large text design for the name 'Jamie' on a grid background, indicating the design phase of a project.

3.2 Loading Materials

The Cricut Joy supports various materials, including Smart Materials for matless cutting and other materials that require a cutting mat.

- **For Smart Materials:** Simply load the material directly into the machine. The machine will detect and align it automatically.
- **For other materials:** Place the material onto a Cricut Joy cutting mat, ensuring it adheres properly, then load the mat into the machine.



2. Select your material, then the machine precision-cuts your project

Image: A pair of hands carefully feeding a roll of blue Smart Material into the front slot of a Cricut Joy machine, preparing for a cutting operation.

3.3 Cutting and Writing

Once your design is ready and material is loaded, the Design Space app will guide you through the cutting or writing process. The machine will precisely execute the design.



Image: The Cricut Joy machine actively cutting a silver material, with a customized tumbler and a smartphone displaying the Design Space app in the background, showcasing the machine in action.



Image: The Cricut Joy machine using a pen to write labels on a roll of white material, with three labeled spice jars in the background, demonstrating its writing capability for organization.

3.4 Applying Your Designs

After cutting or writing, carefully remove the material from the machine or mat. Use appropriate tools (e.g., weeding tools, transfer tape) to apply your design to your chosen surface.



3. Assemble the pieces or apply your design to almost anything

Image: A pair of hands carefully peeling back transfer tape to apply a blue vinyl decal of the name 'Jamie' onto a light blue water bottle, illustrating the final step of project application.

3.5 Project Examples

- **Customized Drinkware:** Personalize water bottles, tumblers, and mugs with names or designs.



Image: Three water bottles of different colors, each customized with unique vinyl decals, demonstrating the personalization capabilities of the Cricut Joy.

- **Personalized Cards:** Create unique greeting cards for any occasion.



Image: A customized greeting card featuring a cut-out llama design, held upright by a decorative cactus-shaped card holder, showcasing the machine's ability to create intricate card designs.

- **Labels and Organization:** Design labels for pantry items, storage bins, or office supplies.



Image: Two white ceramic canisters with wooden lids, labeled 'COFFEE' and 'TEA' using black vinyl decals, illustrating the use of Cricut Joy for home organization and labeling.

- **Gift Tags and Packaging:** Enhance gifts with custom tags and decorative elements.



Image: Three small brown gift boxes, each adorned with a white label featuring a 'thank you' message and personalized names, demonstrating custom gift packaging.

4. MAINTENANCE

4.1 Cleaning the Machine

To ensure optimal performance, keep your Cricut Joy clean.

- Use a soft, dry cloth to wipe down the exterior of the machine.
- Gently remove any dust or small material scraps from the cutting area using a soft brush or compressed air.
- Avoid using harsh chemicals or abrasive cleaners.

4.2 Blade Care

The blade is a consumable item and will need replacement over time.

- Inspect the blade regularly for wear or damage. A dull blade can lead to poor cuts.
- To clean the blade, carefully remove it from its housing and use a small brush to clear any debris.

- Always handle the blade with caution to avoid injury.

4.3 Cutting Mat Care

If you use cutting mats, proper care extends their lifespan.

- Keep the clear protective sheet on the mat when not in use to prevent dust and debris accumulation.
- If the mat loses its stickiness, gently clean it with warm water and mild soap, then allow it to air dry.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Cricut Joy machine.

5.1 Connectivity Issues

- **Machine not connecting via Bluetooth:** Ensure Bluetooth is enabled on your device and the Cricut Joy is powered on and within range. Try restarting both the machine and your device.
- **Design Space not recognizing machine:** Verify that the Design Space app is up to date. Close and reopen the app.

5.2 Cutting Problems

- **Material not cutting completely:** Check if the correct material setting is selected in Design Space. The blade might be dull or damaged and require replacement. Ensure the material is loaded correctly and flat.
- **Material slipping during cut:** For matless cutting, ensure Smart Materials are properly aligned. For mat-based cutting, ensure the material is securely adhered to the mat and the mat is clean.

5.3 Software and Account

- **Learning Curve:** If you are new to Cricut, there may be a learning curve. Utilize online tutorials, the Cricut community, and official support resources for guidance.
- **Design Space Account:** An active Cricut ID is required to use the Design Space app. Some features or content may require a Cricut Access subscription.

For more detailed troubleshooting, please visit the official Cricut support website.

6. SPECIFICATIONS

Feature	Detail
Brand	Cricut
Model Number	2007813
Material Compatibility	Vinyl, Iron-on, Cardstock, Paper, Smart Materials
Color	Blue
Product Dimensions	5.43"D x 8.43"W x 4.25"H
Operation Mode	Automatic
Item Weight	6.2 Pounds
Print Media	Paper (plain)

UPC	093573997594, 093573693335
Manufacturer	Provo Craft & Novelty
Connectivity	Bluetooth wireless technology

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For specific warranty details regarding your Cricut Joy machine, please refer to the documentation included with your product or visit the official Cricut website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

7.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Cricut Customer Support. Support resources, including FAQs, tutorials, and contact information, are available on the official Cricut website: help.cricut.com

© 2023 Cricut. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

