

Manuals.plus /

› Polly Pocket /

› Polly Pocket Flying Fabulous Jet Airplane Toy Instruction Manual (Model GKL62)

Polly Pocket GKL62

Polly Pocket Flying Fabulous Jet Airplane Toy Instruction Manual

Model: GKL62

Brand: Polly Pocket

1. INTRODUCTION

Welcome to the world of Polly Pocket adventures! This manual provides essential information for the setup, operation, and care of your Polly Pocket Flying Fabulous Jet Airplane Toy. Designed for imaginative play, this playset offers multiple interactive areas for endless fun.

2. SAFETY INFORMATION

- **Recommended Age:** This toy is suitable for children aged 4 years and up.
- **Small Parts:** The playset contains small parts which may pose a choking hazard for children under 3 years. Adult supervision is recommended.
- **Cleaning:** Use a soft, damp cloth to clean the toy. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.

3. WHAT'S IN THE BOX

Your Polly Pocket Flying Fabulous Jet playset includes the following components:

- Polly Pocket Flying Fabulous Jet Airplane
- 1 x 3-inch (7.62-cm) Polly doll (dressed in captain's uniform)
- 1 x Extra dress for Polly doll
- 1 x Hanger
- 1 x Carry-on bag
- 1 x Luggage piece
- Additional accessories: headphones, water bottle, 2 popcorns, 2 drinks



Figure 3.1: The Polly Pocket Flying Fabulous Jet Playset as packaged.

This image shows the complete Polly Pocket Flying Fabulous Jet Playset within its retail box, highlighting the main airplane toy and included accessories.

4. SETUP AND ASSEMBLY

Follow these steps to prepare your Flying Fabulous Jet for play:

1. **Unpack Components:** Carefully remove all items from the packaging. Ensure all listed accessories are present.
2. **Open the Jet:** The jet's top section opens and extends outwards to reveal the interior play areas. Gently lift and extend the top to expose the lounge, concession stand, and bathroom.

The top opens on the fabulous flying jet!



Figure 4.1: The jet's top opens to expand the play area.

This image illustrates how the top of the jet opens and extends, providing access to the various interior sections for play.

5. OPERATING INSTRUCTIONS

Explore the various play areas within the Flying Fabulous Jet:

- **Pilot's Cockpit:** Place the Polly doll in the cockpit at the front of the jet to simulate flying the airplane. The doll comes with a captain's uniform and hat.



Pilot Polly® doll is ready for takeoff!

Figure 5.1: Pilot Polly doll ready for takeoff.

This image shows the Polly doll seated in the jet's cockpit, wearing her pilot's uniform, ready to fly.

- **Lounge Area:** Passengers can relax in the lounge area, which features a sofa chair and a TV screen.
- **Concession Stand:** Visit the concession stand for snacks. Use the included popcorn and drinks accessories. A large movie screen is also available for entertainment.
- **Luxe Bathroom:** The jet includes a detailed bathroom with a vanity and toilet for dolls to freshen up.



Freshen up at the vanity in the luxe restroom!

Figure 5.2: Freshening up in the luxe restroom.

This image displays the Polly doll in the jet's bathroom, which features a vanity with a mirror and a toilet.

- **Storage Area:** Utilize the designated storage area to stow luggage and other accessories.
- **Dressing the Doll:** Change Polly's outfit using the extra dress and hanger provided for different travel looks.



Figure 5.3: Child interacting with the open playset.

This image captures a child engaging with the fully opened Polly Pocket jet, demonstrating the interactive nature of its multiple play areas.

Official Product Video

Video 5.1: Polly Pocket: Flying Fabulous Jet - Demo. This video provides a demonstration of the Polly Pocket Flying Fabulous Jet playset, showcasing its features and how to interact with the different play areas and accessories.

6. MAINTENANCE

- **Cleaning:** Wipe the toy surfaces with a soft, slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** Ensure all parts are completely dry before closing the jet or storing.
- **Accessory Care:** Keep small accessories in a designated container to prevent loss.

7. TROUBLESHOOTING

- **Difficulty Opening/Closing:** Ensure no accessories are obstructing the jet's moving parts. Apply gentle, even pressure.
- **Missing Parts:** Refer to the "What's in the Box" section. If parts are missing upon purchase, contact customer support.
- **Damaged Parts:** Discontinue use if any part of the toy is broken or damaged.

8. SPECIFICATIONS

- **Product Dimensions:** 10.17 x 15.43 x 8.11 inches
- **Item Weight:** 10.6 ounces

- **Item Model Number:** GKL62
- **Manufacturer Recommended Age:** 4 years and up
- **Release Date:** June 1, 2020
- **Manufacturer:** Mattel

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Polly Pocket website. Keep your proof of purchase for any warranty claims.