

[Manuals.plus](#) /

› [iSTYLE](#) /

› iSTYLE 10.1" Laptop X10 User Manual

iSTYLE X10

iSTYLE 10.1" Laptop X10 User Manual

Model: X10

INTRODUCTION

The iSTYLE Mini Laptop X10 is a versatile and portable computing device designed for everyday use, ideal for students and users on the go. Running on Windows 10 Home, it offers a user-friendly experience with a wide range of software compatibility. Its compact design and essential features make it a reliable companion for learning, entertainment, and productivity.

WHAT'S IN THE BOX

- iSTYLE 10.1" Laptop X10
- Laptop bag
- USB wireless mouse
- Mouse pad
- Earphone
- Power Adapter



Image: The iSTYLE 10.1" Laptop X10 shown with its complete kit, including a laptop bag, USB wireless mouse, mouse pad, and earphones.

PRODUCT OVERVIEW AND FEATURES

The iSTYLE X10 is designed for efficiency and portability, integrating key components for a smooth user experience.

Key Components and Performance



GOOD PERFORMANCE
Easy, Fluid Multitasking



2GB RAM



32GB ROM



Camera



WiFi



Up to 1.92 GHz

A visual representation of the laptop's multitasking capabilities. The screen shows a Facebook profile for Mark Zuckerberg, a Microsoft Office spreadsheet, and a video call with four participants. The laptop is light blue and shown from a slightly elevated angle.

Image: Visual representation of the laptop's core features including 2GB RAM, 32GB ROM, built-in camera, WiFi capability, and CPU performance up to 1.92 GHz.



Image: Details on the Intel Atom X5-Z8350 Quad-core processor, Bluetooth 4.0 connectivity, and the 5000mAh battery providing up to 6 hours of usage.

The iSTYLE Mini Laptop X10 is powered by an Intel Atom X5-Z8350 Quad-core 1.44GHz processor, ensuring smooth performance for daily tasks. It comes with 2GB RAM and 32GB SSD storage, expandable up to 1TB with a Micro SD card (not included). It features built-in WiFi and Bluetooth for seamless connectivity.

Display and Visuals

10.1-INCH LCD SCREEN

Enjoy a Wider, Clearer View

1280*800 IPS screen



Image: The 10.1-inch 800x1280 bright IPS HD screen LCD provides clear and crisp visuals, enhancing the viewing experience for videos, games, and web browsing.

Experience vibrant visuals on the 10.1-inch 800 * 1280 bright IPS HD screen LCD. The display is perfect for watching videos, playing games, and browsing the web with clarity.

Connectivity Ports



Image: An illustration detailing the laptop's connectivity options, including a TF card slot, headphone jack, USB 2.0, Mini HDMI, USB 3.0, and DC power input.

The laptop offers a full range of connectivity options, including a micro HDMI port for external displays, USB 3.0 and USB 2.0 ports for peripherals, a DC3.5 port for power, and a TF card slot for expandable storage.

Design and Portability

LIGHTWEIGHT DESIGN

Take It Everywhere, always Ready to Go

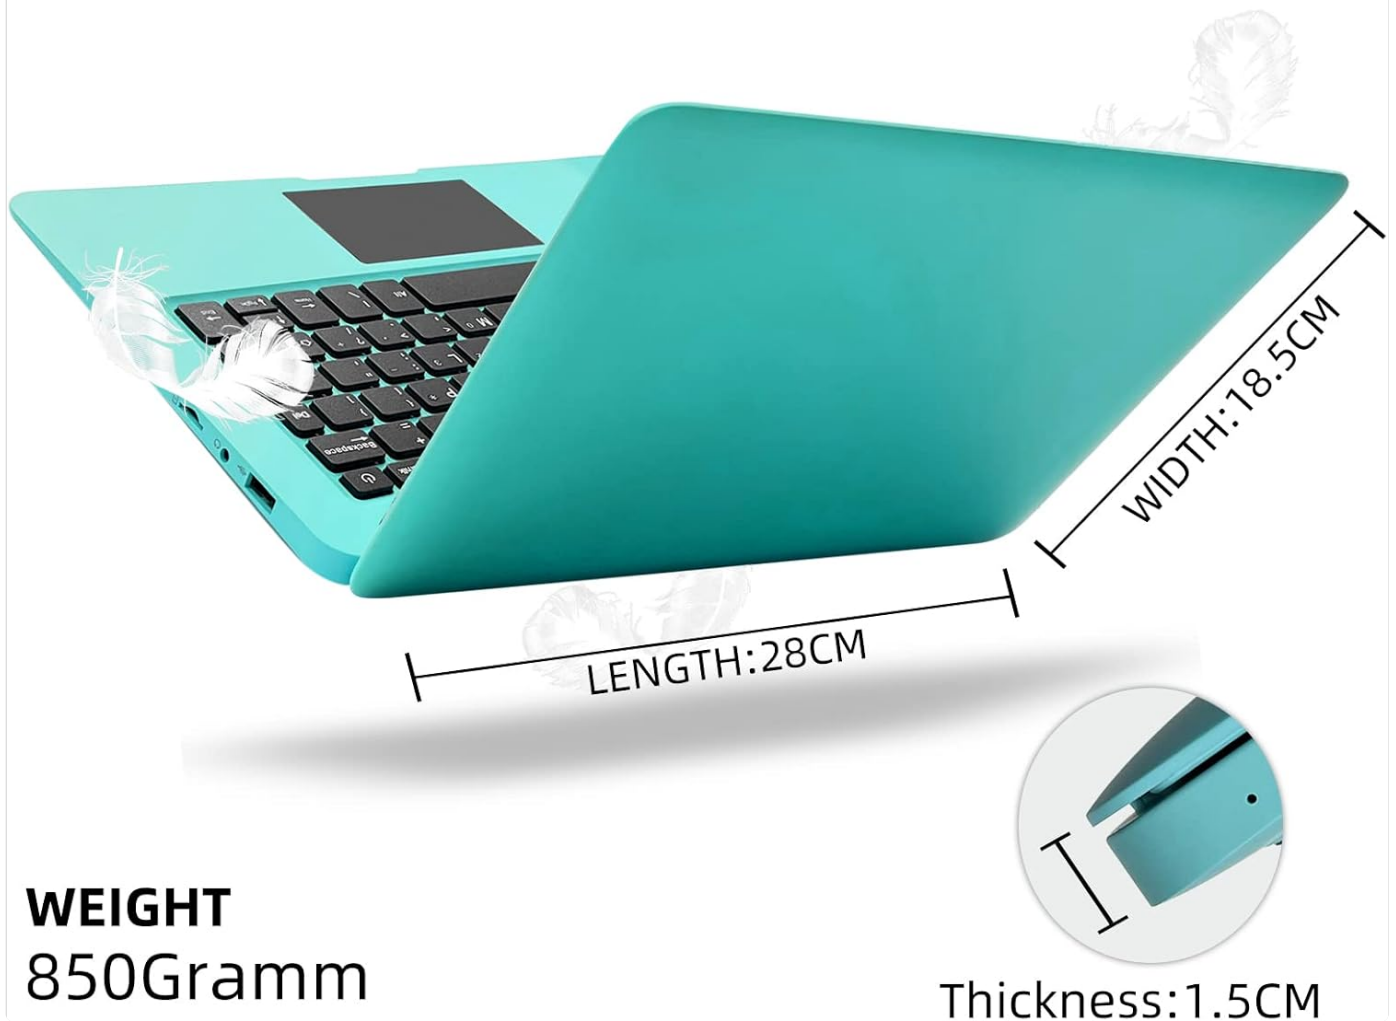


Image: The lightweight design of the iSTYLE X10 is highlighted, showing its compact dimensions (11.02 x 7.28 x 0.59 inches) and a weight of only 1.87 pounds (850 grams), making it highly portable.

Weighing only 1.87 pounds (850 grams) and with a thickness of just 0.59 inches (1.5 cm), this laptop is ultra-portable and easy to carry, making it ideal for students and mobile users.

Ideal Learning Partner

IDEAL LEARNING PARTNER

Compatible with a wide range of educational software for personalised learning, mind enlightenment and intellectual development



Image: The iSTYLE X10 laptop is shown in a learning environment, demonstrating its suitability as an educational tool for students.

The iSTYLE X10 is compatible with a wide range of educational software, making it an ideal partner for personalized learning, mind enlightenment, and intellectual development.

Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing the iSTYLE DreamBook 10.1" laptop, highlighting its various features, colors, and portability. This video provides a dynamic overview of the product's design and capabilities.

SETUP GUIDE

1. Initial Power On

1. Unpack the laptop and all accessories from the box.
2. Connect the power adapter to the DC In port on the laptop and plug it into a power outlet.

3. Press the power button located on the keyboard to turn on the laptop.
4. Follow the on-screen instructions to complete the initial Windows 10 setup, including language, region, and network settings.

2. Connecting Peripherals

- **USB Wireless Mouse:** Insert the USB receiver for the wireless mouse into an available USB port (USB 2.0 or USB 3.0). The mouse should connect automatically.
- **Earphones:** Plug the earphones into the headphone jack.
- **External Storage:** For Micro SD card expansion, insert the TF card into the TF card slot until it clicks into place.
- **External Display:** Use a micro HDMI cable (not included) to connect to an external monitor or TV via the micro HDMI port.

OPERATING INSTRUCTIONS

Basic Navigation

- **Touchpad:** Use the integrated touchpad for cursor control. Tap to click, two-finger tap for right-click, and two-finger scroll for scrolling.
- **Keyboard:** The laptop features a comfortable keyboard for typing.
- **Windows Start Menu:** Click the Windows icon in the bottom-left corner to access applications, settings, and power options.

Connecting to Wi-Fi and Bluetooth

1. **Wi-Fi:** Click the network icon in the system tray (bottom-right corner), select your desired Wi-Fi network, enter the password, and click Connect.
2. **Bluetooth:** Go to *Settings > Devices > Bluetooth & other devices*. Turn on Bluetooth, then select "Add Bluetooth or other device" to pair with Bluetooth devices.

Managing Storage

The laptop has 32GB of internal SSD storage. You can expand this by inserting a Micro SD card (up to 1TB, not included) into the TF card slot. Files can be managed using File Explorer.

Charging the Battery

Connect the power adapter to the DC In port and a power outlet. The battery indicator light will show charging status. A full charge provides approximately 6 hours of usage, depending on usage patterns.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and exterior. For stubborn marks, slightly dampen the cloth with water or a screen cleaner. Avoid harsh chemicals.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Store the laptop in a cool, dry place when not in use for extended periods.
- **Software Updates:** Regularly check for and install Windows updates to ensure optimal performance and security. Go to *Settings > Update & Security > Windows Update*.
- **Storage Management:** Periodically clear unnecessary files and applications to free up storage space and maintain system speed.
- **Protection:** Use the provided laptop bag to protect the device from scratches and minor impacts during transport.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Laptop does not power on.	Low battery or power adapter issue.	Ensure power adapter is securely connected and plugged into a working outlet. Allow battery to charge for at least 30 minutes before attempting to power on again.
Wi-Fi connection issues.	Incorrect password, router issue, or Wi-Fi adapter problem.	Double-check Wi-Fi password. Restart your router. Go to <i>Settings > Network & Internet > Wi-Fi</i> and try turning Wi-Fi off and on.
Slow performance.	Too many applications running, low storage space, or outdated drivers.	Close unnecessary applications. Free up storage space. Check for Windows updates and driver updates.
External device not recognized.	Incorrect port, driver issue, or faulty device.	Try a different USB port. Ensure the device is properly connected. Check Device Manager for driver issues.

SPECIFICATIONS

Feature	Detail
Brand	iSTYLE
Model Name	Laptop X10 (DreamBook 10,1 Zoll)
Operating System	Windows 10 Home
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	Intel Atom X5-Z8350 Quad-core 1.44GHz
RAM	2 GB DDR3
Hard Drive	32 GB SSD
Expandable Storage	Up to 1TB via Micro SD card (TF card slot)
Graphics Coprocessor	(R)HD Graphics (Integrated)
Wireless Type	Bluetooth, 802.11bgn (Wi-Fi)
Ports	Micro HDMI, USB 3.0, USB 2.0, DC3.5, TF card port, Headphone Jack
Item Weight	1.87 pounds (850 grams)
Product Dimensions	11.02 x 7.28 x 0.59 inches (28 x 18.5 x 1.5 cm)
Color	Blue
Battery Capacity	5000mAh (up to 6 hours)

WARRANTY AND SUPPORT

The iSTYLE Mini Laptop X10 is certified by FCC and CE standards, ensuring safety and quality. It comes with **at least 1-year manufacturer warranty** from the date of purchase.

For technical support, warranty claims, or any inquiries regarding your iSTYLE product, please contact our customer service team. We offer 24/7 customer service for your satisfaction.

Please refer to the contact information provided on the product packaging or visit the official iSTYLE website for the most up-to-date support details.

Online Support: [Visit the iSTYLE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question