

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KODAK](#) /

> [Kodak Mini Shot 3 Retro 4PASS 2-in-1 Instant Digital Camera and Photo Printer User Manual](#)

KODAK C300RY

Kodak Mini Shot 3 Retro 4PASS 2-in-1 Instant Digital Camera and Photo Printer User Manual

Brand: KODAK | Model: C300RY

INTRODUCTION

The Kodak Mini Shot 3 Retro is a versatile 2-in-1 device that combines a digital camera with an instant photo printer. Utilizing 4PASS technology, it produces high-quality, durable 3x3 inch prints. This manual provides essential information for setting up, operating, and maintaining your device, ensuring you capture and print your memories with ease.

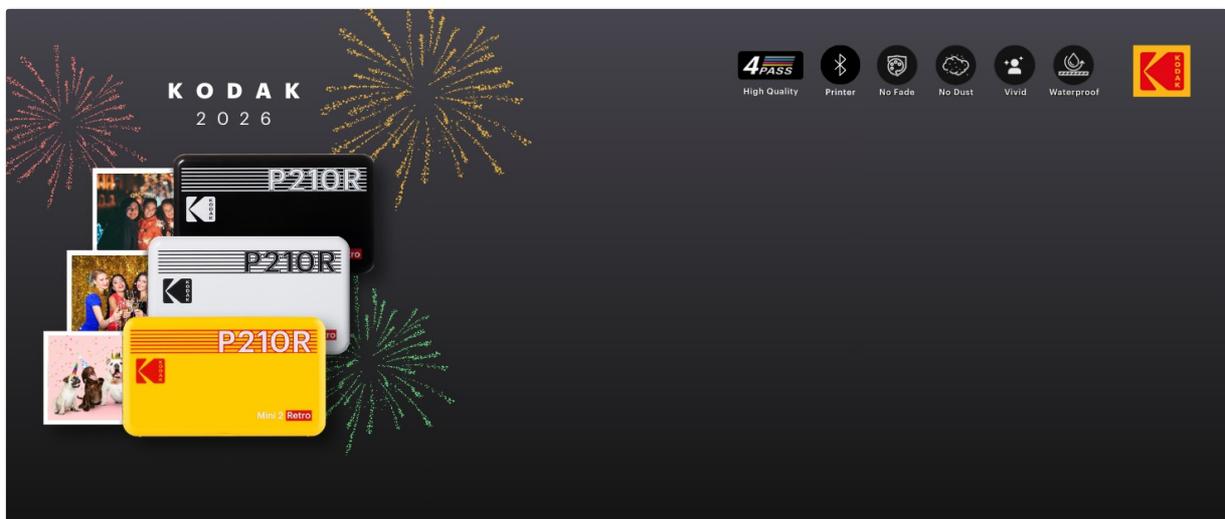


Image: The Kodak Mini Shot 3 Retro camera with several instant prints, showcasing its dual functionality.

SETUP

1. What's in the Box

- Kodak Mini Shot 3 Retro Camera
- Initial 8 Sheets of Photo Paper
- USB C-Type Charging Cable
- User Guide

2. Charging the Device

Before first use, fully charge your Kodak Mini Shot 3 Retro using the provided USB C-Type cable. The device uses 1

Lithium Metal battery.

3. Inserting the Cartridge

The Kodak Mini Shot 3 Retro uses an all-in-one cartridge containing both ink and paper. To insert:

1. Open the bottom cartridge slot on the camera.
2. Align the cartridge correctly and insert it.
3. Push until it clicks securely into place.

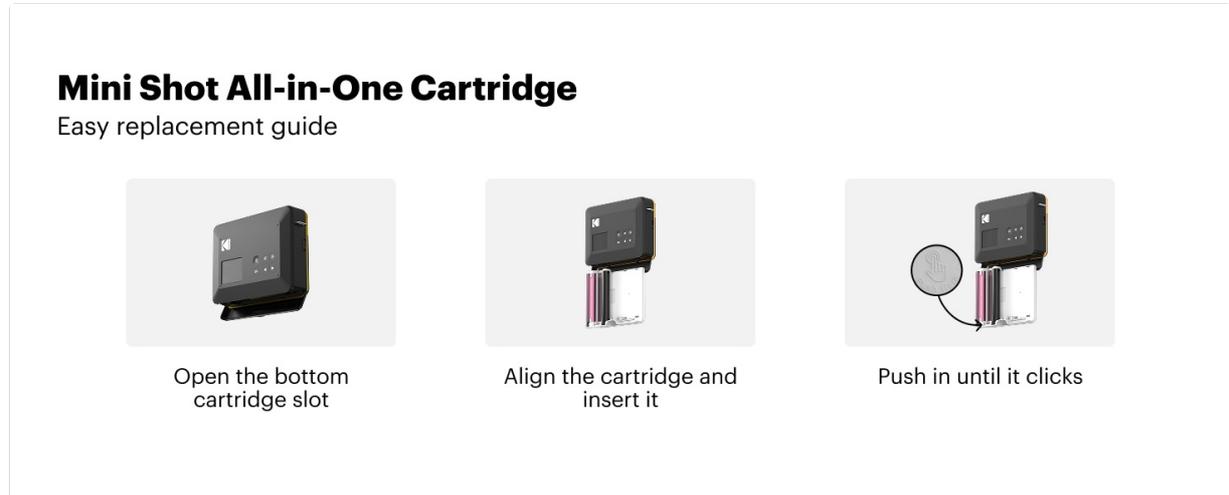


Image: Visual guide for inserting the all-in-one cartridge.

4. App Installation and Bluetooth Connection

Download the KODAK Photo Printer application to your smartphone for enhanced features and printing options. The app is compatible with Apple iPhone, iPad, and Android devices.

- Search for "KODAK Photo Printer" in your device's app store.
- Install the application.
- Enable Bluetooth on your smartphone and the Kodak Mini Shot 3 Retro.
- Pair the devices through the app to connect.


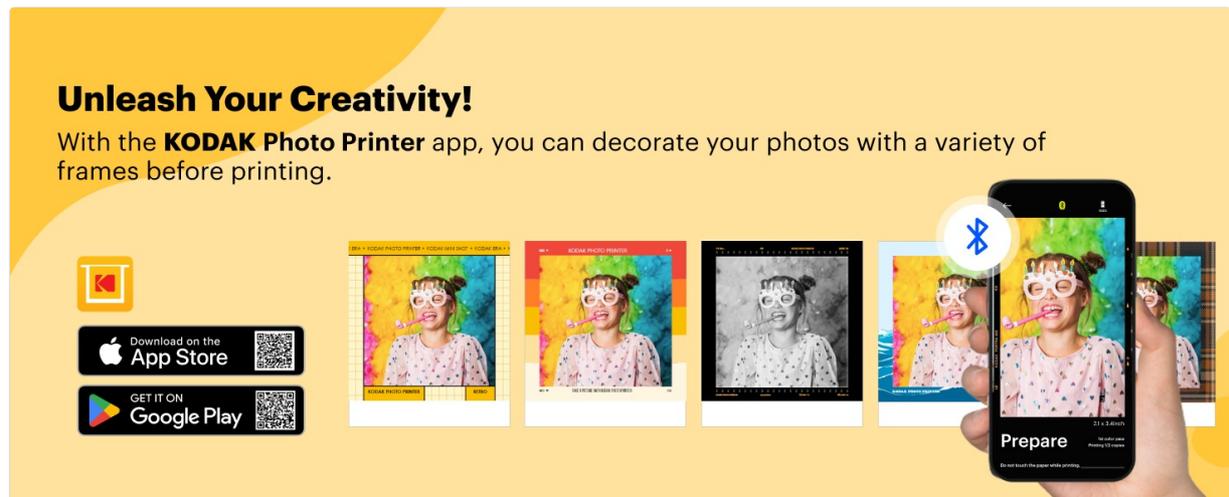


Image: The KODAK Photo Printer app interface on a smartphone, demonstrating its features.

OPERATING THE CAMERA AND PRINTER

1. Taking Photos

The Kodak Mini Shot 3 Retro features a 13MP camera. Use the built-in screen to compose your shot. A selfie mirror is also available on the front for easy self-portraits.

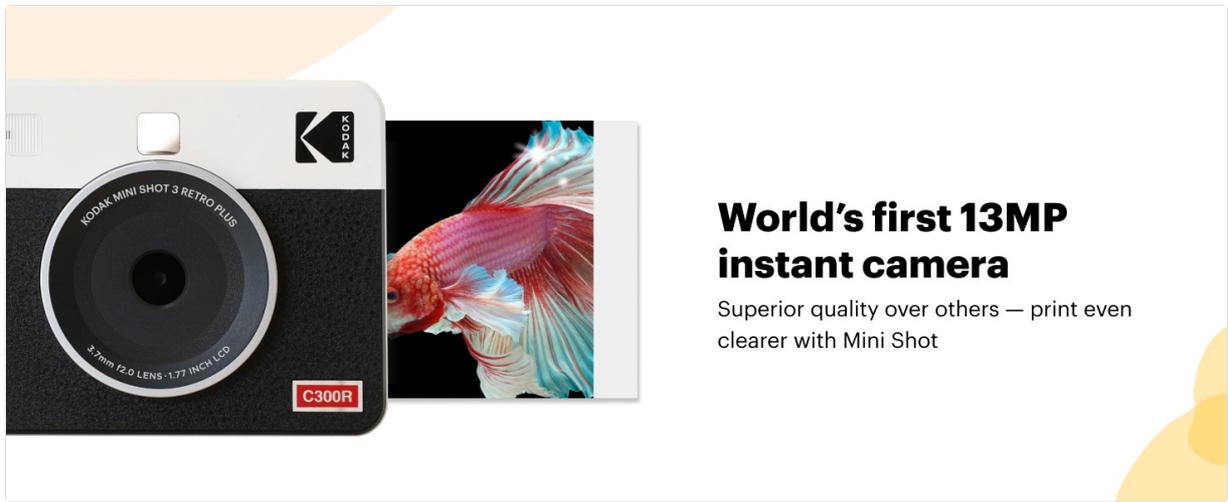

World's first 13MP instant camera

Superior quality over others — print even clearer with Mini Shot

Image: The front of the Kodak Mini Shot 3 Retro, highlighting the lens and selfie mirror.

2. Printing Photos

After taking a photo, you can choose to print it directly from the camera or cancel the print. The 4PASS technology ensures high-quality prints by applying each color layer (yellow, magenta, cyan) and a protective laminate separately.



Image: Explanation of 4PASS dye-sublimation technology.

3. Printing from Your Mobile Device

Connect your smartphone to the camera via Bluetooth using the KODAK Photo Printer app. You can select photos from your phone's gallery and print them directly.

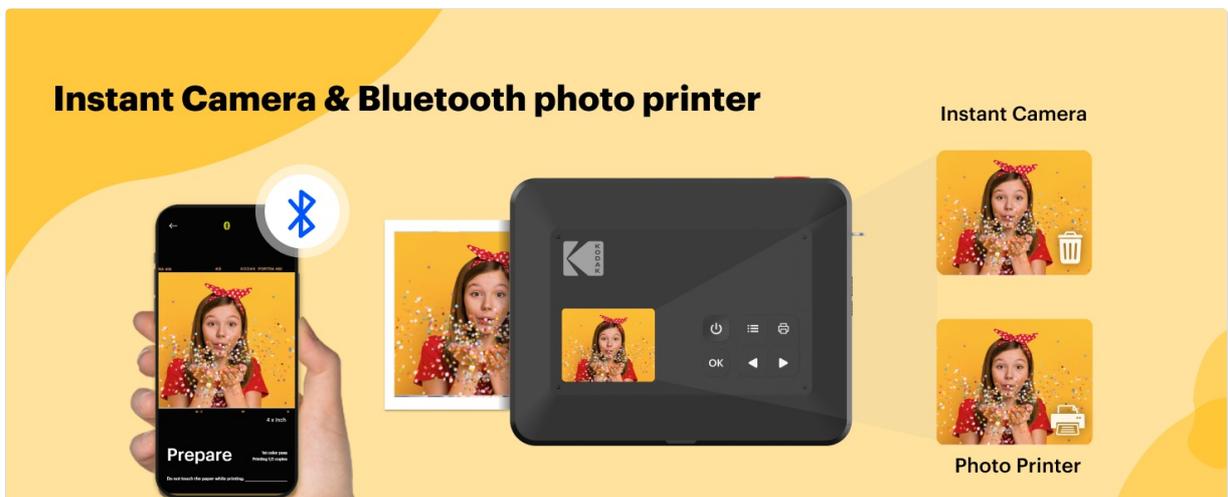


Image: Demonstrating printing from a smartphone to the camera via Bluetooth.

4. Using the KODAK Photo Printer App

The app offers various features to enhance your photos before printing:

- **Filters:** Apply different visual effects.
- **Frames:** Add decorative borders to your photos.
- **Collages:** Combine multiple photos into a single print.
- **Beauty Mode:** Enhance portraits.

You can also choose between bordered and borderless prints. Bordered prints allow space for notes, while borderless prints maximize the image size.

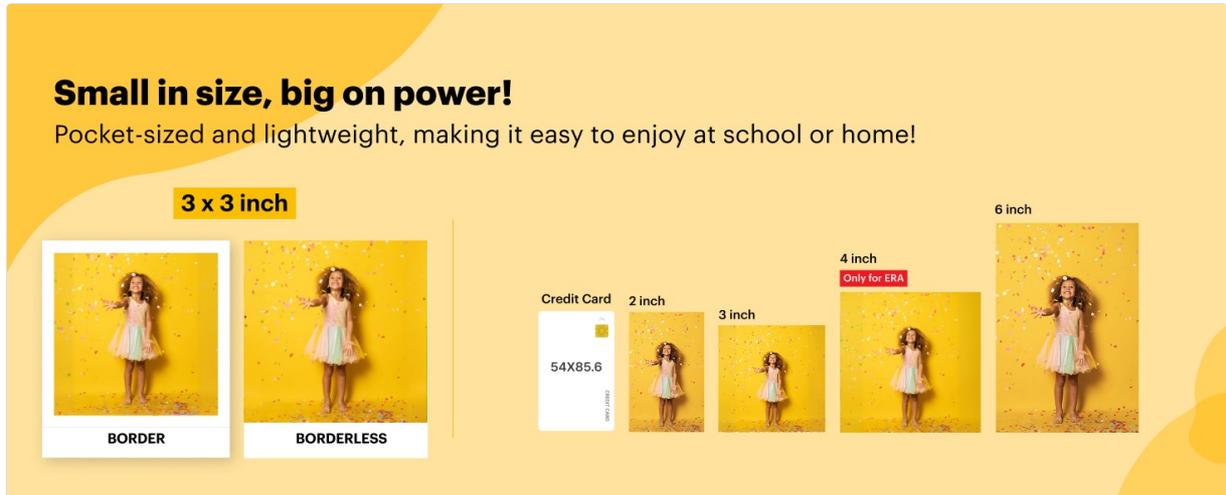


Image: Examples of bordered and borderless 3x3 inch prints.

5. Official Product Videos

How to change the cartridge

Your browser does not support the video tag.

Video: A step-by-step guide on how to replace the ink and paper cartridge in your Kodak Mini Shot 3 Retro.

How to use Kodak Mini Shot 3 in your daily life

Your browser does not support the video tag.

Video: Demonstrates various scenarios and creative ways to integrate the Kodak Mini Shot 3 Retro into daily activities.

How to use the Kodak Photo Printer app

Your browser does not support the video tag.

Video: A tutorial on navigating and utilizing the features of the KODAK Photo Printer application for editing and printing.

MAINTENANCE

1. Cartridge Replacement

Refer to the 'Inserting the Cartridge' section under Setup for detailed instructions on replacing your photo cartridge. Always ensure the device is powered off before replacing the cartridge.

2. Care and Cleaning

- Keep the camera and printer clean by wiping with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, moisture, or direct sunlight.
- Do not touch the printing surface of the photo paper immediately after printing to prevent smudges.

TROUBLESHOOTING

If you encounter issues with your Kodak Mini Shot 3 Retro, consider the following:

- **Poor Print Quality:** Ensure the cartridge is correctly inserted and not expired. Check if the device's battery is

sufficiently charged.

- **Paper Jams:** Carefully open the cartridge slot and remove any jammed paper. Ensure you are using genuine Kodak photo paper.
- **Device Not Turning On:** Verify the battery is charged. Connect the device to a power source and try again.
- **Overheating:** If the device displays an "overheat warning," allow it to cool down for at least 10 minutes before resuming use. This can occur after printing several photos in a short period.
- **Bluetooth Connection Issues:** Ensure Bluetooth is enabled on both devices and they are within range. Restart both the camera and your smartphone.

For further assistance, please refer to the official Kodak support resources.

SPECIFICATIONS

Product Dimensions	5.4 x 6.3 x 2.3 inches
Item Weight	1.03 pounds (467 Grams)
Model Number	C300RY
Battery	1 Lithium Metal battery required
Special Feature	4PASS technology
Film Format Type	Instant
Film Color	Colored
Compatible Devices	Smartphone
Max Shutter Speed	1/60 seconds

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official KODAK website. For technical support or further inquiries, please contact KODAK customer service.

You can also visit the [KODAK Store on Amazon](#) for additional product information and accessories.