

## Samvix Dynamite

# Samvix Dynamite 8GB MP3 Player User Manual

Model: Dynamite

[Instructions](#)   [Maintenance](#)   [Overview](#)   [Setup](#)   [Operating](#)  
[Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. PRODUCT OVERVIEW

The Samvix Dynamite MP3 Player is a versatile digital audio device designed for high-quality music playback and various other functions. It features a durable metal body, touch-sensitive buttons, and an integrated speaker. This model is specifically designed without radio, video, or photo capabilities, making it suitable for specific user preferences.



**Figure 1:** Samvix Dynamite MP3 Player. This image displays the white MP3 player from a slight angle, highlighting its screen which shows a music track playing with an image of a person holding a guitar. The touch-sensitive navigation buttons are visible below the screen.

### Key Features:

- Metal body construction with touch-sensitive buttons and built-in speaker.
- 8GB internal memory, expandable up to 128GB via external memory card.
- Bluetooth 2.1 wireless audio function for connecting to Bluetooth speakers or headphones.

- Supports various audio formats: MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP.
- Integrated sensitive microphone for high-quality voice recording.
- Functions as an e-book reader.
- Includes a stopwatch timer function.
- Battery life up to 30 hours on a single charge.
- Displays date and time.
- Supports 28 languages.

## 2. SETUP GUIDE

---

### 2.1. Package Contents

Before proceeding, ensure all items are present in the package:

- 1 x Samvix Dynamite MP3 Player
- 1 x USB Cable
- 1 x Headphones
- 1 x User Manual

### 2.2. Charging the Device

To charge your MP3 player:

1. Connect the small end of the provided USB cable to the charging port on the MP3 player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging status. A full charge typically takes a few hours.
4. Disconnect the cable once fully charged to preserve battery life.

### 2.3. Transferring Music and Files

You can transfer audio files from your computer to the MP3 player:

1. Connect the MP3 player to your computer using the provided USB cable.
2. The device will appear as a removable disk drive on your computer.
3. Drag and drop your desired music files (MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP) or e-book files into the appropriate folders on the MP3 player.
4. Safely eject the device from your computer before disconnecting the USB cable.

For additional storage, insert a Micro SD card (up to 128GB) into the designated slot. Files can be transferred to the Micro SD card in the same manner.

### 2.4. Initial Settings (Language, Time)

Upon first use or after a factory reset, you may need to set the language and time:

- Navigate to the "Settings" menu using the touch buttons.
- Select "Language" to choose from the 28 supported languages.
- Select "Time Settings" to adjust the date and time.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Basic Navigation

The device features touch-sensitive buttons for navigation:

- **Up/Down/Left/Right Arrows:** Navigate through menus and lists.
- **Center Button:** Confirm selection or play/pause.
- **Back Button:** Return to the previous screen.
- **Menu Button:** Access options within a specific function.

### 3.2. Music Playback

To play music:

1. From the main menu, select "Music".
2. Browse your music library by artist, album, genre, or use the "File Browser" to navigate folders.
3. Select a song to begin playback.
4. Use the center button to play/pause, and arrow buttons for volume or track skipping.

### 3.3. Bluetooth Connection

To connect to Bluetooth headphones or speakers:

1. Ensure your Bluetooth device is in pairing mode.
2. On the MP3 player, navigate to "Bluetooth" in the main menu or settings.
3. Turn Bluetooth on and select "Search for devices".
4. Select your device from the list and confirm pairing. For car systems, the default PIN is usually "0000".

### 3.4. Voice Recording

The built-in microphone allows for high-quality voice recordings:

1. Select "Recorder" from the main menu.
2. Press the center button to start recording.
3. Press the center button again to pause/resume.
4. Press the back button to stop and save the recording.

### 3.5. E-book Reader

To read e-books:

1. Transfer compatible e-book files to the device (e.g., TXT format).
2. Select "E-book" from the main menu.
3. Browse and select the desired e-book to open.
4. Use the navigation buttons to scroll through pages.

### 3.6. Stopwatch Function

To use the stopwatch:

1. Select "Tools" or "Utilities" from the main menu, then "Stopwatch".
2. Use the center button to start/stop the timer.
3. Use the menu button to reset the timer or record laps.

## 4. MAINTENANCE

---

### 4.1. Cleaning

- Use a soft, dry, lint-free cloth to clean the device's screen and body.
- Avoid using abrasive cleaners, alcohol, or solvents, as they may damage the surface.
- Do not expose the device to excessive moisture.

### 4.2. Storage

- Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% to prevent deep discharge.

### 4.3. Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the device to temperatures above 60°C (140°F) as this can damage the battery.
- Use only the provided USB cable for charging.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device for at least 30 minutes.
Cannot transfer files.	Incorrect USB connection; driver issue; device not recognized.	Ensure USB cable is securely connected. Try a different USB port or computer. Restart both devices.
No sound from headphones.	Headphones not properly plugged in; volume too low; damaged headphones.	Ensure headphones are fully inserted. Increase volume. Test with different headphones.
Bluetooth connection issues.	Device not in pairing mode; out of range; interference.	Ensure both devices are in pairing mode and within range. Restart Bluetooth on both devices.
Device freezes or becomes unresponsive.	Software glitch.	Press and hold the power button for 10-15 seconds to force a restart. If issue persists, perform a factory reset (refer to settings menu).

## 6. TECHNICAL SPECIFICATIONS

Brand	Samvix
Model Name	Dynamite
Storage Capacity	8 GB (internal), expandable up to 128 GB via Micro SD
Connectivity Technology	Bluetooth 2.1, USB
Screen Size	1.77 inches
Color	White
Special Feature	Voice Recorder, Built-in Speaker, Touch Buttons
Compatible Devices	Personal Computer, Headphones, Laptop
Supported Media Types	MP3, WMA, OGG, APE, FLAC, WAV, AAC-LC, ACELP (Audio); TXT (E-book)

Product Dimensions	21.59 x 16 x 11.68 cm; 272 grams
--------------------	----------------------------------

## 7. WARRANTY AND SUPPORT

### 7.1. Warranty Information

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.


The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### 7.2. Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Samvix customer support. Refer to the packaging or the official Samvix website for the most current contact information.

When contacting support, please be prepared to provide your product model (Dynamite) and a detailed description of the issue.

### Documents - Samvix – Dynamite

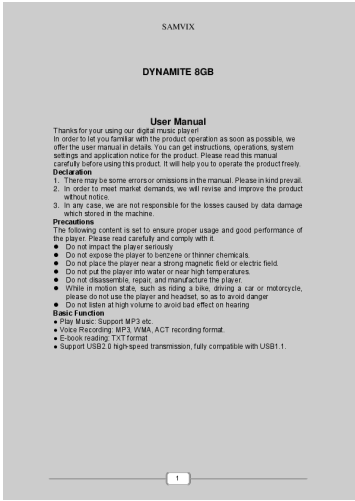

[\[pdf\]](#) User Manual Instructions Declaration of Conformity

user DYNAMITE 8GB User Manual Page 1 SAMVIX Thanks for your using our digital music player! In order to let you familiar with the product operation as soon as 1203248 bhphotovideo lit files |||

**SAMVIX DYNAMITE 8GB User Manual** Thanks for your using our digital music player

In order to let you familiar with the product operation as soon as possible, we offer the user manual in details. You can get instructions, operations, system settings and application notice for the product. Please read ...

lang:en score:39 filesize: 803.22 K page\_count: 4 document date: 2023-09-11