

[Manuals.plus](#) /

› [Remax](#) /

› Remax TWS-3 True Wireless Stereo Earbuds User Manual

Remax TWS-3

Remax TWS-3 True Wireless Stereo Earbuds User Manual

Model: TWS-3

INTRODUCTION

Thank you for choosing the Remax TWS-3 True Wireless Stereo Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before using the product.

PACKAGE CONTENTS

- Remax TWS-3 True Wireless Stereo Earbuds (Left and Right)
- Charging Case (2000 mAh)
- USB Charging Cable
- User Manual



Image: The retail packaging of the Remax TWS-3 earbuds, showing the earbuds and charging case.

PRODUCT OVERVIEW

The Remax TWS-3 earbuds feature Bluetooth 5.0 for stable connectivity, a built-in microphone for calls, and a powerful 2000 mAh charging case that also functions as a power bank for your mobile devices. The earbuds are designed for comfortable and stable wear, offering true wireless stereo sound.



Image: The Remax TWS-3 earbuds resting inside their open charging case, showing the left and right earbuds.



Image: A diagram illustrating the magnetic charging contacts within the earbud case, ensuring secure placement and charging.

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB charging cable to the charging case and a power source. The indicator lights on the case will show the charging status. A full charge for the case takes approximately 2 hours.



Image: The Remax TWS-3 charging case connected via cable to a smartphone, demonstrating its power bank functionality.

2. Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Take both earbuds out of the charging case. They will automatically power on and enter pairing mode (indicated by flashing lights).
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for "TWS-3" in the list of available Bluetooth devices.
5. Select "TWS-3" to connect. Once connected, the earbud indicator lights will stop flashing.
6. If pairing fails, place the earbuds back into the case, close the lid, wait a few seconds, and then repeat the steps.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Take earbuds out of the charging case, or press and hold the touch area for 3 seconds.
- **Power Off:** Place earbuds back into the charging case, or press and hold the touch area for 5 seconds.

Music Playback

- **Play/Pause:** Tap the touch area on either earbud once.
- **Next Track:** Double-tap the touch area on the right earbud.
- **Previous Track:** Double-tap the touch area on the left earbud.

Call Management

- **Answer/End Call:** Tap the touch area on either earbud once.
- **Reject Call:** Press and hold the touch area on either earbud for 2 seconds.

Voice Assistant

- **Activate Voice Assistant:** Triple-tap the touch area on either earbud.

MAINTENANCE

- Clean the earbuds and charging case regularly with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Keep the charging contacts on both the earbuds and the case clean to ensure proper charging.
- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid exposing the product to extreme temperatures, humidity, or direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing/connecting.	Low battery; out of range; pairing mode not active; interference.	Charge earbuds and case. Ensure device Bluetooth is on. Place earbuds back in case, then remove to re-enter pairing mode. Move closer to device.
No sound or low volume.	Volume too low on device; earbuds not properly connected; earbud placement.	Increase volume on your device. Reconnect earbuds. Adjust earbud position in ear.
Microphone quality is poor.	Microphone obstruction; environmental noise.	Ensure microphone is not covered. Try to use in a quieter environment.
Charging issues.	Dirty charging contacts; faulty cable/power source.	Clean charging contacts on earbuds and case. Try a different USB cable or power adapter.

SPECIFICATIONS

Feature	Detail
Bluetooth Version	5.0
Transmission Distance	Up to 10 meters
Frequency Response	20 Hz - 20 kHz

Feature	Detail
Output Sensitivity	100 dB
Microphone Sensitivity	-44 dB
Earbud Battery Capacity	45 mAh (each earbud)
Charging Case Battery Capacity	2000 mAh
Impedance	32 Ohm
Rated Power	3 mW
Operating Time	Approx. 2 hours
Standby Time	Approx. 57 hours
Charging Time (Case)	Approx. 2 hours
Dimensions (Shipping)	20 x 4.8 x 4.4 cm
Weight (Shipping)	274 grams
Color	Black

WARRANTY AND SUPPORT

Remax products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Remax website. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, please contact Remax customer service.

© 2024 Remax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B084N59HLR>

More documents and user manuals: <https://manuals.plus/>