

[Manuals.plus](#) /

› [CosmoLiving by Cosmopolitan](#) /

› CosmoLiving by Cosmopolitan Ella L Desk Instruction Manual

CosmoLiving by Cosmopolitan 4396013COM

CosmoLiving by Cosmopolitan Ella L Desk Instruction Manual

Model: 4396013COM

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning assembly and use. Keep this manual for future reference.

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Tighten all fasteners securely, but do not overtighten. Periodically check and re-tighten fasteners as needed.
- Do not stand or sit on the desk.
- Keep small parts away from children during assembly.

PACKAGE CONTENTS

Verify that all components listed in your product's assembly manual are present. The desk ships in 1 box and contains 9 boards. Refer to the assembly manual for a detailed list of parts and hardware.



Medium Assembly Level

1-2 adults recommended to assemble

Item ships in

1
BOX

3

Steps inside the
assembly manual

9

Boards inside
the box



1 Year Limited Warranty
for Manufacturer Defects



To Clean:
Wipe with a dry cloth
or duster

This image illustrates the medium assembly level, indicating 1-2 adults are recommended for assembly. It also shows that the item ships in 1 box, contains 3 steps inside the assembly manual, and 9 boards inside the box. Additionally, it highlights the 1-year limited warranty and cleaning instructions.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the CosmoLiving by Cosmopolitan Ella L Desk is rated as a medium difficulty level. It is recommended that 2 adults participate in the assembly process. Tools recommended for assembly include a hammer and a screwdriver. All necessary assembly tools are included with the product.

Follow the 3 detailed steps provided in the included assembly manual for proper construction. Ensure each part is correctly oriented and securely fastened before proceeding to the next step.




An image of the fully assembled CosmoLiving Ella L Desk, showcasing its L-shape and white and gold finish in a modern office environment.


OPERATING INSTRUCTIONS

The Ella L Desk is designed for use as a computer desk or general home office workspace. Its L-shaped configuration allows for versatile placement in various room layouts, maximizing corner space.

- **Weight Capacity:** The desk has a maximum weight recommendation of 100 pounds (45 kg). Do not exceed this weight limit to prevent damage or injury.
- **Surface Protection:** While the desk surface is engineered wood, consider using a desk mat to protect against scratches and spills, especially with heavy use.

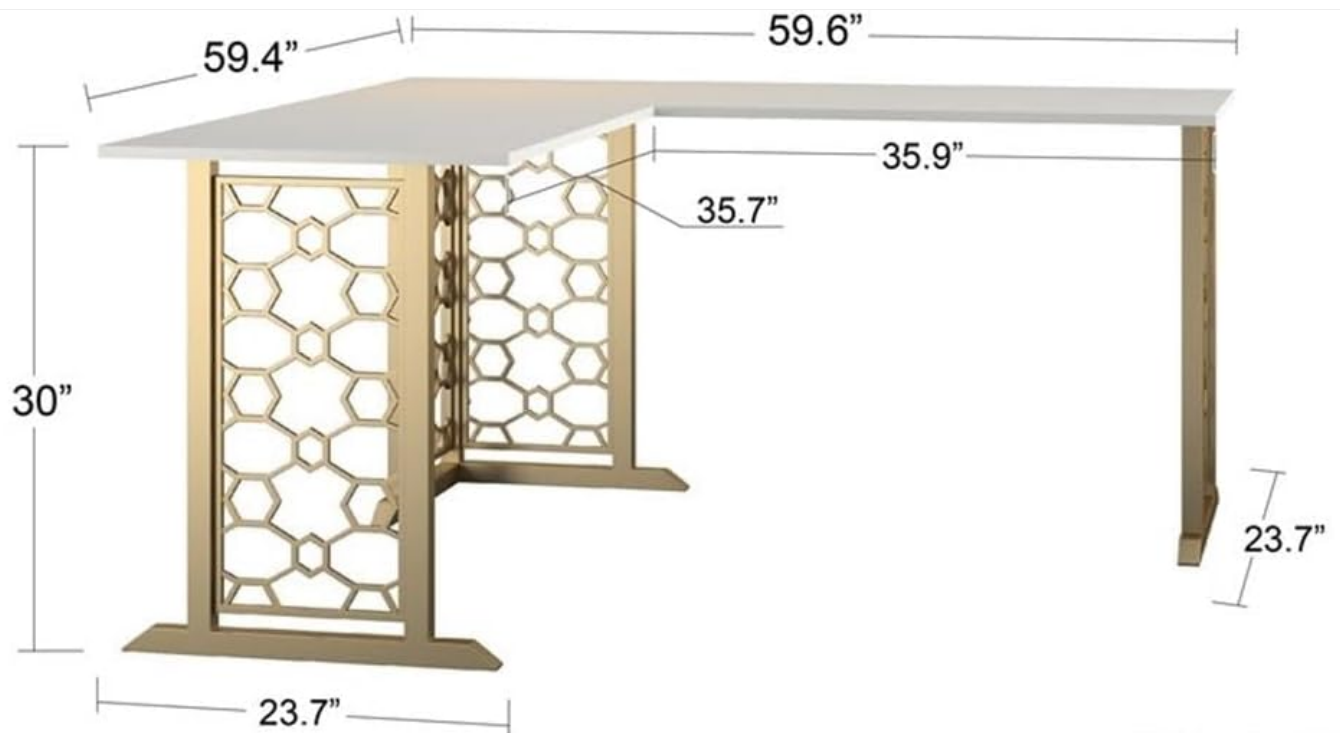

White/Gold

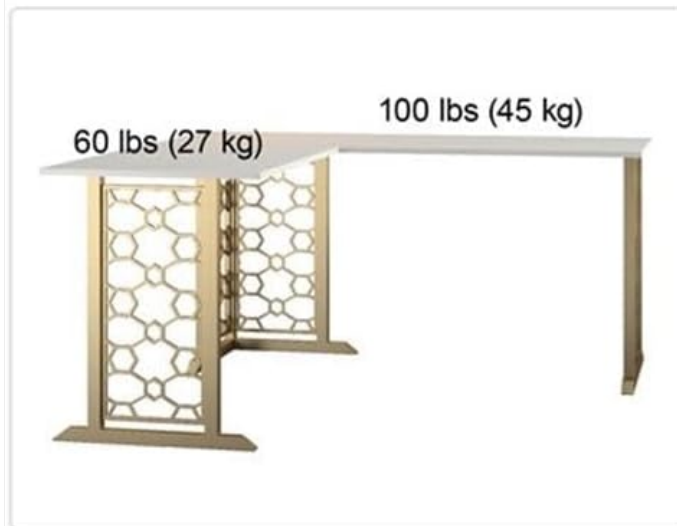

This image provides detailed dimensions of the Ella L Desk, including its overall width, depth, and height. It also illustrates the weight limits for different sections of the desk: 60 lbs (27 kg) on one side and 100 lbs (45 kg) on the other, and shows available finishes.

MAINTENANCE

To maintain the appearance and longevity of your Ella L Desk, follow these care instructions:

- **Cleaning:** Wipe the desk surfaces with a dry cloth or duster. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent staining or damage to the engineered wood surface.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.

TROUBLESHOOTING

If you encounter any issues with your Ella L Desk, consider the following:

- **Wobbling:** Ensure all assembly screws and fasteners are securely tightened. Uneven flooring may also cause wobbling; try adjusting the desk's position or using furniture pads.

- **Scratches:** The engineered wood top can be susceptible to scratches. Use a desk mat or protective covering for high-traffic areas.
- **Odor:** New furniture may emit a slight odor upon unboxing. Ensure the room is well-ventilated for a few days to allow the odor to dissipate.

For persistent issues or concerns not addressed here, please contact customer support.

SPECIFICATIONS

Brand	CosmoLiving by Cosmopolitan
Model Name	Ella
Model Number	4396013COM
Desk Design	L-shaped Computer Desk
Color	White
Product Dimensions (D x W x H)	59.37" x 59.61" x 30"
Item Weight	79.9 Pounds
Top Material Type	Engineered Wood
Base Material	Metal (Alloy Steel)
Maximum Weight Recommendation	100 Pounds
Required Assembly	Yes
Recommended Number of People for Assembly	2
Tools Recommended For Assembly	Hammer, Screw Driver (All included)

WARRANTY INFORMATION

The CosmoLiving by Cosmopolitan Ella L Desk comes with a **1-year limited warranty** for manufacturer defects. Please retain your proof of purchase for any warranty claims.



The official logo for CosmoLiving by Cosmopolitan.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other product-related inquiries, please refer to the contact information provided in your product packaging or visit the official CosmoLiving by Cosmopolitan website for support resources.

Additional Product Views



An alternative view of the Ella L Desk, highlighting its L-shaped design and the decorative gold metal base.



A direct front view of the Ella L Desk, emphasizing the white desktop and the intricate gold base design.



A side profile of the Ella L Desk, showcasing the depth and the structure of the metal legs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question