

Evolveo EASYPHONE FM

EVOLVEO EASYPHONE FM Mobile Phone User Manual

INTRODUCTION

The EVOLVEO EASYPHONE FM is a user-friendly mobile phone designed for straightforward communication. It features large, separated keys, a clear display, and essential functions to ensure ease of use. This manual provides instructions for setting up, operating, and maintaining your device.

1. PACKAGE CONTENTS

Please check the package for the following items:

- EVOLVEO EASYPHONE FM Mobile Phone
- Charging Dock
- AC Adapter
- Li-ion 1000 mAh Battery
- User Manual



Figure 1.1: EVOLVEO EASYPHONE FM placed in its charging dock. The phone features a large display showing time and network information, with prominent green call and red end call buttons, and a numeric keypad below.

2. SETUP

2.1. Battery Installation and Charging

1. Remove the back cover of the phone.
2. Insert the Li-ion 1000 mAh battery, ensuring the contacts align correctly.
3. Replace the back cover.
4. Connect the AC adapter to the charging dock.
5. Place the phone into the charging dock. The charging indicator light will illuminate.
6. Allow the phone to charge fully before first use.

2.2. Inserting SIM Card(s)

The phone supports two SIM cards (Dual SIM) for GSM/GPRS 850/900/1800/1900 MHz networks.

1. Ensure the phone is powered off.
2. Remove the back cover and battery.
3. Locate the SIM card slots.
4. Insert your SIM card(s) into the designated slots, ensuring correct orientation.
5. Reinsert the battery and back cover.

2.3. Inserting a MicroSDHC Card

You can expand the phone's storage for music, photos, and other files by inserting a MicroSDHC card.

1. Ensure the phone is powered off.
2. Remove the back cover and battery.
3. Locate the MicroSDHC card slot.
4. Gently insert the MicroSDHC card until it clicks into place.
5. Reinsert the battery and back cover.

3. OPERATING INSTRUCTIONS

3.1. Power On/Off

- To power on: Press and hold the **Red End Call/Power** button until the screen lights up.
- To power off: Press and hold the **Red End Call/Power** button until the power off options appear, then confirm.





Figure 3.1: Front view of the EVOLVEO EASYPHONE FM, highlighting the large display, call buttons, and numeric keypad for easy dialing.

3.2. Making and Receiving Calls

- **Making a Call:** Dial the number using the numeric keypad and press the **Green Call** button.
- **Speed Dial:** The phone supports quick access to 8 popular contacts. Assign numbers to keys 2-9 for speed dialing. Press and hold the assigned key to dial.
- **Receiving a Call:** Press the **Green Call** button to answer an incoming call.
- **Ending a Call:** Press the **Red End Call/Power** button to end an active call.

3.3. Sending and Receiving SMS Messages

The separated keyboard keys facilitate easy writing of SMS messages.

- Navigate to the Messaging menu.
- Select "Write Message" to compose a new SMS.
- Enter the recipient's number or select from contacts.
- Type your message using the keypad.
- Press "Send" to transmit the message.

3.4. Volume Control

Adjust the call and ringtone volume using the dedicated volume control button located on the left side of the phone.



Figure 3.2: Left side of the phone, showing the volume control buttons and the FM radio activation button.

3.5. SOS Emergency Button

The SOS button, located on the back of the device, allows for quick emergency calls and messages.

1. Before use, configure up to five emergency contact numbers in the phone settings.
2. In an emergency, press and hold the **SOS** button.
3. The phone will automatically dial the predefined emergency numbers sequentially and send an emergency message to these contacts.



Figure 3.3: Rear view of the EVOLVEO EASYPHONE FM, showing the prominent red SOS emergency button and the camera lens.

3.6. FM Radio

The phone includes an FM radio with a dedicated activation button.

- To turn on the FM radio, press the independent FM button on the side of the device.
- The radio can play in the background, allowing you to use other phone functions.
- During an incoming or outgoing call, the radio will automatically mute and resume playback after the call ends.

3.7. Flashlight

A powerful flashlight is integrated into the phone, activated by a dedicated button.

- Press the dedicated flashlight button on the side of the phone to turn the flashlight on or off.



Figure 3.4: Right side of the phone, showing the dedicated flashlight button.

3.8. Other Features

- **Camera:** The phone includes a VGA camera for basic photo capture.
- **Music Player:** Play music files stored on your MicroSDHC card.
- **Digital Recorder (Dictaphone):** Record voice notes.
- **Calendar:** Keep track of important dates and events.
- **Alarm Clock:** Set alarms for reminders.
- **Calculator:** Perform basic calculations.
- **Magnifying Glass:** Utilize the screen as a magnifying glass.

4. MAINTENANCE

4.1. Cleaning the Device

- Use a soft, dry cloth to clean the phone's surface and screen.
- Avoid using liquid cleaners or abrasive materials, as they may damage the device.
- Ensure no moisture enters the charging port or other openings.

4.2. Battery Care

- To prolong battery life, avoid exposing the phone to extreme temperatures.
- Charge the battery regularly, but avoid overcharging or letting it completely drain for extended periods.
- If the phone will not be used for a long time, charge the battery to about 50% before storing it.

5. TROUBLESHOOTING

If you encounter issues with your EVOLVEO EASYPHONE FM, refer to the following common problems

and solutions:

5.1. Phone Does Not Turn On

- Ensure the battery is correctly installed and charged.
- Connect the phone to the charger and wait a few minutes before attempting to power it on again.
- Check if the battery contacts are clean.

5.2. Cannot Make or Receive Calls

- Check if the SIM card(s) are correctly inserted and activated.
- Ensure you have network coverage.
- Verify that the phone is not in airplane mode (if applicable).
- Check your account balance or subscription status with your service provider.

5.3. FM Radio Not Working

- Ensure you are in an area with good FM signal reception.
- Check if the FM radio is properly activated using its dedicated button.

5.4. Display Issues

- If the display is dim, check the brightness settings.
- If the screen is unresponsive, try restarting the phone.

6. SPECIFICATIONS

Brand	Evolveo
Model	EASYPHONE FM
Display Size	1.8 inches
Display Resolution	320 x 240 px
Cellular Technology	2G (GSM/GPRS 850/900/1800/1900 MHz)
SIM Support	Dual SIM
Connectivity	Bluetooth, 3.5 mm Jack
Battery	Li-ion 1000 mAh
Dimensions	130 x 61 x 16.5 mm
Weight	105 g (with battery)
Camera	VGA
Storage Expansion	MicroSDHC card slot

Note: Specifications are subject to change without prior notice.

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or visit the official Evolveo website. Keep your proof of purchase for warranty claims.