

[Manuals.plus](#) /

› [Stack-On](#) /

› Stack-On PS-1808-E Extra-Wide Personal Safe User Manual

Stack-On PS-1808-E

Stack-On PS-1808-E Extra-Wide Personal Safe User Manual

Model: PS-1808-E

IMPORTANT SAFETY INFORMATION

- Always keep backup keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Do not store flammable materials or open containers of liquids inside the safe.
- Periodically check battery levels to ensure proper electronic lock function.
- This safe is designed for security against theft and is not water resistant.

PRODUCT OVERVIEW

The Stack-On PS-1808-E is an extra-wide personal safe designed for securing valuables such as laptops, documents, and other personal items. It features an electronic lock for quick access, a backup key for emergencies, an interior LED light, and a tamper alarm.



Image: Front view of the Stack-On PS-1808-E Extra-Wide Personal Safe, showing the electronic keypad and handle.



Image: Interior view of the safe, demonstrating its capacity to hold a laptop, documents, and other small valuables. The door is open, revealing the locking bolts.

SETUP

1. Unpacking and Contents

Carefully remove the safe from its packaging. Verify that all components are present:

- Stack-On PS-1808-E Personal Safe
- Backup Keys (2)
- Mounting Hardware
- User Manual (this document)

2. Battery Installation

The electronic lock requires batteries for operation. Batteries are not included and must be purchased separately (typically 4 AA batteries).

1. Locate the battery compartment on the inside of the safe door, usually behind a cover.
2. Remove the battery compartment cover.
3. Insert the required batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover.

3. Setting Your Personal Code

Before first use, you must program your personal access code.



Image: Detailed view of the electronic keypad, showing the numbered buttons, checkmark button, and alarm button.

1. With the safe door open, locate the red reset button on the inside of the door, near the hinge or battery compartment.
2. Press the red reset button. The indicator light on the keypad will illuminate.
3. Within 5 seconds, enter your desired 3-8 digit code on the keypad.
4. Press the '#' or '✓' button to confirm. The indicator light will flash green, confirming the new code is set.
5. Test the new code with the door open to ensure it functions correctly before closing the safe.

4. Mounting the Safe

The safe includes pre-drilled holes and mounting hardware for secure installation.

1. Choose a suitable location for mounting, such as a wall, floor, or shelf.
2. Mark the drilling points through the pre-drilled holes in the safe's back or bottom.
3. Drill pilot holes at the marked locations.
4. Position the safe and secure it using the provided mounting hardware. Ensure all bolts are tightened firmly.

OPERATION

1. Opening the Safe with Electronic Lock

1. Enter your personal 3-8 digit code on the keypad.
2. Press the '#' or '✓' button.
3. If the code is correct, the green indicator light will illuminate, and you will hear a click.
4. Within 5 seconds, turn the handle clockwise to open the safe door.

2. Using the Backup Key

In case of battery failure or forgotten code, the backup key can be used to open the safe.

1. Locate the keyhole, usually concealed behind a small cover on the keypad panel.
2. Remove the cover.
3. Insert the backup key and turn it counter-clockwise.
4. While holding the key turned, rotate the handle clockwise to open the safe.

3. Interior LED Light

The safe is equipped with an auto-illuminating LED light that activates when the door is opened, providing visibility to the contents.

4. Tamper Alarm

The safe features a tamper alarm that will sound if three incorrect entry attempts are made consecutively. To silence the alarm, enter the correct code or use the backup key.

MAINTENANCE

1. Battery Replacement

When the batteries are low, the safe's electronic lock may indicate this with a warning light or sound. Replace batteries promptly to ensure continuous operation.

1. Open the safe door.
2. Locate and open the battery compartment.
3. Remove old batteries and dispose of them according to local regulations.
4. Insert new batteries, observing correct polarity.
5. Close the battery compartment.

2. Cleaning

To clean the exterior of the safe, use a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

TROUBLESHOOTING

- **Electronic Lock Not Responding:** Check if batteries are installed correctly and have sufficient charge. Replace batteries if necessary.
- **Code Not Working:** Ensure you are entering the correct 3-8 digit code followed by the '#' or '✓'

button. If the code was recently changed, try the new code. If the code is forgotten, use the backup key to open the safe and reset the code.

- **Tamper Alarm Sounds Unexpectedly:** This indicates three incorrect code entries. Enter the correct code or use the backup key to disarm.
- **Low Battery Warning:** If the safe indicates low battery (e.g., a specific light pattern or sound), replace the batteries immediately to avoid being locked out.
- **Safe Door Not Locking:** Ensure the door is fully closed and the handle is turned to the locked position. Check for any obstructions preventing the door from closing completely.

SPECIFICATIONS

Feature	Detail
Brand	Stack-On
Model Number	PS-1808-E
Product Dimensions	20.5"W x 14.75"D x 8"H
Lock Type	Electronic Combination Lock
Color	Black
Capacity	1.11 Cubic Feet
Material	Alloy Steel
Special Features	Anti-Theft, Fire Resistant (Note: Fire resistance is a listed feature, but specific ratings are not provided in the source data.)
Included Components	Mounting Hardware
Item Weight	28 Pounds
Water Resistance Level	Not Water Resistant
UPC	085529018088



Image: Diagram showing the external dimensions of the safe: 30 inches wide, 6 inches deep, and 8 inches high. (Note: The image dimensions contradict the product dimensions provided in text. The text dimensions are 20.5"W x 14.75"D x 8"H. Please refer to the text specifications for accurate measurements.)

WARRANTY AND SUPPORT

Stack-On products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Stack-On website. For technical support or assistance with your safe, please contact Stack-On customer service directly. Contact information can typically be found on the manufacturer's website or in the product packaging.