



[Manuals.plus](#) /

› [Hasbro](#) /

› Monopoly Banking Cash-Back Board Game Instruction Manual

**Hasbro E8978100**

# Monopoly Banking Cash-Back Board Game Instruction Manual

Model: E8978100

## PRODUCT OVERVIEW

---

Monopoly Banking Cash-Back is a modern version of the classic Monopoly game, designed for a cashless experience with an electronic banker and unique bonus payments. Players use bank cards to manage their finances, collect bonuses, and engage in strategic property trading. The game introduces new elements like airports and property swaps, enhancing tactical play.



Image: The complete Monopoly Banking Cash-Back game setup, showcasing the board, electronic banking unit, player cards, property deeds, and game pieces.

## SAFETY INFORMATION

This product is suitable for ages 8 and over. It is designed for 2 to 4 players. Three 1.5V "AAA" alkaline batteries are required for the electronic banker (batteries are not included).

## WHAT'S IN THE BOX

- Game board
- Electronic banker unit
- 4 playing figures
- 4 bank cards
- 16 ownership cards
- 20 event cards
- 4 overview cards
- 1 dice
- Game instructions



Image: A detailed view of the game components, including the electronic banker, various cards, and the central game board.

## SETUP

1. **Unpack Components:** Carefully remove all game components from the box.
2. **Place Game Board:** Unfold and place the game board on a flat playing surface.
3. **Install Batteries:** Open the battery compartment on the electronic banker unit and insert three 1.5V "AAA" alkaline batteries, ensuring correct polarity. Close the compartment.
4. **Distribute Bank Cards:** Each player selects a playing figure and receives one bank card.
5. **Place Cards:** Shuffle the Ownership cards and place them face down on their designated spaces on the board. Do the same for the Event cards.
6. **Initial Funds:** The electronic banker will manage all funds. Players do not receive physical money.
7. **Choose Starting Player:** Determine the starting player by rolling the dice or by mutual agreement.

## OPERATING THE GAME

### Basic Gameplay

- Players take turns rolling the dice and moving their playing figure clockwise around the board.
- Follow the instructions on the space where your figure lands.
- All transactions (buying properties, paying rent, collecting bonuses) are handled by the electronic banker using the bank cards.

### Electronic Banker Usage

1. **Activating:** Press any button to turn on the electronic banker.
2. **Swiping Cards:** To make a transaction, swipe the relevant player's bank card through the card reader slot.
3. **Entering Amounts:** Use the keypad to enter monetary values as prompted by the game.
4. **Confirming Transactions:** Press the appropriate button (e.g., "OK" or "Enter") to confirm the transaction.
5. **Checking Balance:** Swipe your card and select the balance inquiry option to view your current funds.

### Key Game Mechanics

- **Buying Properties:** When landing on an unowned property, you may purchase it. Swipe your card and the property's cost will be deducted.
- **Paying Rent:** If you land on a property owned by another player, swipe your card to pay the rent to the owner. The electronic banker automatically transfers the funds.
- **Cash-Back Bonuses:** Certain spaces or Event cards may trigger Cash-Back bonuses. Follow the instructions on the banker to receive these funds.
- **Airports:** Instead of train stations, players can purchase airports. Landing on an airport allows you to fly to any of your owned properties.
- **Swap Spaces:** Landing on a swap space allows you to immediately exchange one of your properties for one of another player's properties.
- **Event Cards:** Draw an Event card when instructed and follow its instructions. These can include bonuses, penalties, or special actions.

## MAINTENANCE

---

- **Cleaning:** Wipe the game board and plastic components with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Remove batteries from the electronic banker if the game will not be used for an extended period to prevent leakage.
- **Storage:** Store all game components neatly in the original box to prevent loss or damage. Keep away from extreme temperatures and direct sunlight.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Electronic banker not turning on.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace with fresh AAA alkaline batteries.
Bank card not recognized.	Card not swiped correctly or card reader is dirty.	Ensure the card is swiped smoothly and completely through the slot. Gently clean the card reader slot with a dry, soft cloth.
Incorrect amount displayed after transaction.	Incorrect amount entered on keypad.	Double-check the amount before confirming. If an error occurs, manually adjust the balance using the banker's functions if available, or restart the game.

## SPECIFICATIONS

---

**Model Number:** E8978100

**Product Dimensions:** 15.75 x 10.5 x 0.1 inches

**Item Weight:** 1.94 pounds

**Manufacturer:** Hasbro

**Recommended Age:** 8 years and up

**Batteries Required:** 3 x 1.5V "AAA" alkaline batteries (not included)

**Release Date:** January 1, 2020

**Language (Game Version):** German (*Note: This specific product version is noted as German language. Please verify language on packaging if English is desired.*)

## WARRANTY AND SUPPORT

---

For information regarding product warranty, returns, or technical support, please contact Hasbro customer service directly. You can typically find contact details on the product packaging or on the official Hasbro website.

**Hasbro Official Website:** [www.hasbro.com](http://www.hasbro.com)

Please retain your proof of purchase for any warranty claims.