

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [THOMAS & FRIENDS](#) /

› [Thomas & Friends Storytime Thomas Toddler Toy Train Instruction Manual \(Model GVR68\)](#)

## THOMAS & FRIENDS GVR68

# Thomas & Friends Storytime Thomas Toddler Toy Train Instruction Manual

Model: GVR68

Brand: THOMAS & FRIENDS

## INTRODUCTION

The Thomas & Friends Storytime Thomas is an interactive push-along toy train designed for toddlers aged 2 years and older. This toy offers three engaging play modes: Music Time, Game Time, and Story Time, featuring over 250 story combinations. It includes lights, music, character phrases, and interactive elements to enhance playtime.



Image: A young child playing with the blue Thomas & Friends Storytime Thomas train on a wooden floor.

## SAFETY INFORMATION

Please read all instructions before use. Adult supervision is recommended during play. Keep small parts away from children under 3 years to prevent choking hazards. Do not immerse the toy in water.

## WHAT'S IN THE Box

- 1 x Thomas & Friends Storytime Thomas push-along train
- 3 x AA batteries (included)



Image: The Thomas & Friends Storytime Thomas train shown in its retail packaging, highlighting its features.

## SETUP

### Battery Installation

1. Locate the battery compartment on the underside of the train.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-). The toy comes with batteries included, but they may need replacement over time.
4. Replace the cover and tighten the screw.

### Power On/Off and Volume Control

- The On/Off/Volume switch is located on the front underside of Thomas, near his face.
- Slide the switch to the desired volume setting (low or high) to turn the toy on.

- Slide the switch to the "Off" position to conserve battery life when not in use.

## OPERATING INSTRUCTIONS

Storytime Thomas features three interactive play modes: Music Time, Game Time, and Story Time. His eyes move, cheeks light up, and a working headlight adds to the fun.



## Working head lamp and light-up face

Image: A detailed view of Thomas's face, highlighting his working headlamp and light-up cheeks.

### Play Modes

- **Music Time:** Press the music note button (rightmost button on the front). Thomas will sing songs as you push him along. If you stop pushing, he will hum.
- **Game Time:** Press the light/speaker button (leftmost button on the front). Thomas will prompt you to play games like "Red Light, Green Light." Push him when he says "Go" and stop when he says "Stop." The lights on his roof will indicate the signal.
- **Story Time:** Press the book button (middle button on the front). Thomas will tell interactive stories with over 250 combinations. He will prompt you to press the red or green buttons on his roof to make choices that influence the story's progression.



## 3 fun play modes with 250+ story combinations

Image: The front of the Thomas train, clearly showing the three interactive buttons for different play modes.

### Interactive Features

- **Push-Along Action:** Push Thomas along a flat surface to activate sounds, phrases, and songs depending on the selected mode. His wheel coupling rods move like a real train.
- **Motion Sensor:** If Thomas is picked up or tipped over, he will respond with phrases like "Whoa, put me on my wheels so we can play!"
- **Handle:** The steam cloud on top of Thomas doubles as a handle for easy carrying.



## Light-up buttons for interactive game play

Image: A child's hand pressing one of the light-up buttons on the top of the Thomas train, indicating interactive gameplay.

### MAINTENANCE

#### Cleaning

Wipe the toy with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not submerge the toy in water.

#### Battery Care

- Remove batteries if the toy is not going to be used for an extended period.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries responsibly.

#### Storage

Store the toy in a cool, dry place away from direct sunlight.

### TROUBLESHOOTING

- **No Sound/Lights:** Ensure the power switch is in the "On" position and batteries are correctly installed and not

depleted. Replace batteries if necessary.

- **Intermittent Function:** Check battery connections. Ensure the toy is on a flat surface for optimal push-along interaction.
- **Toy Not Responding:** Turn the toy off and then on again to reset. If issues persist, replace batteries.

## SPECIFICATIONS

<b>Product Dimensions:</b>	8.36 x 4.75 x 8.57 inches
<b>Item Weight:</b>	2.77 pounds
<b>Item Model Number:</b>	GVR68
<b>Manufacturer Recommended Age:</b>	24 months and up
<b>Batteries:</b>	3 AA batteries required (included)
<b>Manufacturer:</b>	Fisher-Price

## OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: A demonstration of the Fisher-Price Thomas & Friends Storytime Thomas toy, showcasing its interactive features and play modes.

## WARRANTY AND SUPPORT

For warranty information or product support, please contact Fisher-Price customer service directly. Refer to the product packaging for contact details or visit the official Fisher-Price website.

© 2026 THOMAS & FRIENDS. All rights reserved.